


#48065

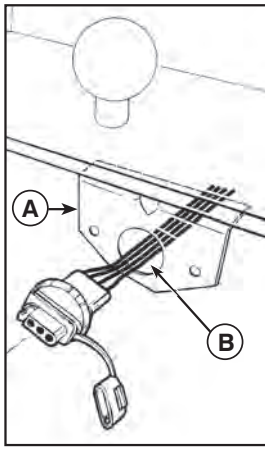

A = Bracket (#48605) sold separately

B = Hole diameter (1.25")

A = Soporte (#48605) se vende por separado

B = Diámetro de cavidad (3,175 cm)

1. Choose an installation location at the rear of the vehicle or inside trunk. Avoid exhaust system, shock absorbers and drive train.
2. Attach the "car side" color wires on the female half to the SAME FUNCTIONS on the tow vehicle.
3. Plug into trailer and check the lighting system for proper operation. Step on the brake to check brake lights, turn on headlamps to check tail / parking lights and operate directional signals to check right / left turn.

LOCATE WIRES BY FUNCTION ONLY

White WireGround

Yellow WireLeft turn

Green Wire.....Right turn

Brown WireTaillight

-
1. Escoja un lugar de instalación en la parte trasera del vehículo o dentro del la cajuela donde el convertidor estará protegido. Evite el sistema de escape, amortiguador y tren de transmisión.
 2. Conecte los cables de color del "extremo de vehículo" en la mitad hembra a los cables de MISMA FUNCIÓN en el vehículo de remolque.
 3. Conecte en al remolque y revise el sistema de luces para la operación correcta. Ponga el freno para revisar las luces de frenos, encienda las luces para revisar las luces traseras/ estacionamiento y opere las señales de dirección para revisar direccional derecha/direccional izquierda.

LOCALICE LOS CABLES POR FUNCIÓN SOLAMENTE

Cable
blanco..... Tierra

Cable
amarillo..... Direccional
izquierda

Cable verde... Direccional
derecha

Cable café Traseras