


# #48305

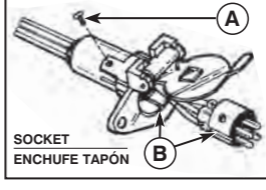

1. Loosen the set (A) screw on the vehicle end socket and remove the socket from housing. Route wiring provided through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway (B) with housing key and insert socket into housing. Tighten set screw

## LOCATE WIRES BY FUNCTION ONLY

White Wire ..... Ground

Yellow Wire ..... Left turn

Green Wire ..... Right turn

Brown Wire ..... Taillight

- 
1. Afloje el tornillo (A) en el vehículo enchufe y retire el enchufe de la caja. Deslice los cables a través de la caja. Pele 6 mm de los extremos de los cables y asegúrelos a las terminales. Alinee el enchufe con la llave (B) de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.

## LOCALICE LOS CABLES POR FUNCIÓN SOLAMENTE

Cable blanco .... Tierra

Cable amarillo ..... Direccional izquierda

Cable verde ..... Direccional derecha

Cable café ..... Luces traseras