


#48365

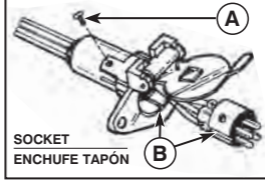

1. Loosen the set (A) screw on the vehicle end socket and remove the socket from housing. Route wiring provided through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway (B) with housing key and insert socket into housing. Tighten set screw.

LOCATE WIRES BY FUNCTION ONLY

White Wire Ground

Yellow Wire Left turn

Green Wire Right turn

Brown Wire Taillight

-
1. Afloje el tornillo (A) en el vehículo enchufe y retire el enchufe de la caja. Deslice los cables a través de la caja. Pele 6 mm de los extremos de los cables y asegúrelos a las terminales. Alinee el enchufe con la llave (B) de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.

LOCALICE LOS CABLES POR FUNCIÓN SOLAMENTE

Cable blanco Tierra

Cable amarillo Direccional izquierda

Cable verde Direccional derecha

Cable café Luces traseras