


#48385

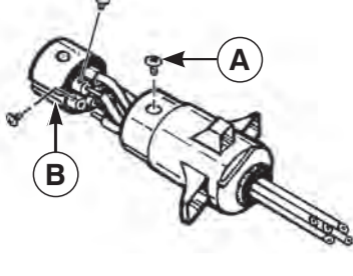

1. Loosen set screw (A) on the trailer end plug and remove housing. Route wires through housing. Strip 1/4" from wire ends and tightly secure them to the plug terminals. Align plug keyway (B) with housing key and insert plug into housing. Tighten set screws.
2. Attach wires to the corresponding trailer function wires.

NOTE: It is important to attach wires to plug in the same positions as found on the car end socket.

-
1. Afloje el tornillo sin tuerca (A) del enchufe del extremo del remolque y retire la caja. Deslice los cables a través de la caja. Desforre 6,3 mm de los extremos de los cables y asegúrelos apretadamente a los enchufes de los terminales. Alinee el enchufe de chavetero (B) con la llave de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.
 2. Conecte los cables a las funciones correspondientes en el remolque.

NOTA: Es importante conectar los cables al enchufe en las mismas posiciones como se encuentran en el enchufe hembra del extremo del vehículo.