

1. Install mounting bracket (A) with screws provided.
2. Remove rubber boot from female socket (B). Strip wires 1/4" and tightly secure them to socket terminals. Replace rubber boot on female socket.
3. Strip the wire ends 1/4" and using the splice connectors attach them to the corresponding function wires.
4. Mount the completed socket assembly to the bracket.
5. Loosen set screw (C) on the trailer end plug and remove housing. Route trailer wiring through plug housing. Strip wires 1/4" and tightly secure them to plug terminals. Reassemble plug / housing and tighten set screw. Leave 18" of slack between tow vehicle and trailer to allow trailer to turn. Cut off excess wires.
6. Plug trailer into vehicle and test all functions.

White wire..... Ground


Brown wire Taillight

Yellow wire..... Left turn

Green wire Right turn

Blue wire..... Electric brake

Red wire..... Auxiliary

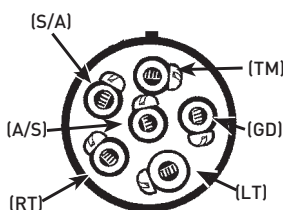

WIRE IDENTIFICATION /
IDENTIFICACIÓN DE LOS CABLES

(GD) = Ground / Tierra

(LT) = Left Turn / Direccional
Izquierda

(TM) = Taillight / Luces Traseras

(A) = Auxiliary / Auxiliar

(RT) = Right Turn / Direccional
Derecha

(S) = Electric Brake / Eléctrico del
Freno

1. Instale el soporte de montaje (A) con los tornillos que se incluyen.
2. Retire la pieza de goma del enchufe hembra (B). Pele 6 mm de los cables y conéctelos a las terminales del enchufe hembra. Vuelva a colocar la pieza de goma en el enchufe hembra.
3. Pele 6 mm de los extremos de los cables y usando los conectores de empalme, conéctelos a los cables de las funciones correspondientes.
4. Monte ensamblaje del enchufe hembra completo al soporte.
5. Afloje el tornillo sin tuerca (C) en el enchufe del extremo del remolque y retire la caja. Deslice el cableado del remolque a través de la caja del enchufe. Pele 6 mm de los extremos de los cables y asegúrelos a los terminales del enchufe. Vuelva a ensamblar el enchufe / caja y apriete el tornillo sin tuerca. Deje 46 cm de cable suelto entre el vehículo de remolque y el remolque para permitir que el remolque pueda virar. Corte el exceso de los cables.
6. Enchufe el remolque al vehículo y pruebe todas las funciones.

Cable blanco Tierra

Cable café Luz trasera

Cable amarillo Luz direccional izquierda

Cable verde..... Luz direccional derecha

Cable azul Freno eléctrico

Cable rojo..... Auxiliar