

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR NISSAN PATHFINDER AND NISSAN XTERRA

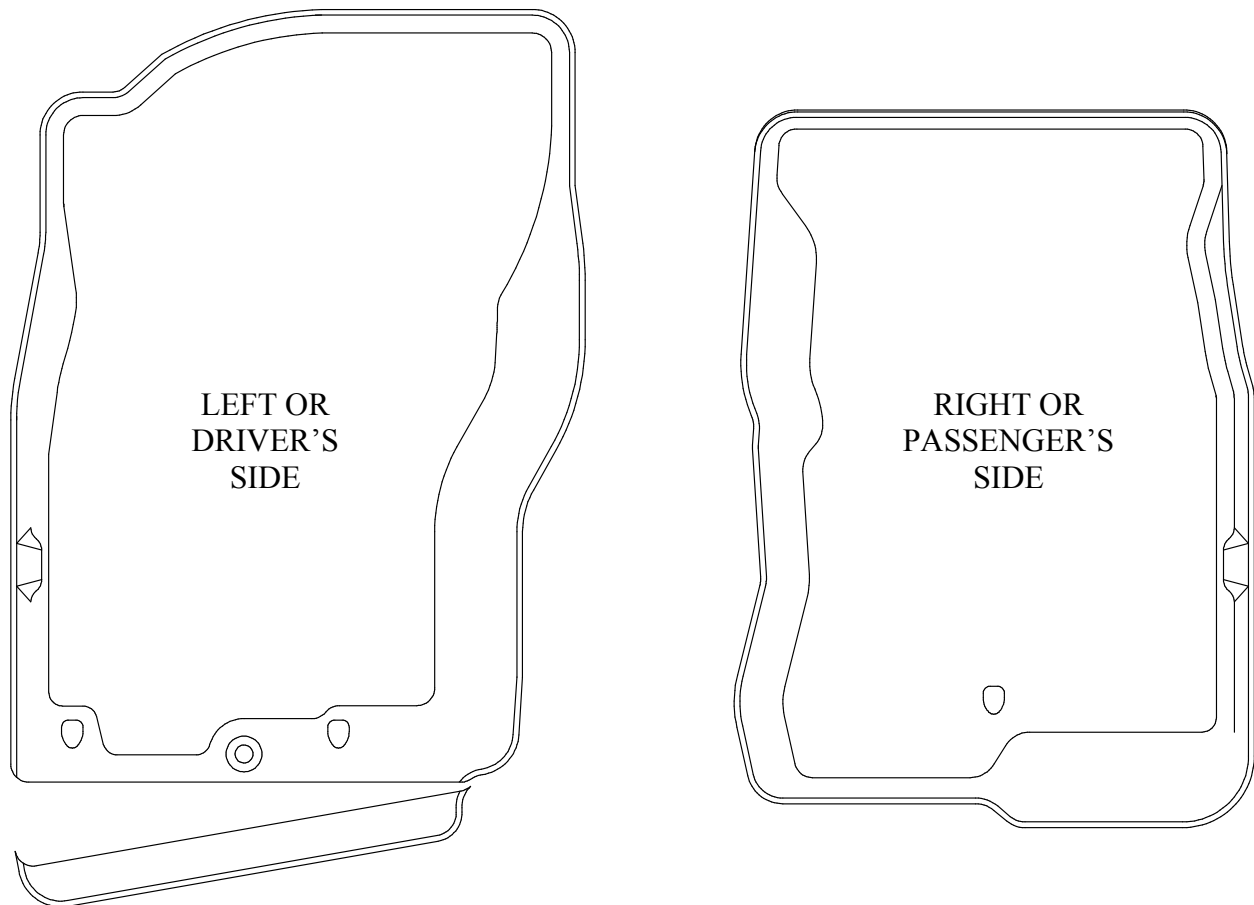

IF YOUR VEHICLE HAS THE OPTIONAL FACTORY SUBWOOFER MOUNTED UNDER THE FRONT DRIVER'S SIDE SEAT, YOUR LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS OPTION. TO TRIM, USE A UTILITY KNIFE OR HEAVY SHEARS REMOVE THE REAR PORTION OF THE DRIVER'S SIDE LINER AS SHOWN IN THE DIAGRAM. THERE IS A MOLDED IN TRIM STEP IN THE PART TO AID IN TRIMMING.