



# X-ACT CONTOUR


## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN:52401

Thank you for selecting an X-act Contour™ 2<sup>nd</sup> Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

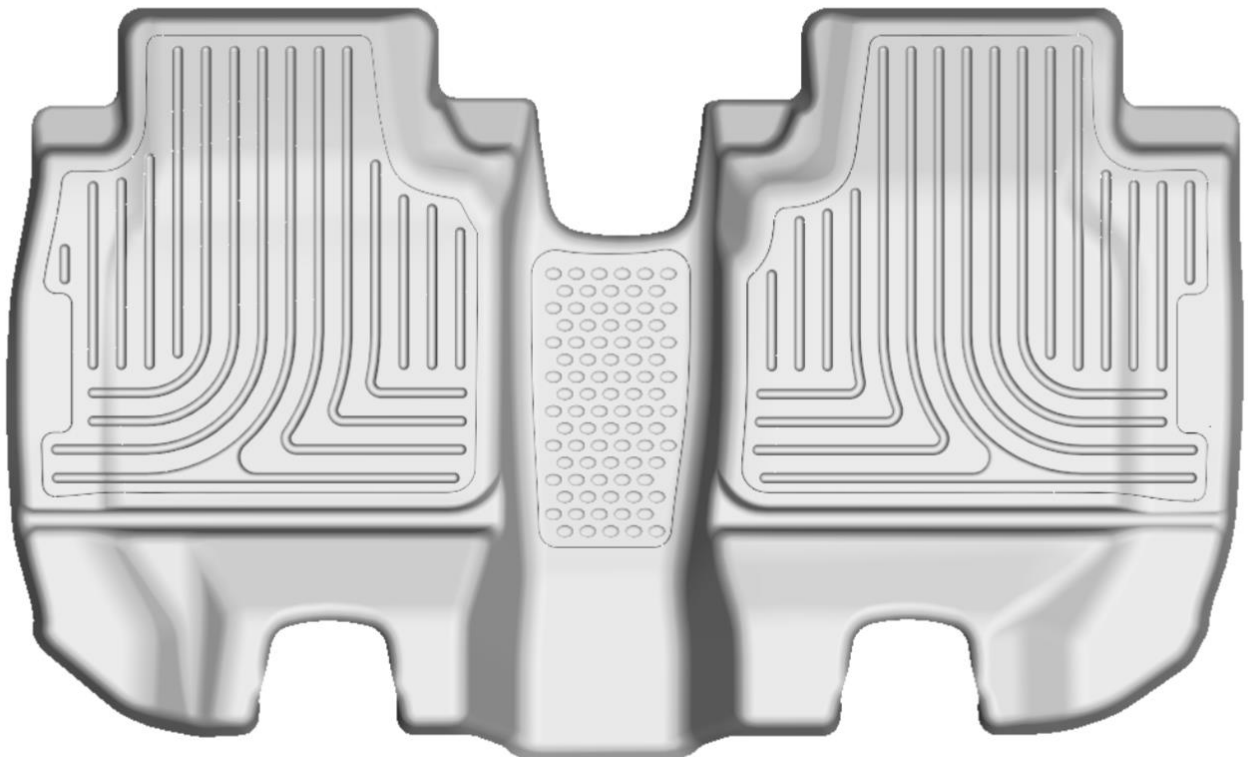

TO EASE INSTALLATION OF YOUR SECOND SEAT LINER, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITIONS AND FOLD UP THE REAR SEAT SEAT BOTTOM. ONCE YOUR LINER IS INSTALLED, REPOSITION THE FRONT ROW SEATS AS DESIRED AND LOWER THE REAR SEAT BOTTOM.