



X-ACT CONTOUR

FLOOR LINERS


CARE AND USE INSTRUCTIONS

Thank you for selecting a X-Contour™ Floor Liner from Winfield Consumer Products. Your new second seat liner is custom molded to fit your vehicle with 2nd row bucket seating. The liner is made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. However, do not remove the factory-installed carpeting.***

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE, CHEVROLET TRAVERSE & GMC ACADIA 3RD SEAT FLOOR LINER (VEHICLES WITH 2ND ROW BUCKET SEATING)

FRONT OF VEHICLE

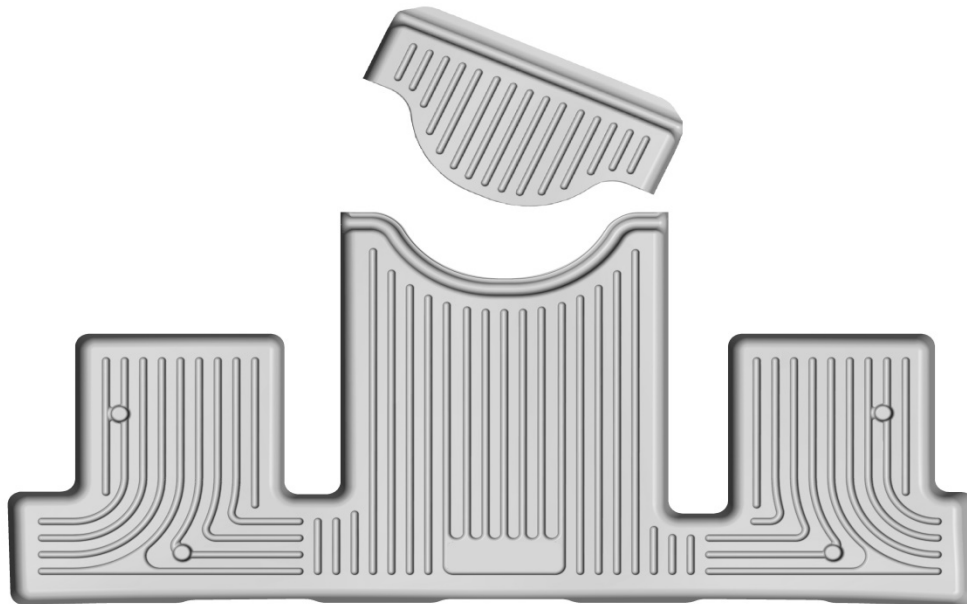

TO EASE INSTALLATION OF YOUR 3RD SEAT LINER, MOVE BOTH 2ND ROW SEATS COMPLETELY FORWARD. WITH SEATS MOVED, INSTALL YOUR LINER POSITIONING IT AS SHOWN ABOVE. ONCE YOU INSTALLED YOUR LINER, REPOSITION 2ND ROW SEATS AS DESIRED. NOTE THAT IF YOU HAVE A 2ND ROW CONSOLE, YOUR LINER WILL NEED TO BE TRIMMED TO ALLOW PROPER FIT. TO TRIM, REMOVE THE SECTION OF THE LINER SHOWN IN THE TOP VIEW ABOVE AND IN PHOTOS ON BACK OF SHEET.