

DODGE MEGA CAB DUALLY REAR MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required


- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment

Package Contents

- Driver & passenger side rear mud guard
- #10 screw (8)
- Washers (8)
- U-clip (4)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Remove existing fasteners from location A and C (Figure 1).
2. Install mud guard to rear fender with #10 screws and washers at locations A and C (Figure 1). Check fit and parallel and adjust accordingly before tightening.
3. Using mud guard as a template, mark and drill 1/8" holes at locations B and D.
4. Install u-clip over fender at location B and fasten with a #10 screw and washer thru mud guard and into fender and u-clip.
5. Install #10 screw and washer at location D, thru mud guard, fender liner and into a U-clip placed on the backside of fender liner (Figure 2).

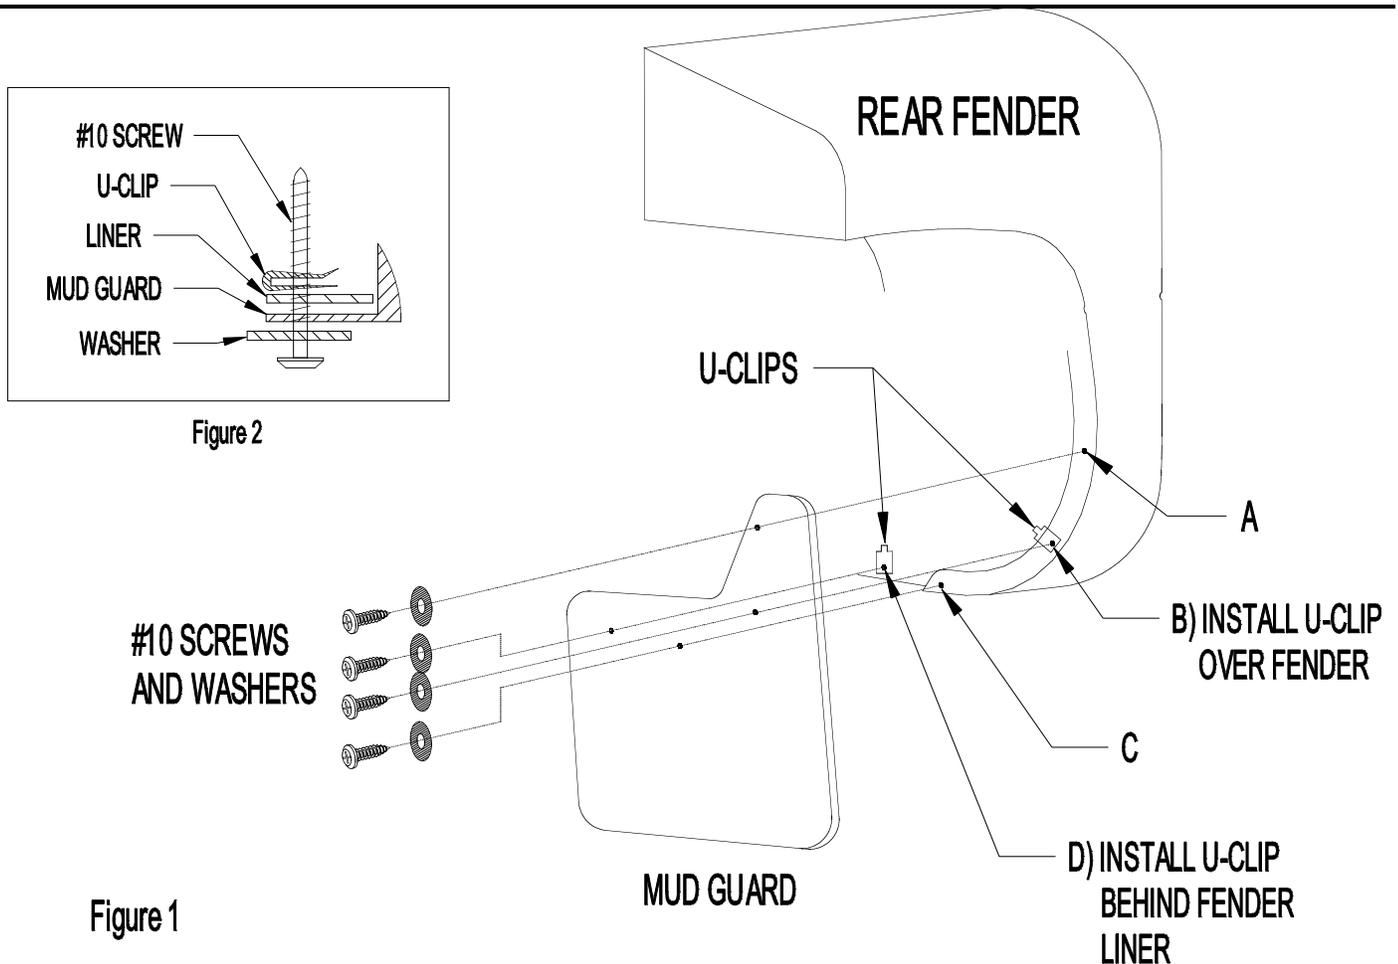

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.