

TAHOE/YUKON/SUBURBAN/YUKON XL WITH POWER DEPLOY RUNNING BOARDS**FRONT MUD GUARD INSTALLATION INSTRUCTIONS**

Please read instructions thoroughly before installation.

Tools Required


- T-20 Torx

Package Contents

- Front Mud Guard
- Spring Clips X 2
- Instruction Sheet

Determine which mudguard you have by locating the part number molded in the mounting flange (5822 DS and 5822 PS).

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fasteners from locations A, B and C.
3. Attach mud guard to front fender with factory fasteners at locations A, B and C. Check fit and make sure mud guard is parallel to ground before tightening. Install clip, one per side, as shown below.

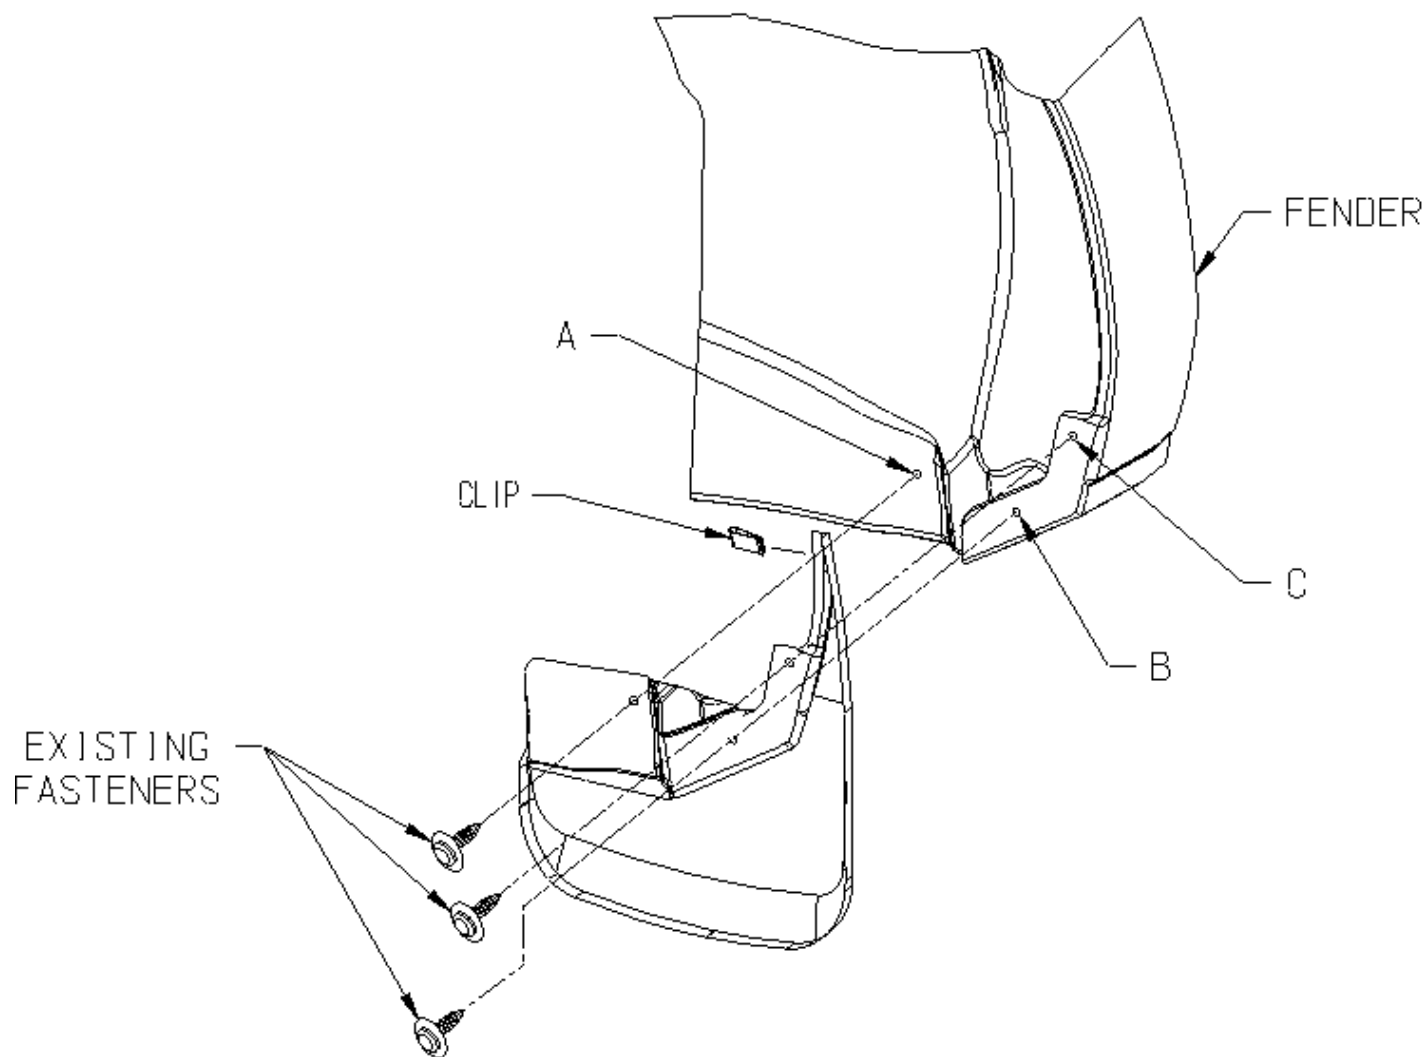

TAHOE/YUKON/SUBURBAN/YUKON XL WITH POWER DEPLOY RUNNING BOARDS**REAR MUD GUARD INSTALLATION INSTRUCTIONS**

Install Paint Protection Film before mud guards (see other side)

Please read instructions thoroughly before installation.

Tools Required


- T20 Torx

Package Contents

- Driver & Passenger Side Rear Mud Guard
- Paint Protection Film (1 set)
- Instruction Sheet

Determine which mudguard you have by locating the part number molded in the mounting flange (5924 DS and 5924 PS).

1. Clean and degrease the mud guard location area on the fender before installation.
4. Remove existing fasteners from locations A, and B.
5. Install paint protection film (see instructions on the back of this page)
6. Attach mud guard to rear fender with factory fasteners at locations A, and B, check fit and make sure mud guard is parallel to ground before tightening.

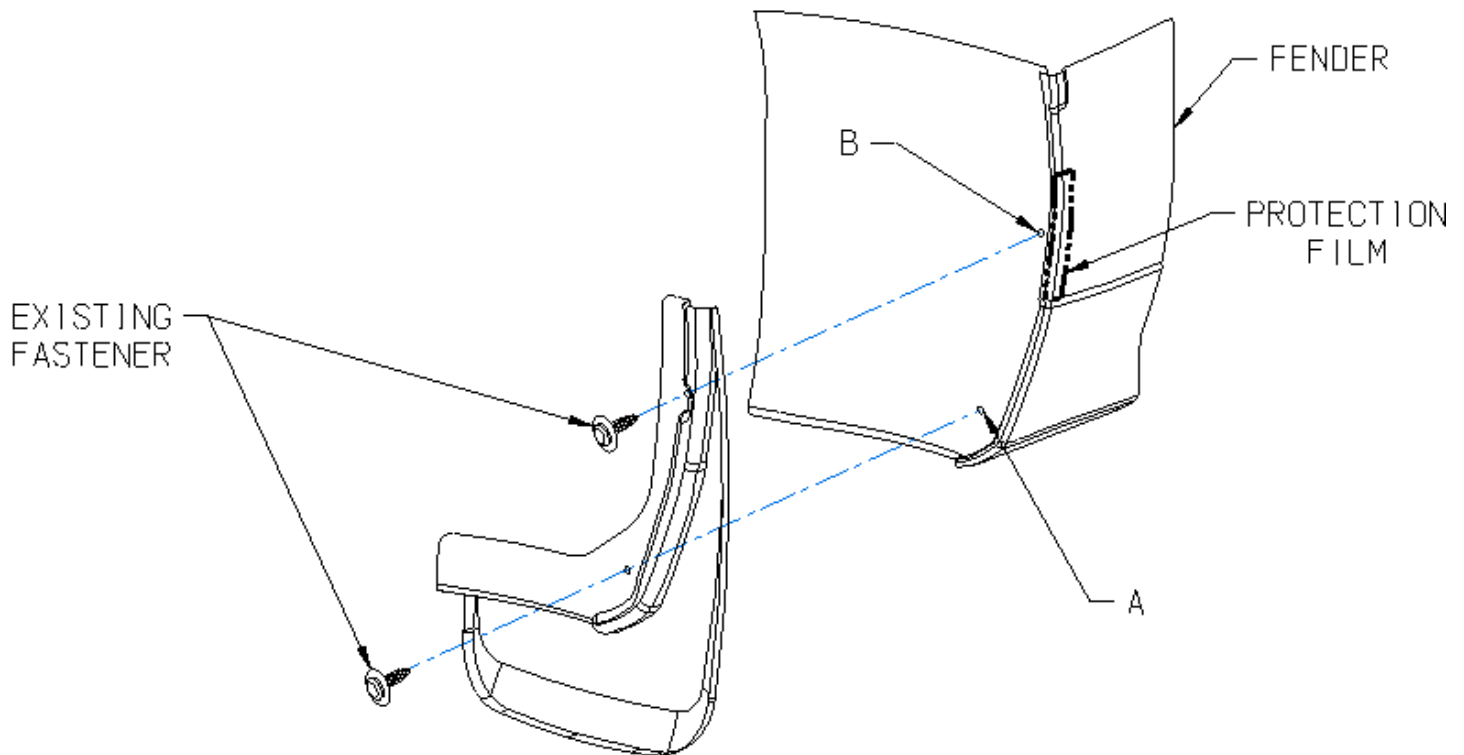

PAINT PROTECTION FILM - INSTALLATION INSTRUCTIONS

NOTE: The Paint Protection Film is a precut template of film used to protect the mud guard mounting surfaces of your fenders against wear. The templates (left and right side) can be removed from the backing liner by folding the liner at the center cut of the template, separating the film sides and peeling the film templates from the backing liner.

1. Position mud guard on fender to indicate placement location of paint protection film.
2. Clean the placement area of fender with a clean cotton cloth and a petroleum distillate based cleaner such as DuPonts Prep-Sol Brand Solvent Cleaner or 3M Brand Adhesive Cleaner and dry.
3. Mix a wetting solution of 1 pint of water with 4 drops of liquid dishwashing detergent.
4. Mark correct position of film by placing mud guard against fender. **Make sure film extends beyond edge of mud guard contour a minimum of an 1/8".**
5. Remove protection film from liner and flood adhesive side of film with wetting solution (use a spray bottle or sponge).
6. Thoroughly wet film placement location of fender with wetting solution.
7. Position the adhesive side of film on fender and flood with wetting solution.
8. Check location of film with mud guard and reposition as necessary.
9. Using a sponge, squeegee any air bubbles and wrinkles from film.

Allow film to dry before installing mud guard

