

**FORD EDGE FRONT MUD GUARD INSTALLATION INSTRUCTIONS—MODELS WITH STANDARD LOWER BODY MOLDING. SEE IMAGES BELOW TO DETERMINE YOUR CLADDING TYPE.**

*Please read instructions thoroughly before installation.*

**Tools Required**

- **Socket Wrench / Combination Wrench**


**Package Contents**

- Driver & passenger side front mud guard
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

Clean and degrease the mud guard location area on the fender before installation.


1. Remove existing fasteners from location A and B.
2. Install mud guard with existing fasteners at location A and B. Check fit and parallel and adjust accordingly before tightening.

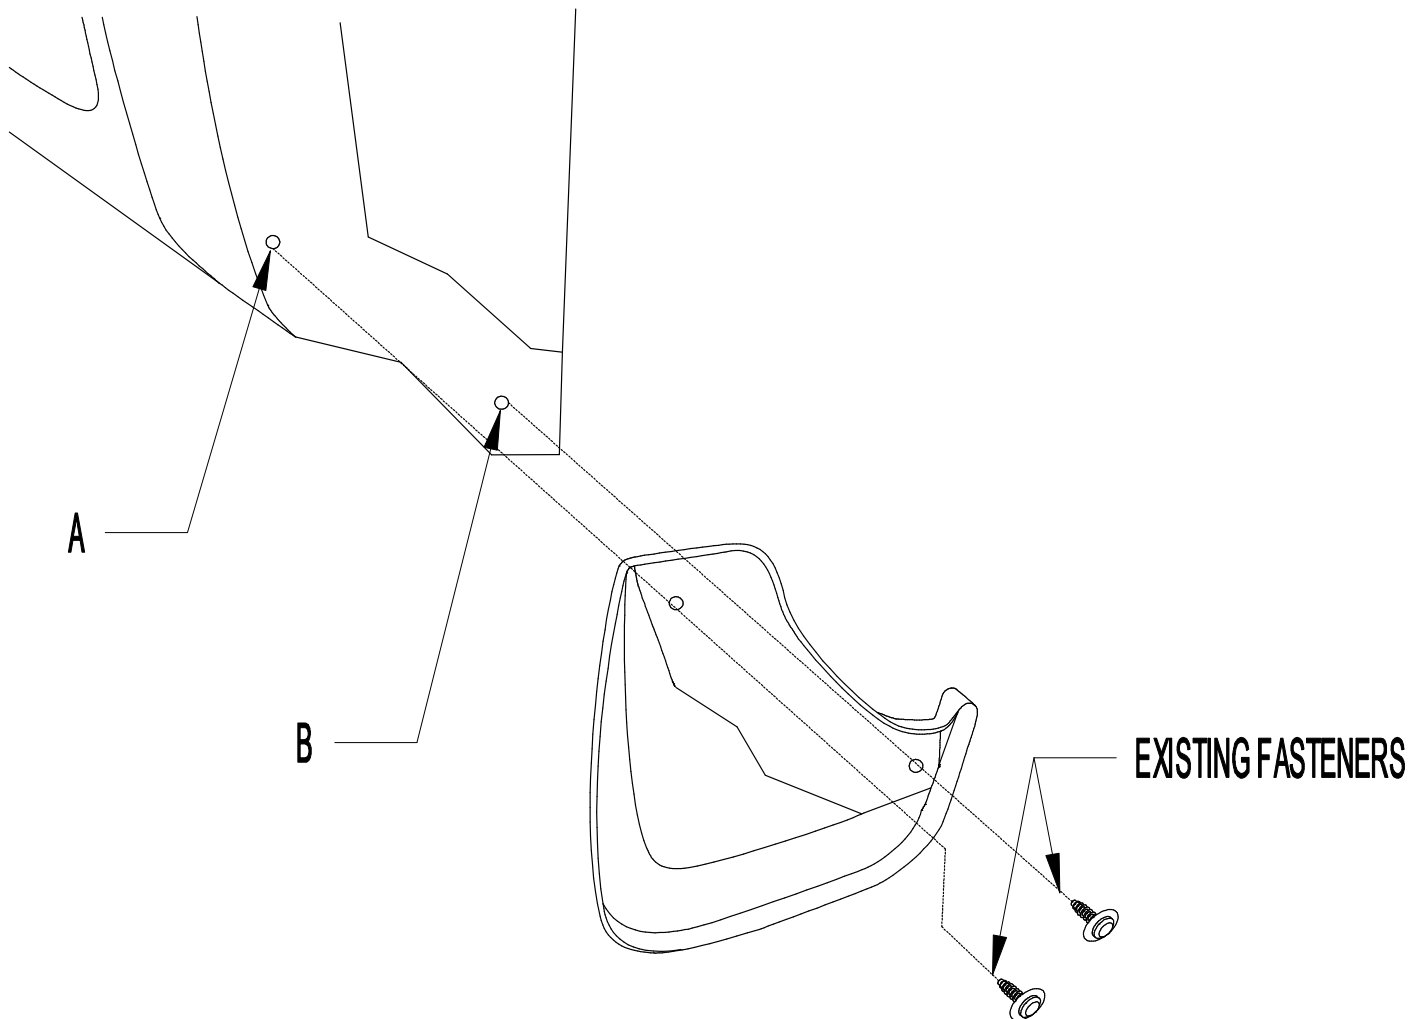**PAINTING INSTRUCTIONS**

**NOTE:** *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.

FORD EDGE WITH STANDARD LOWER BODY SIDE MOLDING. NOTE LOWER BODY SIDE MOLDING CUTS INWARD THEN ANGLES DOWN BEFORE TURNING UNDERNEATH BODY.

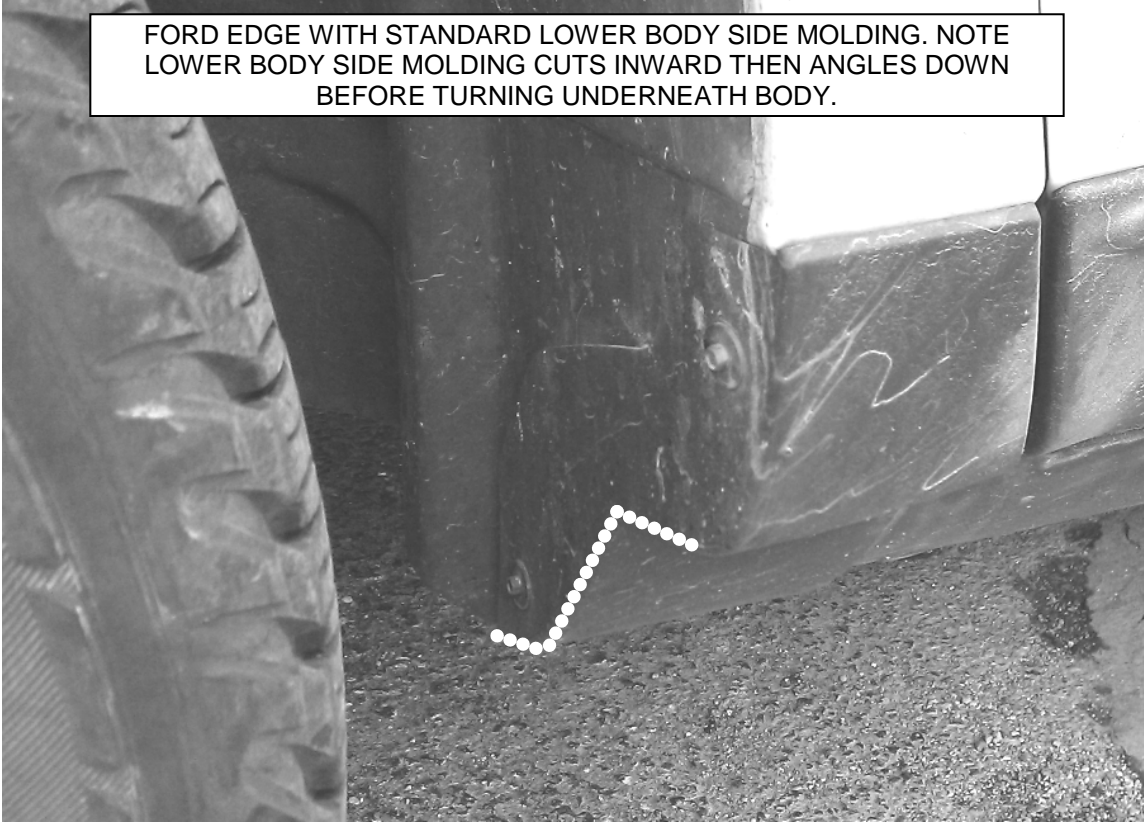

EDGE WITH OPTIONAL LOWER BODY SIDE MOLDING. NOTE MOLDING EXTENDS STRAIGHT DOWN THEN TURNS UNDER. THIS CLADDING IS COMMON ON SPORT MODELS & WITH 2.0L ECOBOOST ENGINES. IT IS OPTIONAL ON OTHER MODELS.

