


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS**

Your new floor liner is custom molded to fit your Ford F150 Super Cab truck. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR FORD F-150 SUPER CAB
TRUCK SECOND SEAT FLOOR LINER**

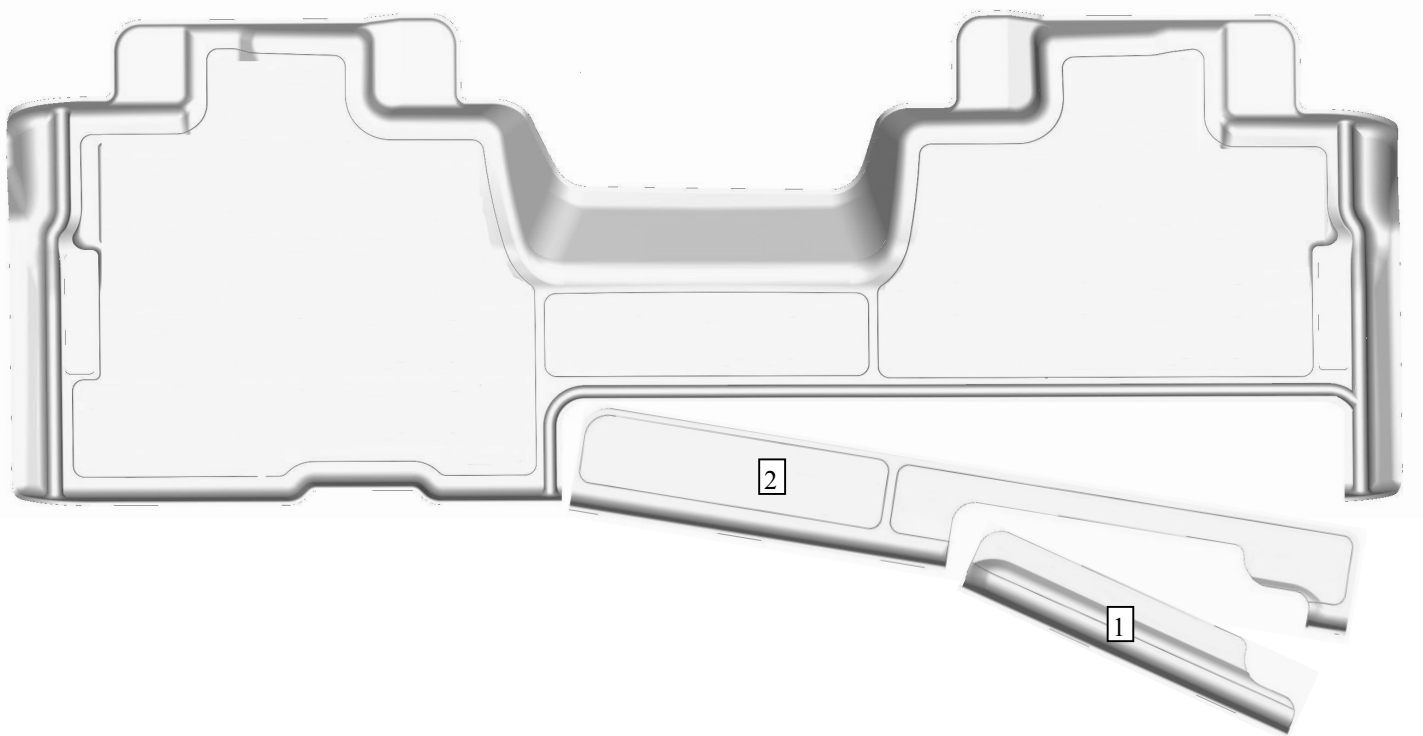

IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY SUBWOOFER LOCATED UNDER THE PASSENGER'S SIDE REAR SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM THE LINER, USE THE STEP FORMED BY THE LOWERED AREA IN YOUR LINERS AS A TRIMMING GUIDE AND REMOVE THE MATERIAL FROM THE SPACE THE SUBWOOFER OCCUPIES—SEE AREA 1 ABOVE. IF YOU PLAN TO USE A HUSKY GEARBOX[®], YOU WILL NEED TO TRIM AREA 2 AS DEPICTED ABOVE. USE THE STEP MOLDED AROUND THE PERIMETER OF THE RAISED MOAT AS YOUR TRIMMING GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING. PHOTOS OF THE TRIMMED PART ARE INCLUDED ON BACK OF THIS PAGE.