

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your Sequoia. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.


Toyota Sequoia's come equipped with three (3) unique second row seating configurations. Your liner is designed to accommodate all of these configurations, but may require trimming to do so. Please locate the sketch below or on the back of this sheet that matches the configuration of your Sequoia and follow the related installation instructions. Note: To ease installation of your second seat liner, move the front seats to their most forward position before installing the liner. Once liner is installed, reposition seats as desired.

SEQUOIA WITH SECOND ROW BUCKET SEATS (NO SECOND ROW CONSOLE)

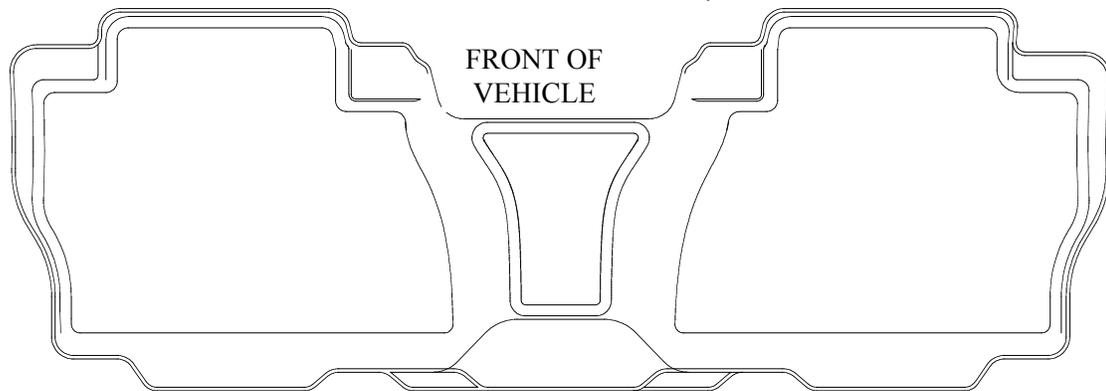


No trimming is needed for vehicles equipped **with** 2nd Row Bucket seats but **without** 2nd Row Console.

SEQUOIA WITH SECOND ROW BENCH SEATS

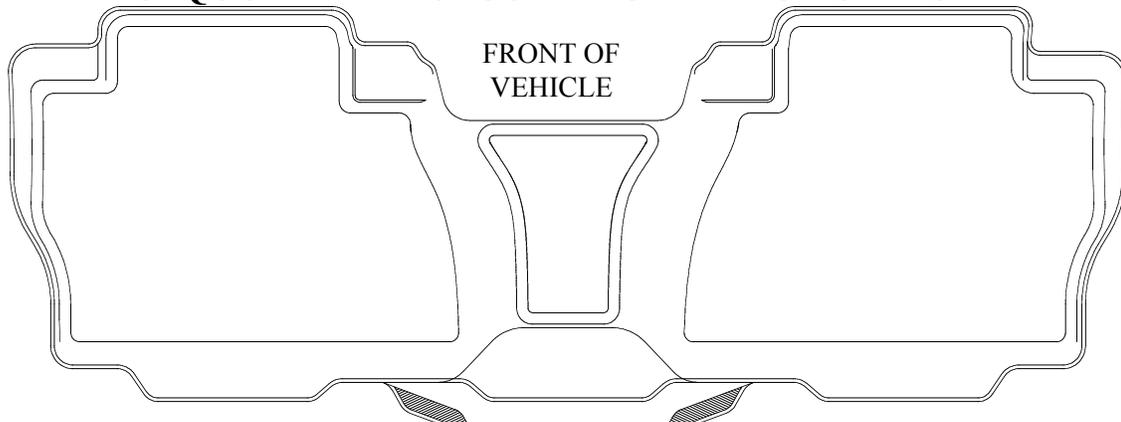

Trimming is needed to allow the correct fit for vehicles **with** 2nd Row Bench seats. To trim, remove the two areas along the back wall of the liner shown above darkened. Use the molded in step and groove in the part as your trimming guide. A utility knife or heavy shears work well for trimming. You will find photos the trimmed part on the back of this page.

SEQUOIA WITH SECOND ROW BUCKET SEATS AND SECOND ROW CONSOLE

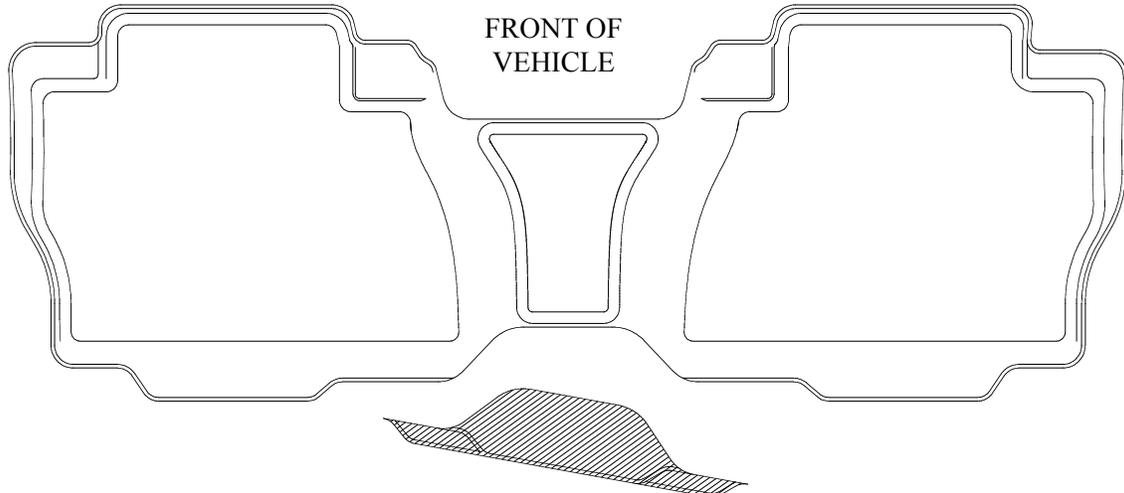

Trimming is needed to allow the correct fit for vehicles **with** 2nd Row Bucket seats with a 2nd Row Console. To trim, remove the area along the back wall of the liner shown above darkened. Use the molded in groove in the part as your trimming guide. A utility knife or heavy shears work well for trimming. You will find photos the trimmed part below.

