

MÖGÖ


AUTOMATS



Thank you for selecting Front Floor Liners for your 3-Series.

Your new front floor liners are custom molded to fit your specific vehicle's floor board. MÖGÖ liners are designed to take the place of your factory floor mats.

Before installtion, please remove blue protective film from the stainless accents. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

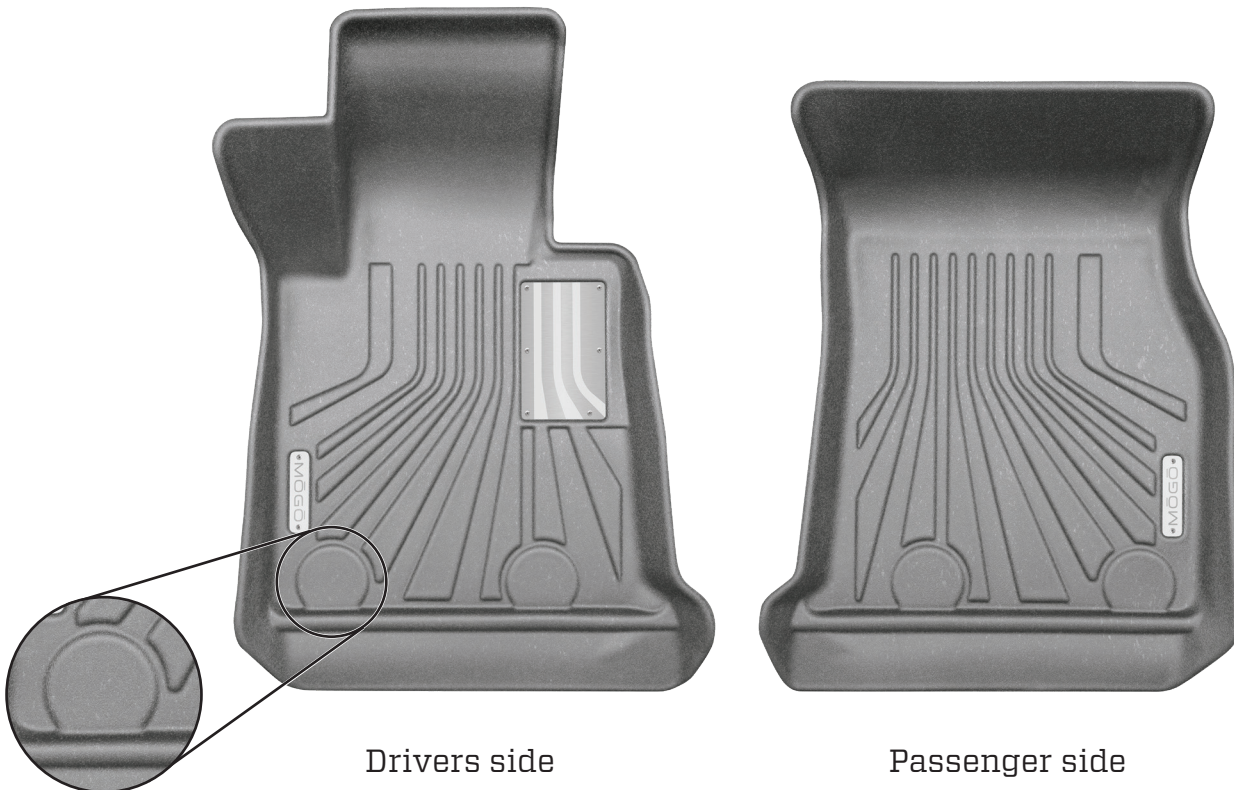

Drivers side

Passenger side

Place over velcrow and
apply pressure

TO INSTALL DRIVER'S SIDE LINER SIMPLY POSITION LINER OVER VELCROW AND APPLY PRESSURE TO SECURE THE LINER IN PLACE.