

MÖGÖ


AUTOMATS



Thank you for selecting 2nd Seat Floor Liners for your GLE-Class.

Your new front floor liners are custom molded to fit your specific vehicle's floor board. MÖGÖ liners are designed to take the place of your factory floor mats.

Before installtion, please remove blue protective film from the stainless accents. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

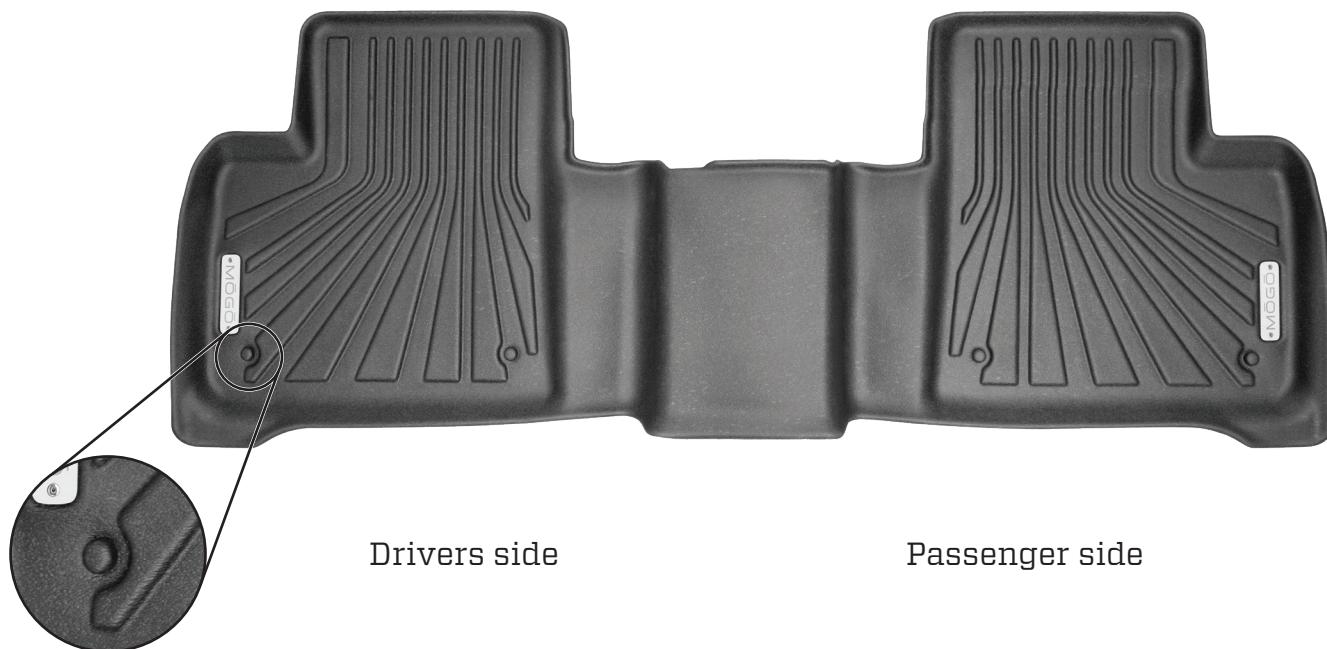

Place and press down
over factory carpet
retention posts

TO INSTALL DRIVER'S SIDE LINER SIMPLY POSITION LINER OVER EXIST-
ING RETAINER AND PRESS DOWN TO SECURE LINER OVER THE RETAINER.