

# MÖGÖ

AUTOMATS



Thank you for selecting Front Floor Liners for your Tesla.

Your new front floor liners are custom molded to fit your specific vehicle's floor board. MOGO liners are designed to take the place of your factory floor mats.


For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.



Drivers side



Passenger side

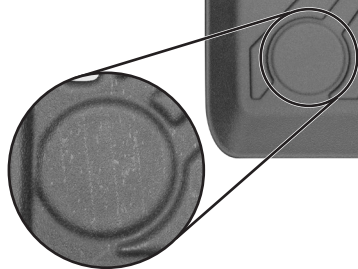

Place over velcro and  
apply pressure


**TO INSTALL DRIVER'S SIDE LINER SIMPLY POSITION LINER OVER VELCRO AND APPLY PRESSURE TO SECURE IN PLACE.**



Thank you for selecting 2nd Seat Floor Liners for your Tesla.

Your new floor liners are custom molded to fit your specific vehicle's floor board. MÖGÖ liners are designed to take the place of your factory floor mats.

For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

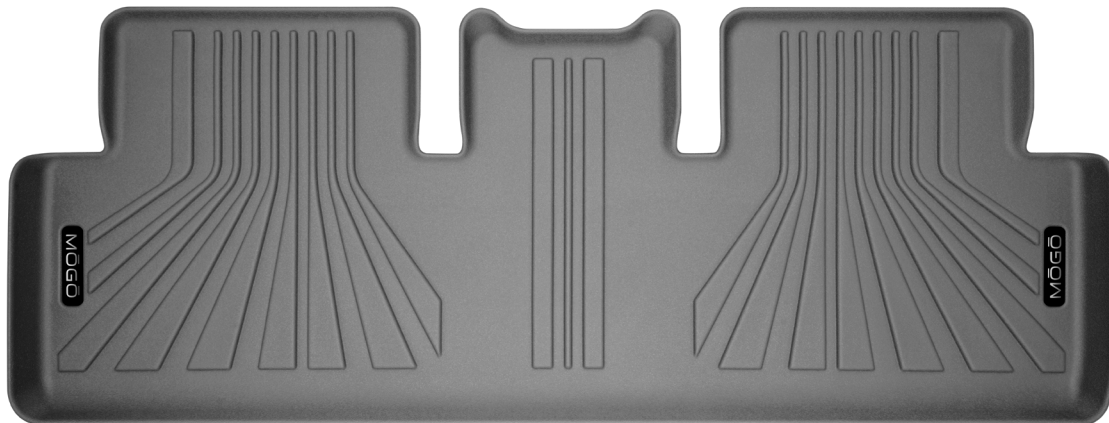

Drivers side

Passenger side

TO INSTALL LINER SIMPLY POSITION LINER INTO PLACE.