

# MÖGÖ

AUTOMATS



Thank you for selecting Front Floor Liners for your QX60.

Your new floor liners are custom molded to fit your specific vehicle's floor board. MÖGO liners are designed to take the place of your factory floor mats.


Before installation, please remove blue protective film from the stainless accents. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.



Drivers side



Passenger side

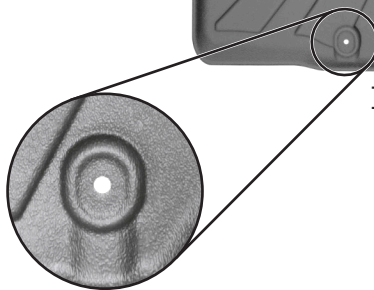

Place and press down  
over factory carpet  
retention posts

**TO INSTALL DRIVER'S SIDE LINER SIMPLY POSITION LINER OVER EXISTING RETAINER AND PRESS DOWN TO SECURE LINER OVER THE RETAINER.**