

MÖGÖ


AUTOMATS



Thank you for selecting Front Floor Liners for your Charger or 300 AWD.

Your new front floor liners are custom molded to fit your specific vehicle's floor board. MOGO liners are designed to take the place of your factory floor mats.

For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex[®], 409[®] and ArmorAll[®] type cleaners work as well.

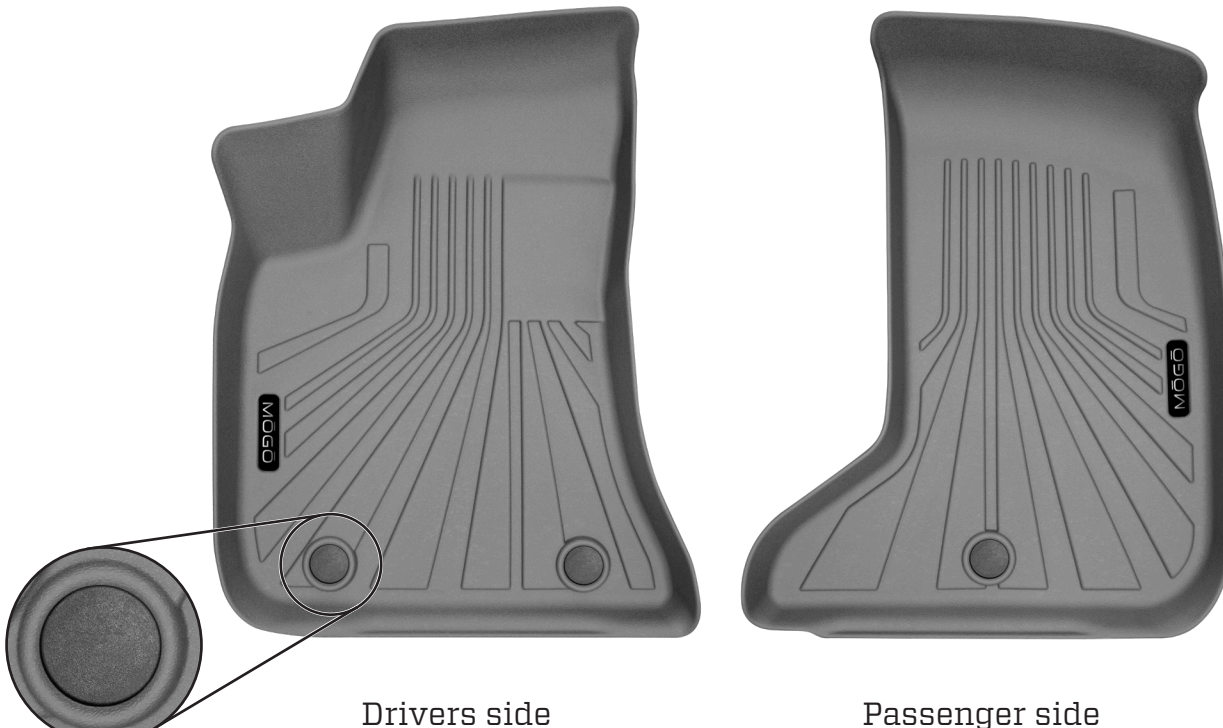

Drivers side

Passenger side

Place and press down
over factory carpet
retention posts

TO INSTALL DRIVER'S SIDE LINER SIMPLY POSITION LINER OVER EXISTING RETAINER AND PRESS DOWN TO SECURE LINER OVER THE RETAINER.

MÖGÖ

AUTOMATS



Thank you for selecting 2nd Seat Floor Liners for your Charger or 300 AWD.

Your new front floor liners are custom molded to fit your specific vehicle's floor board. MOGO liners are designed to take the place of your factory floor mats.

For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting. Your liners are made from an engineered resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.



Drivers side



Passenger side

TO INSTALL LINER SIMPLY POSITION LINER INTO PLACE.