

**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS**


Your new floor liner is custom molded to fit your Sequoia. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.


**INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA SEQUOIA THIRD
SEAT LINER**

Toyota Sequoia's come equipped with three (3) unique *second* row seating configurations. These configurations will affect the fit of your *third* seat liner. Your liner is designed to accommodate all three configurations, but may require trimming to do so. Please locate the sketch below or on the back of this sheet that matches the configuration of your Sequoia and follow the related installation instructions. Note: To ease installation of your 3rd seat liner, move the 2nd row seats to their most forward position before installing the liner. Once liner is installed, reposition seats as desired.

SEQUOIA WITH SECOND ROW BUCKET SEATS (NO SECOND ROW CONSOLE)

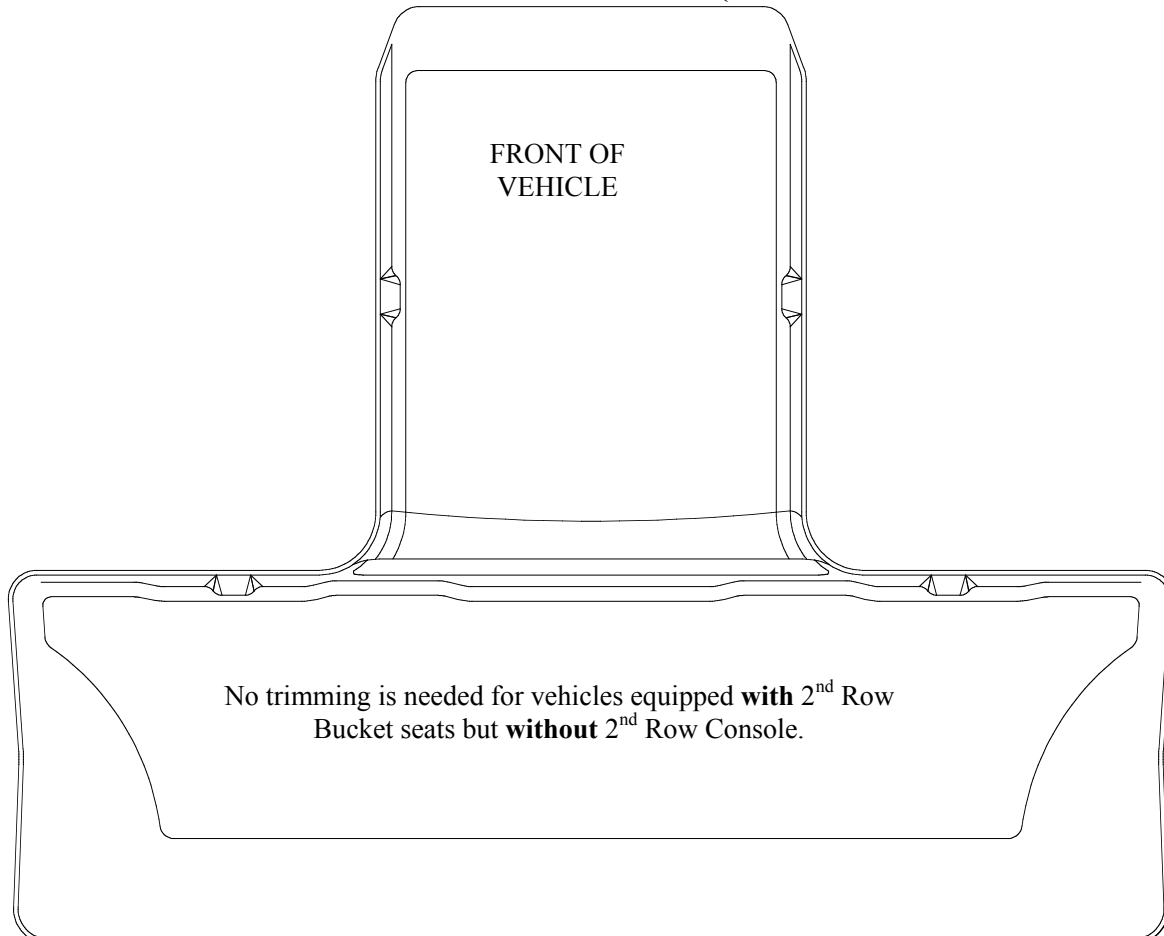


SEQUOIA WITH 2ND ROW BENCH SEAT & 2ND ROW BUCKETS AND CONSOLE

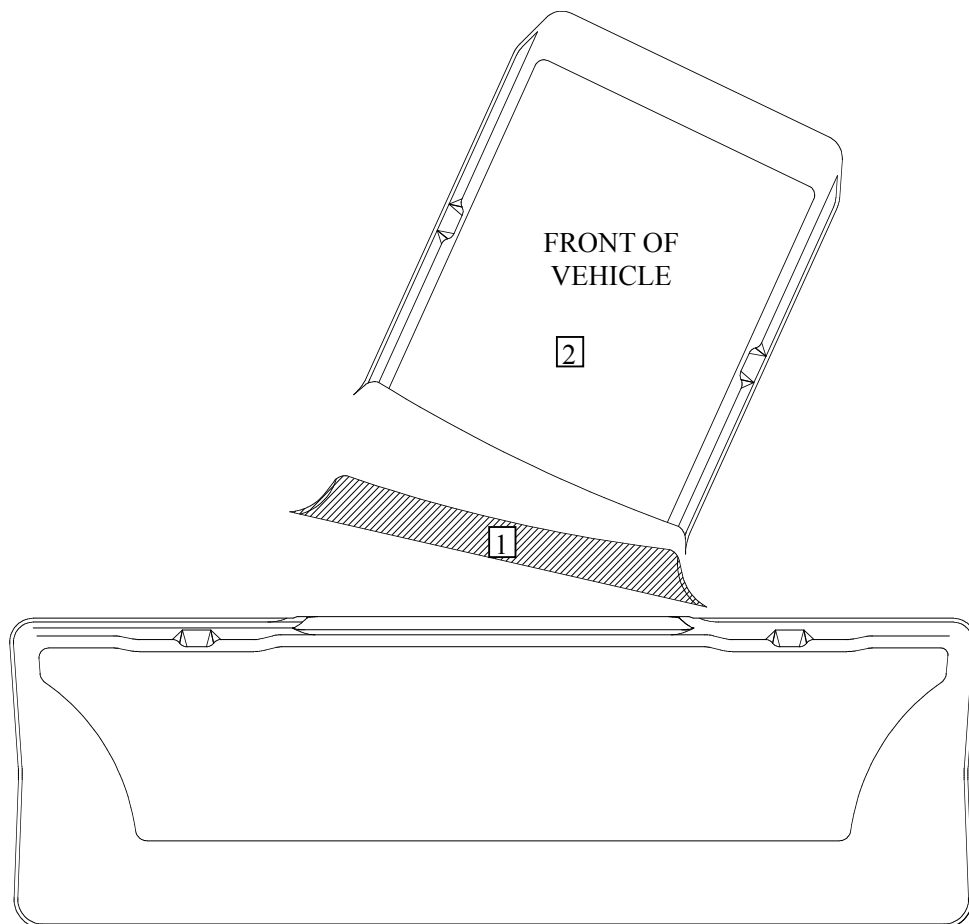


Trimming is needed to allow the correct fit in vehicles **with** 2nd Row Bench seats. To trim, remove the whole “tongue” portion of liner as show above (areas “1” and “2”). Use edge of the raised moat as your trim guide (see photo below), leaving the moat attached to the part. A utility knife or heavy shears work well for trimming.

Trimming is also needed to all the correct fit in vehicles with 2nd Row Buckets with a console between them. To trim, remove area “2” as shown above. Use the offset in the tread plate area of the liner as your trim guide (see photo below). Once again, a utility knife or heavy shears work well for trimming.

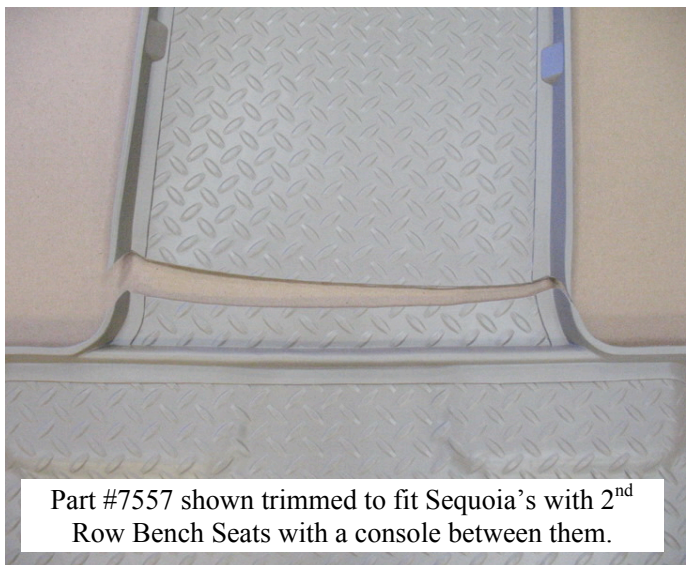

Part #7557 shown trimmed to fit Sequoia's with 2nd Row Bench Seats with a console between them.

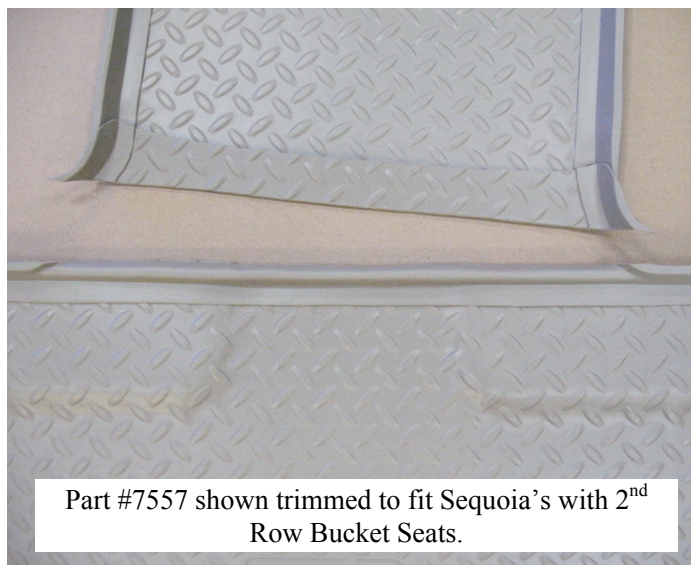

Part #7557 shown trimmed to fit Sequoia's with 2nd Row Bucket Seats.