

HUSKYLINERS®

weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F150 Super Crew truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CREW TRUCK FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liners are custom molded to fit your Ford F150 Super Crew truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CREW TRUCK SECOND SEAT FLOOR LINERS

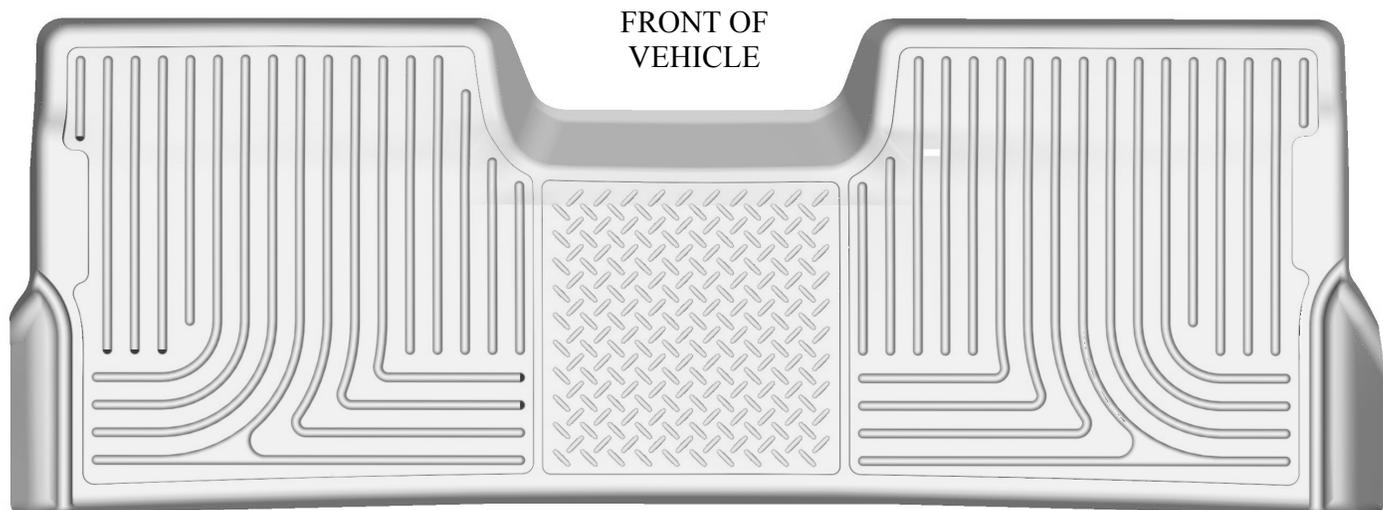

TO EASE INSTALLATION OF YOUR SECOND SEAT FORD F150 SUPER CREW LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE. ONCE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

YOUR LINER COMES MOLDED WITH STA-PUT NIBS ON THE BACK SURFACE OF THE LINER TO HELP RETAIN IT IN PLACE. ADDITIONALLY, WE HAVE INCLUDED AN OPTIONAL VELCRO® ANCHORING SYSTEM TO FURTHER SECURE YOUR LINER. TO INSTALL THE OPTIONAL ANCHORING SYSTEM, JUST FOLLOW THE STEPS LISTED BELOW.

FIRST, LOCATE THE HARDWARE BAG INCLUDED IN THE SHIPPING BOX. INSIDE THE BAG YOU WILL FIND 2 (TWO) ANCHOR SCREWS WITH THE "LOOP" PORTION OF THE VELCRO® ALREADY

APPLIED. ALSO INCLUDED ARE 2 (TWO) VELCRO® HOOK PADS THAT WILL NEED TO BE APPLIED TO YOUR LINER.

BEFORE POSITIONING THE VELCRO® PADS ON YOUR LINER, IT WILL BE NECESSARY TO REMOVE ANY NIBS THAT WOULD KEEP THE PADS FROM LAYING FLAT. A PAIR OF CLIPPERS WORK WELL FOR REMOVING NIBS. PHOTOS 1 AND 2 BELOW SHOW WHERE A NIB HAS BEEN REMOVED AND A VELCRO® PAD INSTALLED. INSTALL THE HOOK PADS TOWARD THE BACK EDGE OF THE LINER SITUATED OPPOSITE OF EACH OTHER. CHOOSE A FLAT AREA UNDERNEATH WHICH THE CARPET SCREW CAN BE INSTALLED. PRE-FITTING THE LINER WILL HELP DETERMINE “GOOD” LOCATIONS.

FINALLY, INSTALL THE LINER IN YOUR VEHICLE MAKING SURE IT IS PROPERLY ALIGNED. THE ANCHOR SCREWS WILL NEED TO BE INSTALLED IN YOUR FACTORY CARPET DIRECTLY BENEATH THE VELCRO® HOOK PATCHES YOU APPLIED. TO ALIGN, PULL UP A CORNER OF THE LINER AS SHOWN IN PHOTO 3 BELOW. ATTACH THE ANCHOR SCREW TO THE PAD (THE VELCRO WILL HOLD THE SCREW TO THE LINER) THEN LOWER THE RAISED EDGE AND NOTE THE POSITION WHERE THE SCREW MEETS THE VEHICLE CARPET. INSERT THE ANCHOR SCREW AT THIS LOCATION AND REPEAT THE PROCEDURE FOR THE OTHER VELCRO® LOCATION.

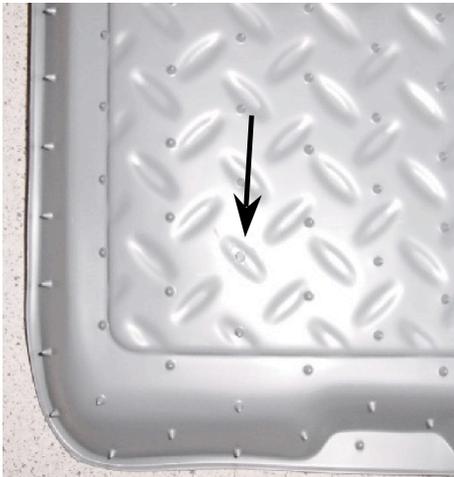


PHOTO 1. SHOWING REMOVED NIB.



PHOTO 2. HOOK PAD ATTACHED.

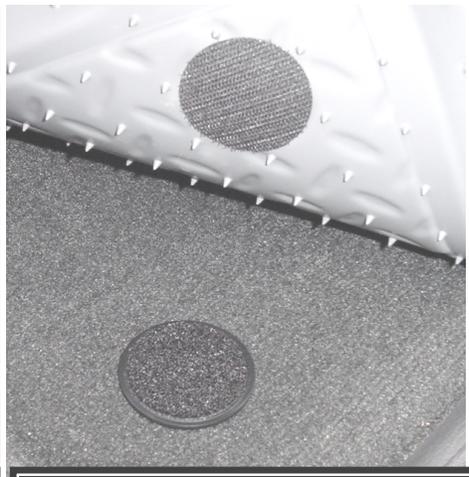


PHOTO 3. ANCHOR SCREW ALIGNED.

DO YOU HAVE ITEMS YOU WOULD LIKE TO STORE UNDER YOUR REAR SEAT BUT HAVE NO PLACE TO SECURE THEM? CHECK OUT THE NEW HUSKY GEAR BOX DESIGNED SPECIFICALLY TO FIT YOUR 2009 FORD F150 SUPER CREW. CONTACT YOUR LOCAL HUSKY LINER PRODUCT RETAILER AND ASK FOR PART #09241 FOR SUPER CREW TRUCKS WITHOUT THE OPTIONAL REAR SUBWOOFER LOCATED UNDER THE REAR SEAT OR PART #09251 FOR APPLICATIONS WITH THE REAR SUBWOOFER.



HUSKY LINERS PRODUCT WARRANTY

Husky Liners guarantees to the original purchaser of Husky Liners products that they will not break or tear under normal usage during the life of the motor vehicle in/on which they are installed. This warranty shall only be effective while the original purchaser owns the motor vehicle and shall not apply to Husky Liners products that have been removed from the original vehicle on which they were installed. This warranty applies only to those parts that are correctly installed in/on the vehicle for which they were intended.

Husky Liners will warrant any part during the warranty period that proves defective in material and/or workmanship under normal installation, use, service, or maintenance. Return alleged defective part to the place of purchase for replacement or refund. Please have a copy of your purchase receipt available when you call. The foregoing is the only express warranty made by the manufacturer and is limited to the duration of this warranty. **ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. *LABOR CHARGES, INJURIES, OR ANY OTHER LOSS OR DAMAGES WHATSOEVER, INCLUDING THOSE INCURRED IN INSTALLATION ARE EXCLUDED. ADDITIONALLY, PAINTING OF REPLACEMENT HUSKY LINER PARTS AND ANY VEHICLE COMPONENT REPAIR OR REPLACEMENT AS WELL AS INCIDENTAL DAMAGES ARE EXCLUDED.***

This warranty is void for damages to the product due to misuse, abuse, neglect, accident, improper installation or any use that violates the instructions furnished by us.

ABNORMAL WEAR AND TEAR ARE NOT COVERED UNDER THIS WARRANTY. Obviously, if your dog chews up your Husky Liner product, it's not covered under the warranty. Likewise, if you shut your Husky Liner in the door of your vehicle, damage to the liner and/or door are not covered. Commonplace, everyday wear on a particular product is considered normal, and is not covered under warranty repair.

Winfield Consumer Products – 800.344.8759 – P.O. BOX 839 – 22425 ‘D’ St.– Winfield KS 67156