

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Chevrolet Camaro. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET CAMARO FRONT FLOOR LINERS

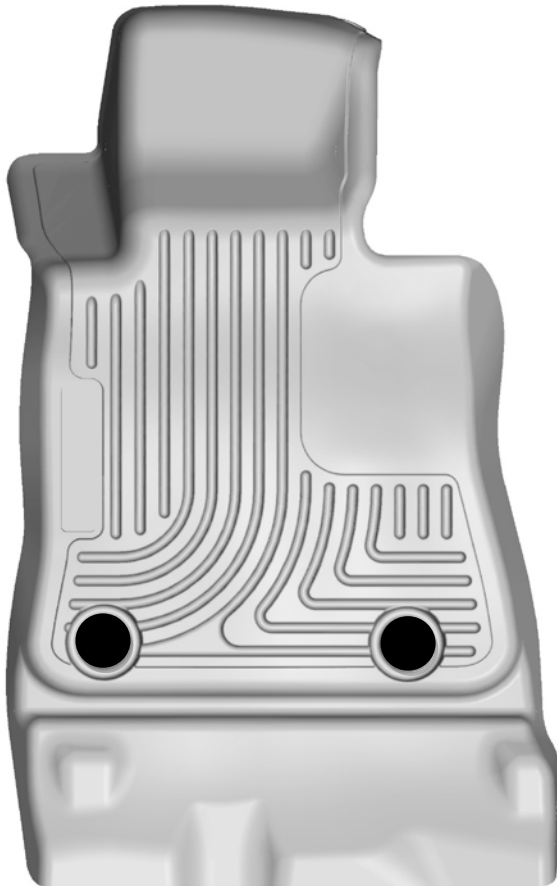

LEFT OR DRIVER'S SIDE



RIGHT OR PASSENEGER'S SIDE

TO EASE INSTALLATION OF YOUR CAMARO FRONT FLOOR LINERS, FIRST SLIDE BOTH FRONT ROW SEATS BACK TO EXPOSE THE FRONT FLOOR PANS. INSTALL LINERS TAKING CARE TO ATTACH THE DRIVER'S SIDE LINER TO THE FACTORY POST STYLE MAT RETAINERS. ONCE YOU HAVE INSTALLED THE FRONT LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

# **HUSKY** **Weather** **BEATER**<sup>™</sup> **Custom Vehicle Floor Protection**

## CARE AND USE INSTRUCTIONS


---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Chevrolet Camaro. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET CAMARO SECOND SEAT FLOOR LINERS

### FRONT OF VEHICLE

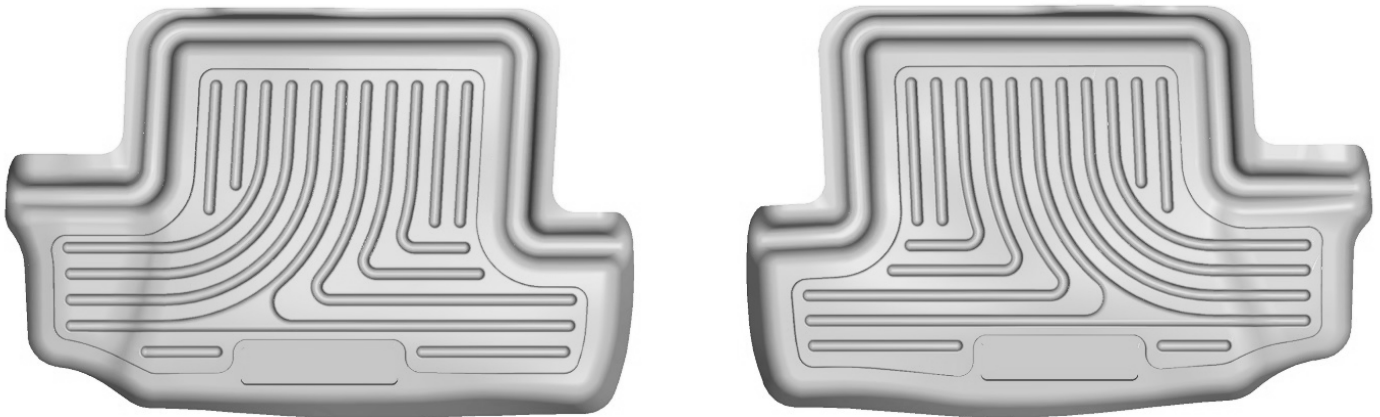

TO EASE INSTALLATION OF YOUR CAMARO SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSTALL THE LINER IN YOUR VEHICLE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.