


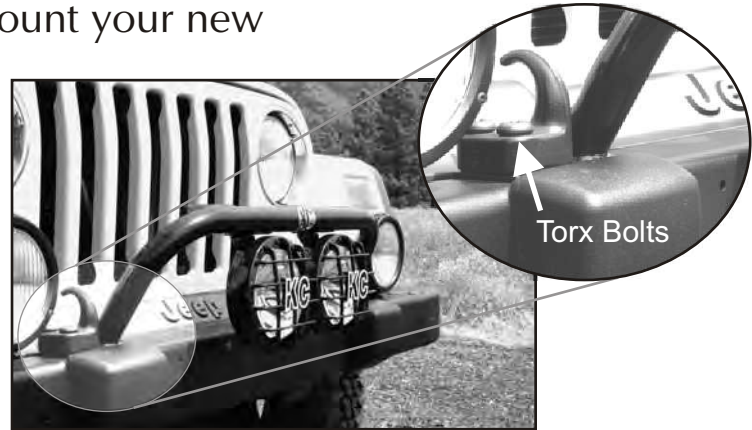

Installation Instructions for Front Light Bars KC 7400, 7401, 7402 Fits 97-06 Jeep Wrangler

Follow these simple instructions to mount your new KC HiLiTES Front End Lite Bar.

1. Using a #55 Torx bit, remove the bolts holding the two tow hooks. (see photo) **NOTE - Some vehicles may not have tow hooks, but the same bolts will be used.**
2. Align the KC bar mounting plate with the tow hook bolt holes, place the tow hooks on top of the bar mounting plate, re-insert the bolts and tighten securely.
3. You're DONE. You may now mount the KC lights of your choice.



23 Year Warranty

See details on our website at
www.kchilites.com

IF YOU HAVE ANY PROBLEMS OR QUESTIONS, PLEASE CALL
CUSTOMER SERVICE AT 800-528-0950