


**Do not make any battery connections until all your other connections are made and secure**

Connect to any SWITCHED circuit in your car using either the red or yellow 'tap' connector (depending on the size of the wire you're connecting to)

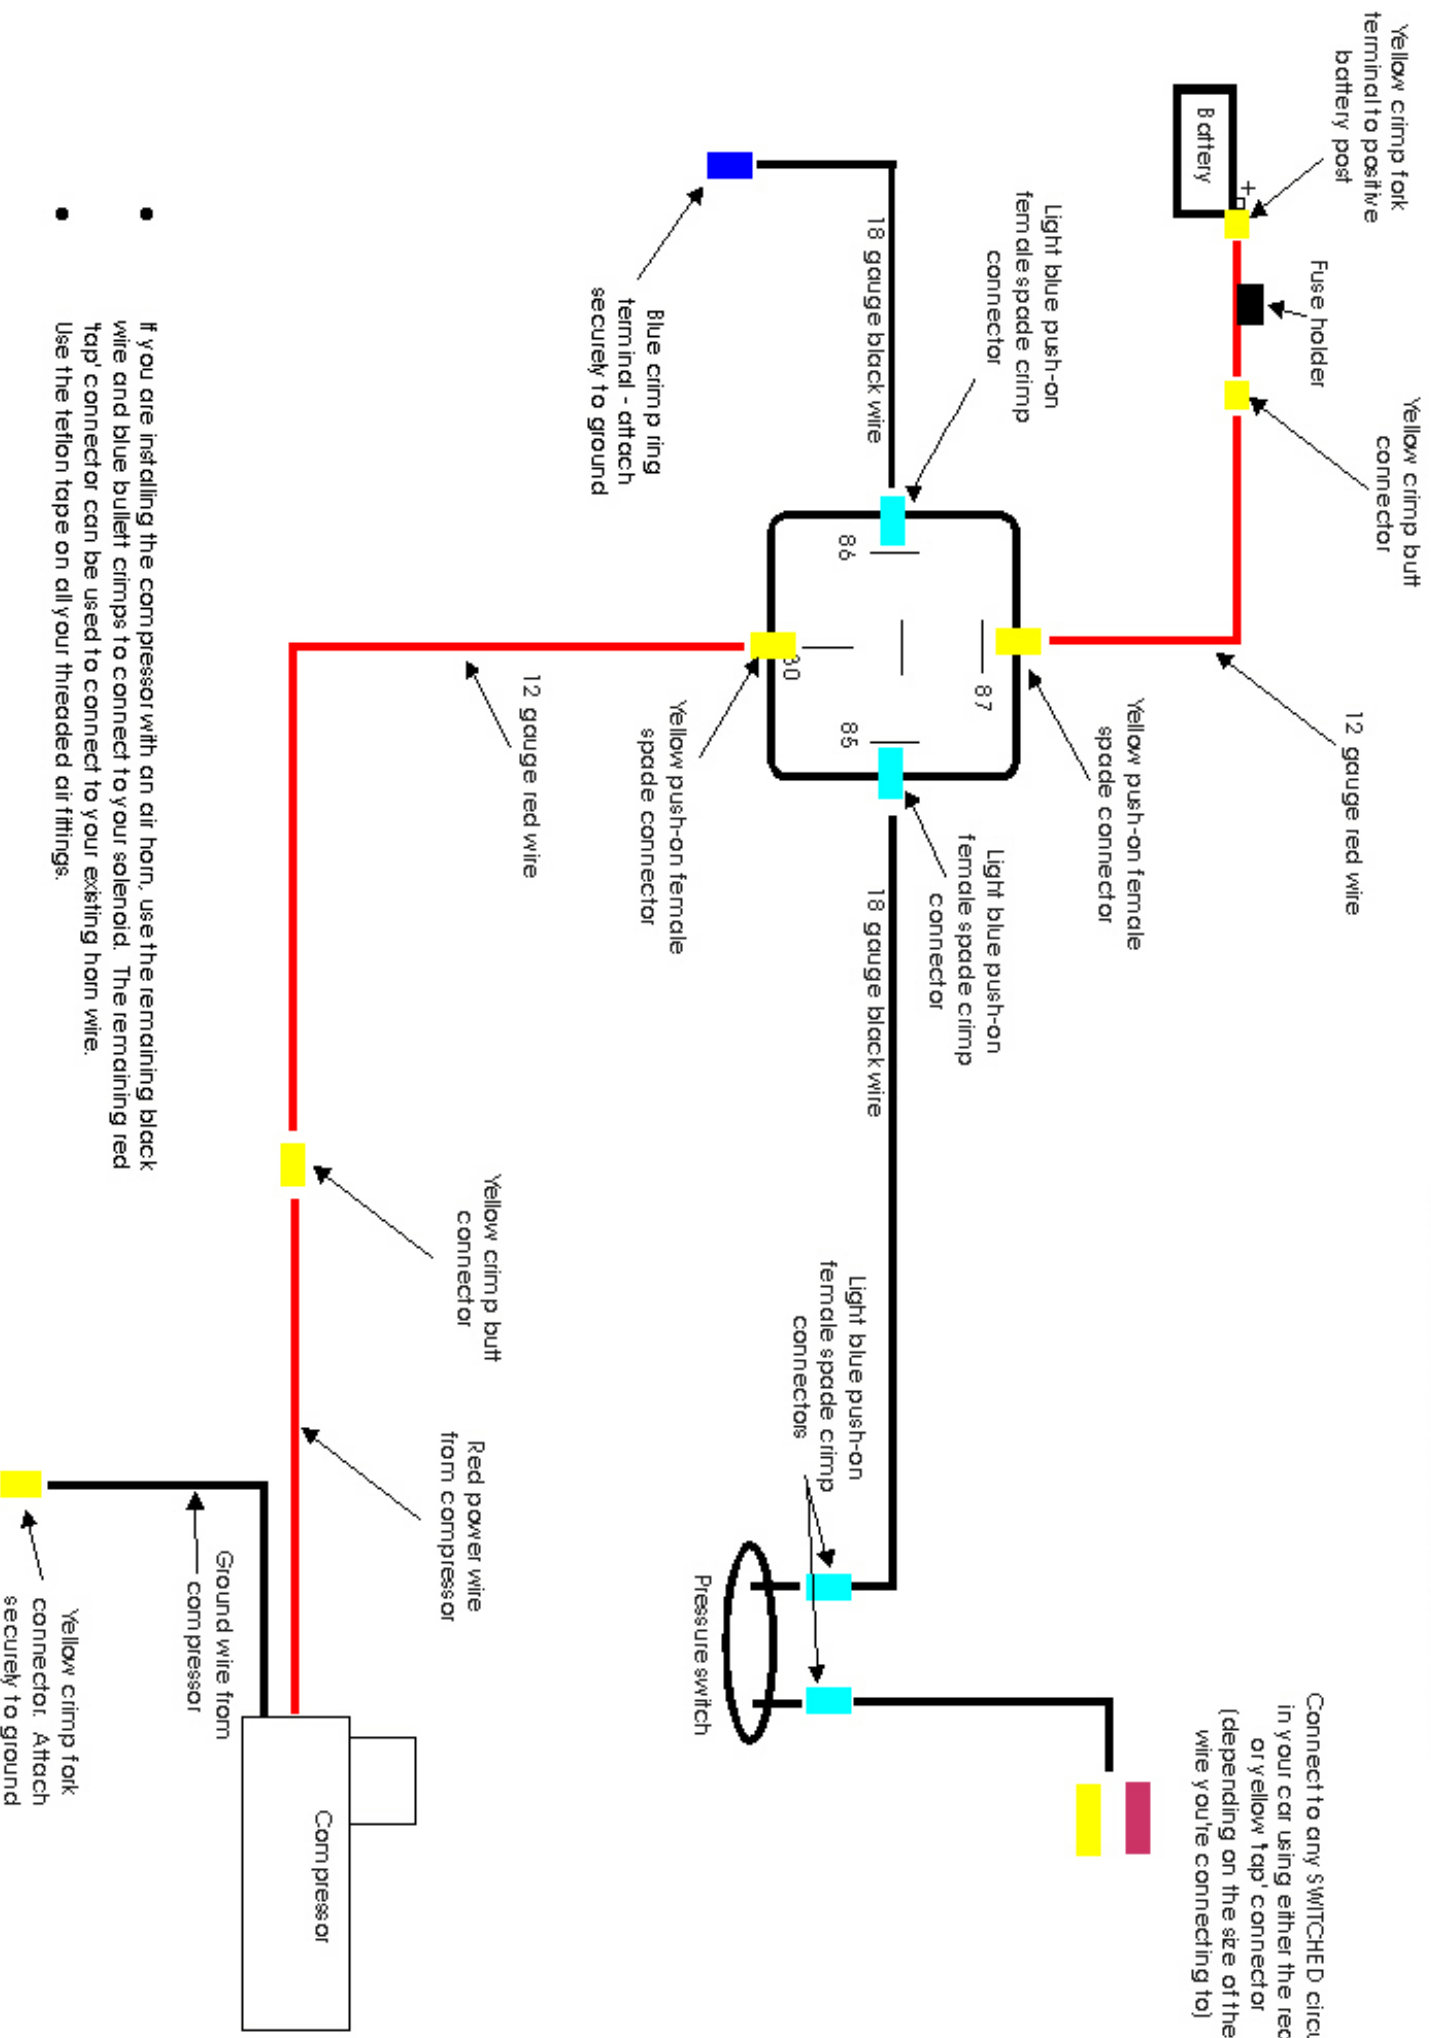

- If you are installing the compressor with an air horn, use the remaining black wire and blue bullet crimps to connect to your solenoid. The remaining red 'tap' connector can be used to connect to your existing horn wire.
- Use the teflon tape on all your threaded air fittings.