


# LAKWOOD 15200, 15201, 15202, 15203 & 15205 FASTENER REQUIREMENTS

## Ford 289, 302, 351C & 351W

For this product to meet SFI specification 6.1 the fasteners listed below must be used.

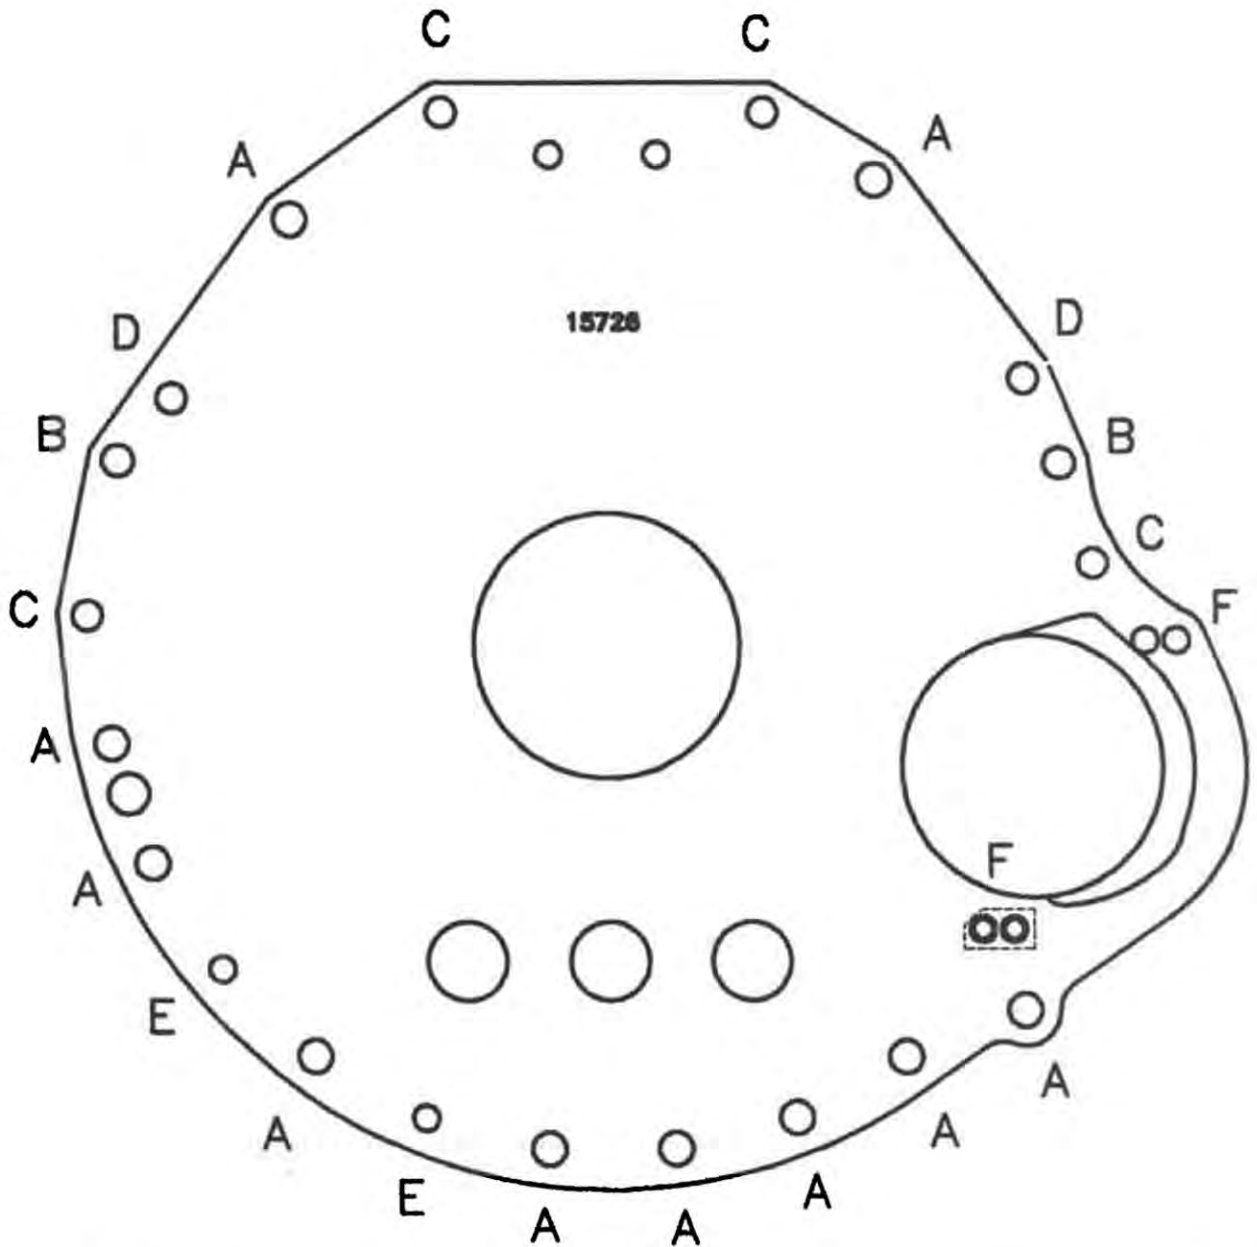

- A = 1/2-13 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- B = BELLHOUSING LOCATING PINS (NOT INCLUDED)
- C = 7/16-14 X 1" GRADE 8 BOLTS & WASHERS.
- D = 7/16-14 X 3/4" GRADE 8 HEX CAP BOLTS.
- E = 3/8-16 X 3/4" GRADE 8 BOLTS, WASHERS & NUTS.
- F = 3/8-16 X 3/4" GRADE 5 BOLTS (FOR STARTER).