



QUALITY... PLAIN & SIMPLE®

Tuned-Port Bracket Installation Instructions

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

Make sure the engine, transmission, body, and frame are properly grounded. We recommend using anti-seize lubricant on all aluminum threads.

All Lokar Installation Instructions can be found by visiting www.lokar.com/instructions.html.

This bracket is designed to be used with a Lokar Throttle Cable, Kickdown Cable, and Cruise Control Cable (if applicable).

DO NOT loosen the flat head bolt in the back of the Lokar bracket or remove the cable stud from the mounting base. **The cable stud is precisely indexed to the mounting base, and it may be difficult to get it reassembled in the correct position.**

Refer to Fig. 1, Fig. 2, and Fig. 3 for the component names.

Step 1: Disconnect any existing throttle cable, kickdown cable, and cruise control cable from the throttle body. If there is an existing throttle cable bracket installed, remove it from the intake manifold plenum.

Step 2: Install the Tuned-Port bracket onto the intake manifold plenum in the original location, using the provided M6 x 16mm socket head bolts.

Step 3: Refer to the installation instructions for the Lokar Throttle Cable, Kickdown Cable, and/or Cruise Control Cable. Remove the adjuster nuts from the cable adjuster(s) that came with the cable kit(s). **Fig. 4** Replace those nuts with the smaller outside diameter TPI nut(s) that came with this kit. Each cable adjuster gets only one nut. The flat side of the nut should be facing towards the Tuned-Port bracket when it is installed. **Fig. 5**

For Throttle Cable Only:

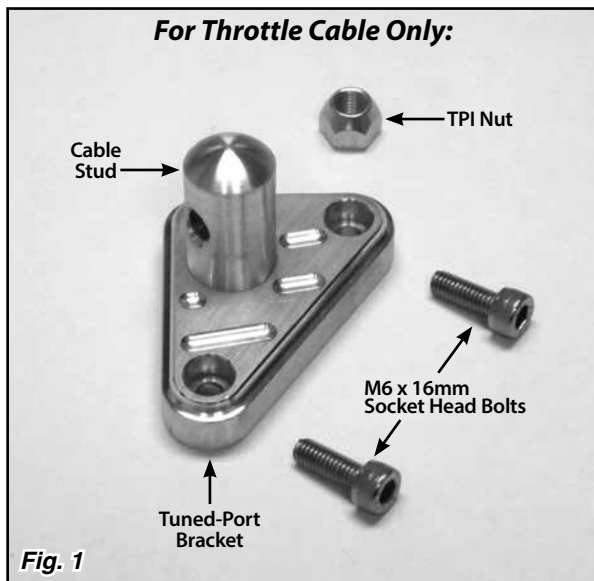


Fig. 1

For Throttle Cable and Kickdown Cable:

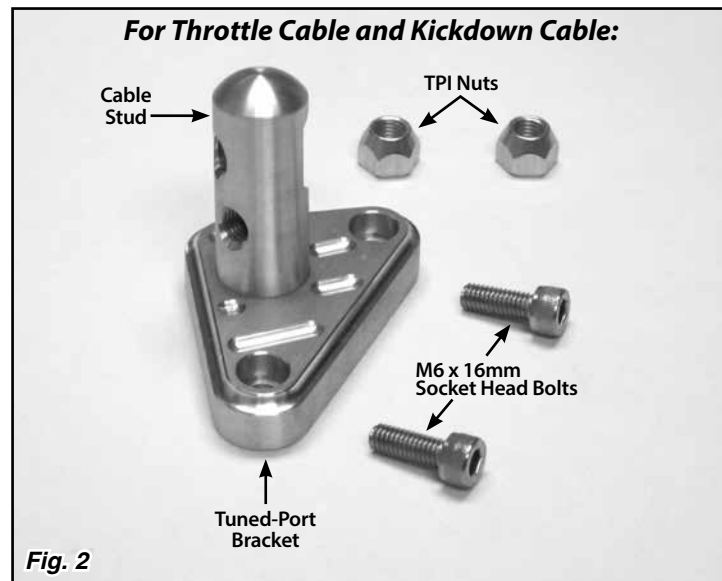


Fig. 2

Step 4: Thread the cable adjuster(s) for the throttle cable, kickdown cable, and/or the cruise control cable into the Tuned-Port bracket. Adjust the cable(s) as described in the installation instructions for the individual cable kits. **Fig. 6**

See **Fig. 7** for a completed installation with a Lokar Throttle Cable (not included) and Kickdown Cable kit (not included).

If you are installing a Lokar Kickdown Cable, you will NOT use the kickdown mounting bracket from the Kickdown Kit.

For Throttle Cable, Kickdown Cable and Cruise Control Cable:

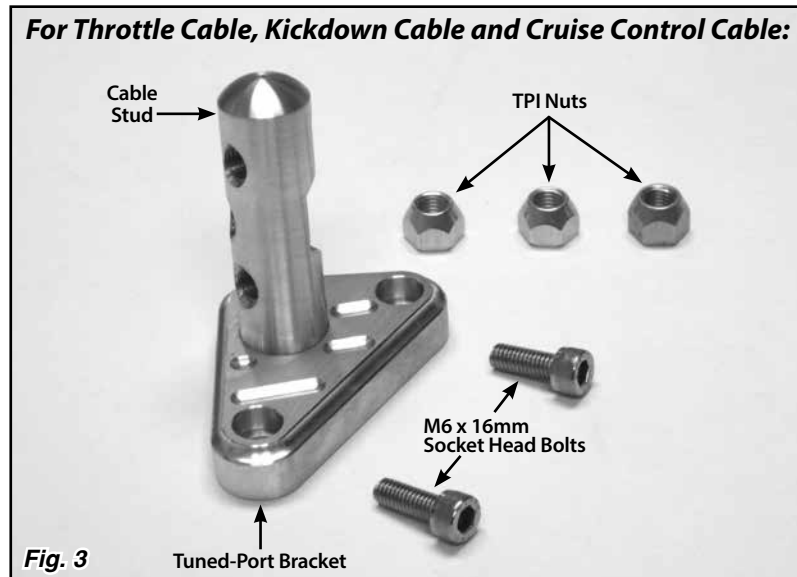


Fig. 3

Tuned-Port Bracket Installation Instructions

