



Premium Style. Lasting Performance.


Genesis™ and Genesis Elite™ Seal & Peel Tonneau Cover

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.

For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

NOTE: If installing on truck with bedliner, see step 11 before installing.

Contents

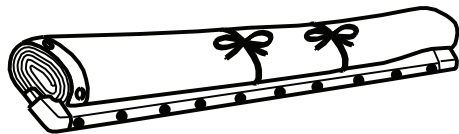

(A) Front rail with cover attached



(B) Driver Side Rail



(C) Passenger Side Rail


3X Short Box
4X Long Box



(D) Bows



(E) Rear Rail

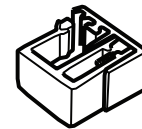


6X on Short Box
8X on Long Box

(F) Clamp Assembly



(G) Allen Wrench




(H) Corner Pads



(I) Foam

Tools Required

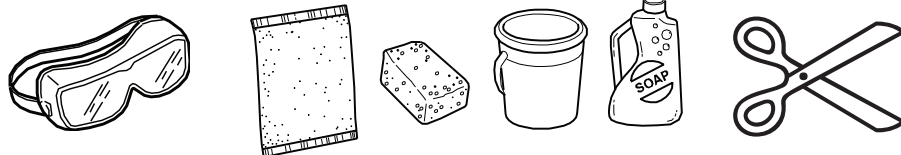

Important Safety Information




WARNING

- Do not drive with the cover partially attached. This may cause damage to your truck and your cover.
- Do not use any part of this tonneau as a tie down.
- Periodically check clamps for shifting due to road vibrations.
- Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- Do not use cleaning solvents of any kind.
- Do not use automatic "brush - style" car washes.

Preparation Before Installation


- Wash the upper rail surfaces of the truck bed.
- Be sure to completely dry the upper surfaces of your truck bed before installing your rails.

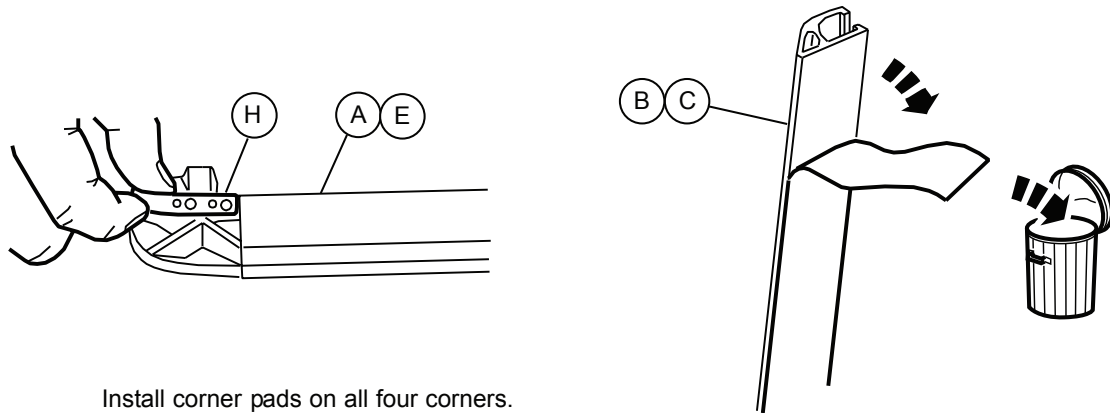

1

Install corner pads on all four corners.

Remove and discard the protective paper liner from the underside of the tonneau rails.

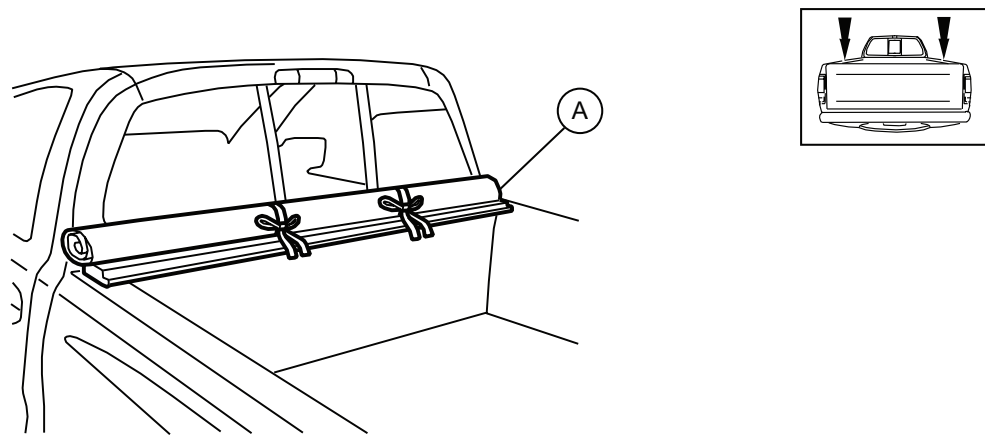


2

Place the front rail and cover assembly on the top of the truck bed next to the cab.


The cover has tie straps to keep it from being damaged when bulk hauling.

If a gap exist between the cover and bulkhead, proceed to step 3. If not to step 5.

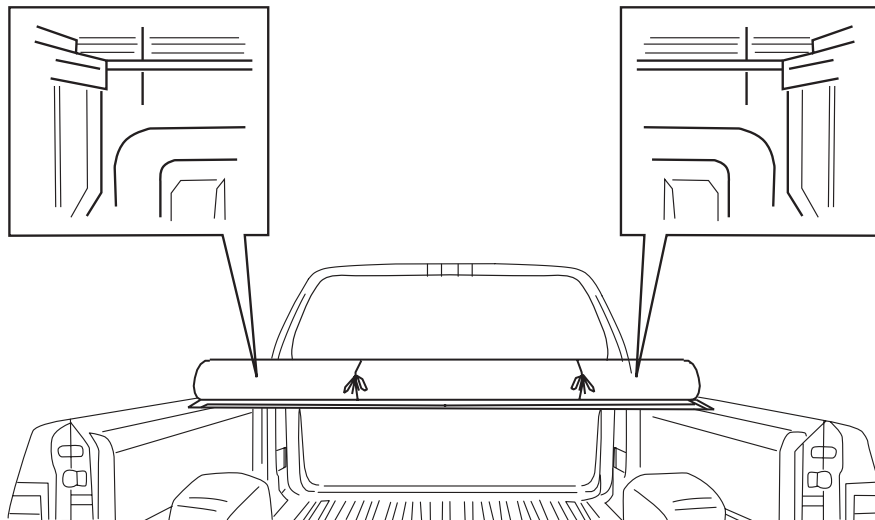



3

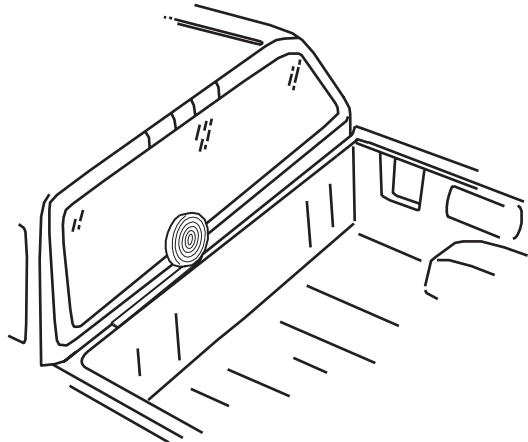4






Make sure there is no dust or debris on the front rail of the bed. Apply supplied foam tape to front bed rail than place cover as shown in step1, then proceed to step 5.





5

Apply to trucks with bedliner. will work not with over rail bedliners

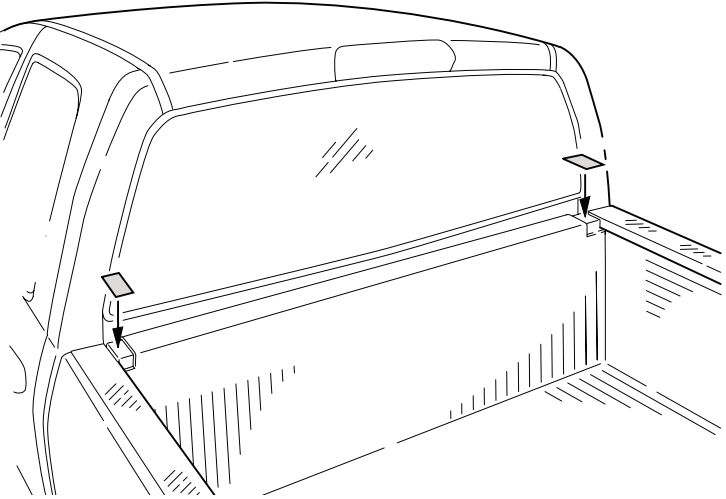


6

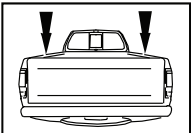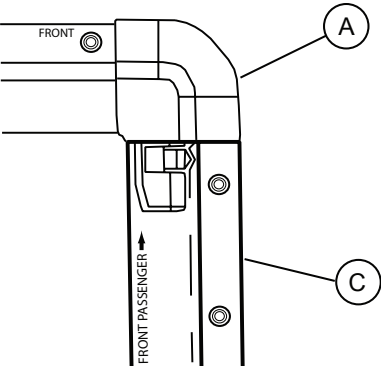

Connect the driver and passenger rails to the front rail. The arrow points to the front of the truck.

Slide the rail over molded leg of the front rail corner. You will hear a click sound when rail is in the correct position.

With tailgate closed, install the rear rail onto the side rails.

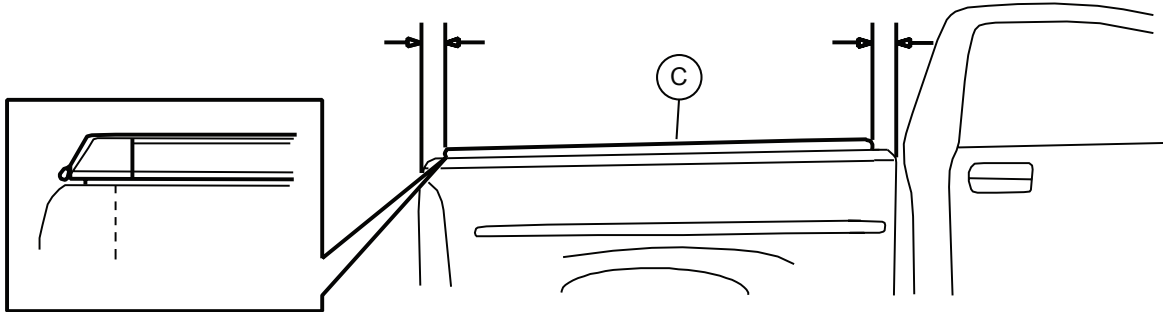


7

Center the frame on the truck. Next, center the side rail system from side to side.

For ease of installation the side rails have been marked with the clamp locations.

Place a clamp centered at each of the locations marked on the side rails.

Insert the upper clamp all the way into the side rail and tighten with the allen wrench (G) provided.

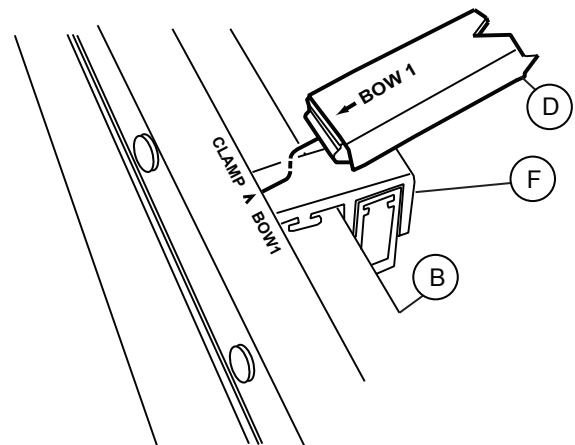


8

For application with bed liners refer to the bed liner instruction in Frame #11.

The bow rests upon the top of the clamp with each of its legs draped over the sides.




Some truck boxes are not square and require bows of different lengths. On these trucks the bows will be marked as Bow 1, Bow 2, etc.

The location closest to the cab is bow 1.

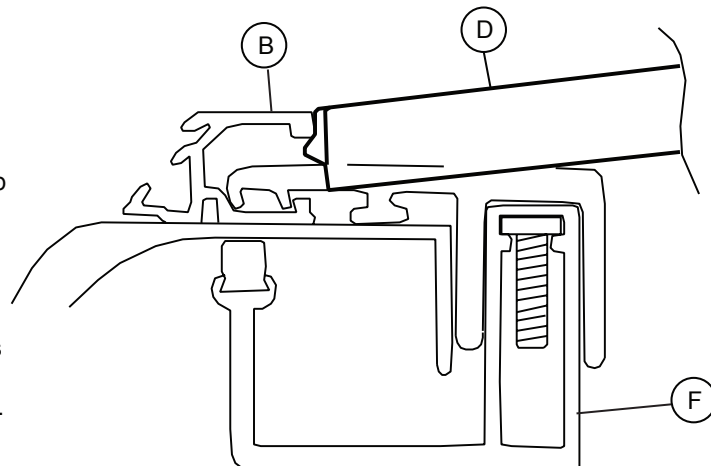

9

Unroll cover and follow directions below to fasten cover to tonneau rails.

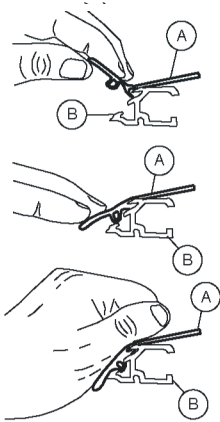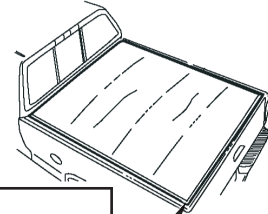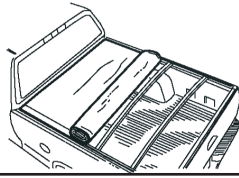

Place tan tip of the cover retainer under the upper lip of tonneau rail.

Rotate the retainer downward. The tension of the cover will fully engage the cover retainer into the tonneau rail.

Note: it is recommended to complete this step on all three sides before proceeding to the next step.

Using palm pressure, glide hand down the length of each tonneau rail to lock the cover retainer into the tonneau rail.


To disengage cover, pull upward and out, starting at a corner end.

10


⚠ CAUTION: USE SAFETY GLASSES WHEN CUTTING



For installation with bedliners.

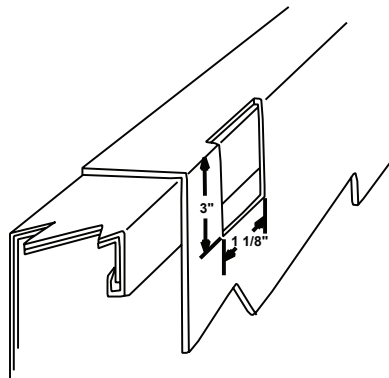

Cut a 1 1/8" x 3" hole in the bedliner at each clamp location.

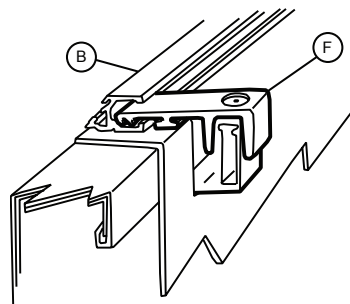


11

Inspection After Installation

1. After installation is complete, confirm proper operation and that all clamps are tightened.

Care and Cleaning

1. Wash only with mild soap & dry with a clean cloth.
2. Do not use automatic "brush - style" car washes.
3. Do not use cleaning solvents of any kind.
4. Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
5. We recommend the same quality products normally used for vinyl tops to keep your cover clean. When using a protectant, be sure that it is water based.
6. Periodically check clamps for shifting due to road vibrations.
7. Do not use any part of this tonneau as a tie down.
8.  Do not drive with the cover partially attached. This may cause damage to your truck and your cover.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc.

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment.

We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

LUND®

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

