

INSTALLATION INSTRUCTIONS AND PARTS LIST

STAINLESS STEEL BAJA STEPS:

431033 2010 AND NEWER DODGE RAM HD CREW CAB

431035 2010 AND NEWER DODGE RAM HD MEGA CAB

491033 2010 AND NEWER DODGE RAM HD CREW CAB, SST

491035 2010 AND NEWER DODGE RAM HD MEGA CAB, SST



NO DRILL INSTALLATION

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE BAJA STEPS AND BRACKETS.
 - 2.1. PLACE BAJA STEPS ON A FLAT SURFACE AND ATTACH THE MOUNTING BRACKETS (ITEM #3, & 4) AS SHOWN IN FIG 1, & 2. **NOTE: THE LUVERNE SERIAL NUMBER DECAL GOES ON THE FRONT LEFT HAND (DRIVERS) SIDE.**
 - 2.2. LEAVE 1/2" BOLTS (ITEM #6) FINGER TIGHT UNTIL STEPS ARE MOUNTED ON THE VEHICLE, THEN THE 1/2" BOLTS MUST BE TORQUED TO 65 LB FT.
3. ASSEMBLE THE DOUBLE ENDED STUD & FASTENERS TO THE FRONT & REAR BRACES AS FOLLOWS: (**NOTE THAT THE LONGER BOLT WILL BE ATTACHED TO THE FRONT BRACKET**).
 - 3.1. INSTALL 3/8" SERRATED FLANGE NUTS (ITEM #12) **BACKWARDS**, TO THE END OF THE THREAD, ON EACH END OF THE DOUBLE ENDED STUD (ITEM #10 & #14).
 - 3.2. ON THE SHORT THREADED END OF THE STUD, INSTALL A 3/8" FLAT WASHER (ITEM #13). THEN, PUSH THE 3/4" THICK RUBBER WASHER (ITEM #11) & FLAT WASHER TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE DOUBLE ENDED STUD SHOULD BE RECESSED BACK IN THE HOLE OF THE RUBBER WASHER APPROXIMATELY 3/16").
 - 3.3. INSTALL THE LONG THREADED END OF THE STUD ASSEMBLY THRU THE HOLE IN THE MOUNTING BRACKET (JUST ABOVE THE NERF BAR TUBE) AND INSTALL A 3/8" SERRATED FLANGE NUT AS SHOWN. (FINGER TIGHT ONLY).
4. REMOVE THE FOUR (4) APPLICABLE M12-1.75 BODY MOUNT BOLTS FROM THE VEHICLE. (**THE FRONT BOLTS AND WASHERS ARE NOT REUSED**).
5. POSITION THE BAJA STEP ASSEMBLY UP UNDER THE BODY MOUNT METAL BUSHING:
 - 5.1. ON THE FRONT BODY MOUNTS, INSTALL M12-1.75 X 110mm (APPROX. 4-3/8" LONG) HEX HEAD BOLTS (ITEM #7), 1/2" LOCK WASHERS (ITEM #8) AND 1/2" FLAT WASHERS (ITEM #9) UP THRU THE HOLE IN THE BAJA STEP MOUNTING BRACKET AND THE BODY MOUNTING BUSHING AS SHOWN.
 - 5.2. ON THE REAR BODY MOUNT INSTALL THE FACTORY BOLT AND WASHER THRU THE HOLE IN THE BAJA STEP MOUNTING BRACKET AND BODY MOUNT BUSHING AS SHOWN.
 - 5.3. TORQUE ALL M12-1.75 BODY MOUNTING BOLTS TO 45 LB. FT.
 - 5.4. POSITION THE STUD ASSEMBLIES SO THAT THE RUBBER WASHER IS SNUG UP AGAINST THE FRAME. TIGHTEN THE 3/8" SERRATED FLANGE NUTS ON EITHER SIDE OF THE REAR BRACKET TO LOCK THE STUD ASSEMBLY IN POSITION.



(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

INSTALLATION INSTRUCTIONS AND PARTS LIST

STAINLESS STEEL BAJA STEPS:

431033 2010 AND NEWER DODGE RAM HD CREW CAB

431035 2010 AND NEWER DODGE RAM HD MEGA CAB

491033 2010 AND NEWER DODGE RAM HD CREW CAB, SST

491035 2010 AND NEWER DODGE RAM HD MEGA CAB, SST



NO DRILL INSTALLATION

SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|----------|-----|---|
| 1 | 552193 | 2 | BAJA STEP WLDMNT-LH\RH, BLK,430933/431033 |
| | | | |
| 1 | 552187 | 2 | BAJA STEP WLDMNT-LH\RH, SST, 430933/431033 |
| | | | |
| 1 | 552200 | 1 | BAJA STEP WLDMNT-RH, BLK,431035 |
| 2 | 552201 | 1 | BAJA STEP WLDMNT-LH, BLK,431035 |
| | | | |
| 1 | 552223 | 1 | BAJA STEP WLDMNT-RH, SST, 491035 |
| 2 | 552224 | 1 | BAJA STEP WLDMNT-LH, SST, 491035 |
| | | | |
| 3 | 551468 | 2 | MOUNTING BRACKET FRONT, LH/RH |
| 4 | 550308 | 1 | MOUNTING BRACKET REAR, LH |
| 5 | 550309 | 1 | MOUNTING BRACKET REAR, RH |
| 6 | 104249 | 4 | SCREW-HEX HEAD, SER FLNG,1/2-13 X 2.0, ZP |
| 7 | 103444 | 2 | BOLT-HEX HD CAP,M12-1.75 X 110mm(4-3/8"),ZP |
| 8 | 100121 | 2 | WASHER-LOCK,1/2",ZP |
| 9 | 100118 | 2 | WASHER-FLAT,1/2",ZP |
| 10 | 108448 | 2 | STUD-DOUBLE ENDED,STL,3/8-16 UNC X 6.00",ZP |
| 11 | 102592 | 4 | WASHER-RUBBER,.354 ID X 1.00 OD X .75 THK |
| 12 | 100181 | 12 | NUT-SERRATED FLANGE,HEX,3/8-16 UNC,ZP |
| 13 | 100062 | 4 | WASHER-FLAT,3/8",ZP |
| 14 | 104687 | 2 | STUD-DOUBLE ENDED,STL,3/8-16 UNC X 7.00",ZP |




(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

SERVICE PARTS LIST

MODEL NO. -431033,35

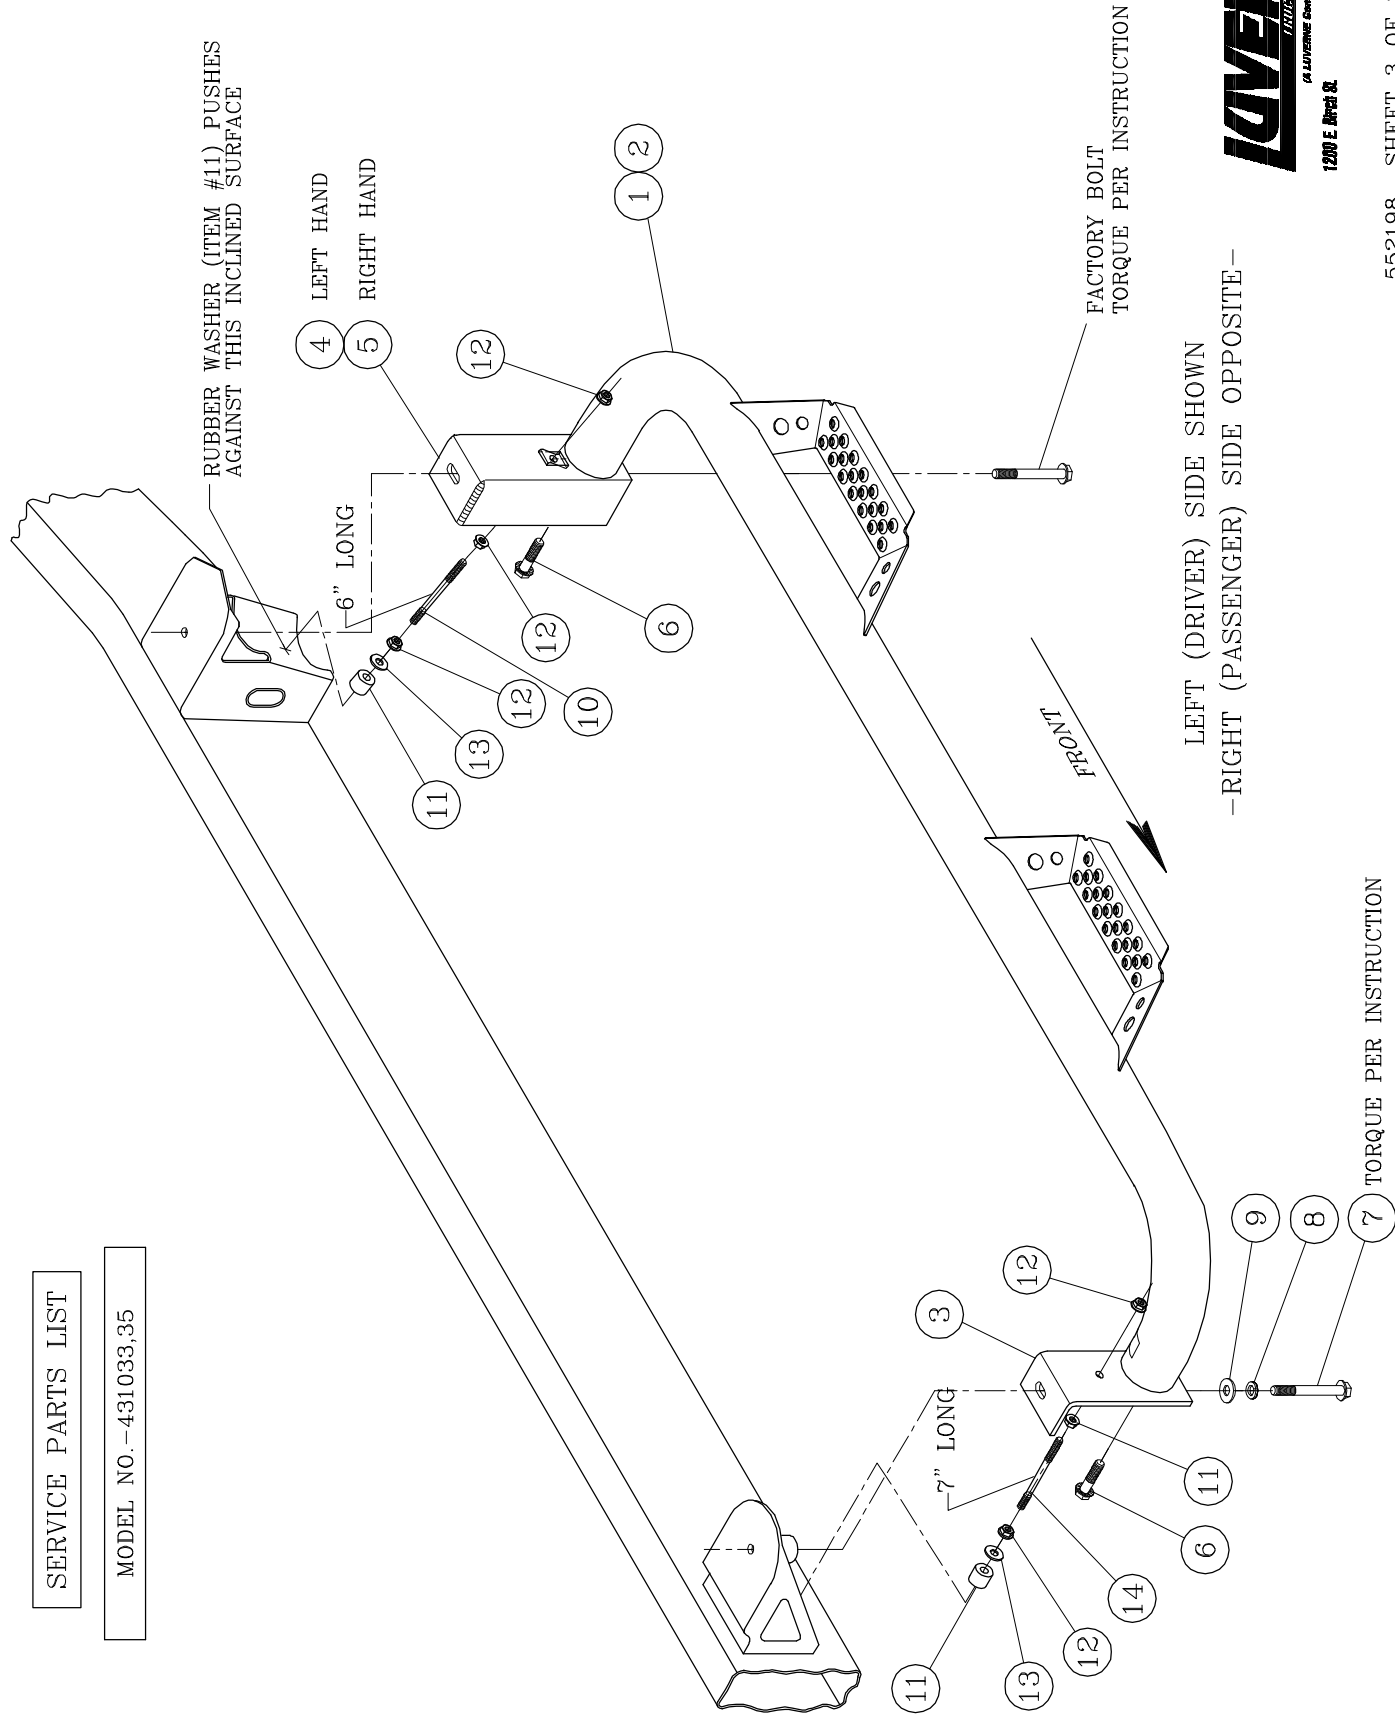

LAVERNE
1200 E & 1200 F
A Laverne Company

1200 E April 82 Printed 80 57086

TORQUE PER INSTRUCTION