

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: 450713 AND 460713 NERF BARS:
2007 AND NEWER GM CREW CAB PICKUPS



NO DRILL INSTALLATION

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE NERF BAR TUBES AND MOUNTING BRACKETS AS FOLLOWS.
NOTE: THE 1" X 3" SERIAL NUMBER DECAL IS LOCATED ON THE FRONT LEG OF THE LEFT (DRIVERS SIDE) NERF BAR ASSEMBLY.
 - 2.1 LAY THE NERF BAR/PAD ASSEMBLIES (ITEM #1) ON A FLAT SURFACE. (LEFT & RIGHT HAND ASSEMBLIES SHOULD BE MIRROR IMAGES OF ONE ANOTHER).
 - 2.2 ATTACH THE FRONT (5-1/4" TALL) BRACKET (ITEM #3) AND REAR (7-5/8" TALL) BRACKET (ITEM #4) TO THE NERF BAR AS SHOWN. USE 1/2-13 X 2" LONG HEX HEAD BOLTS (ITEM #5). TORQUE THESE BOLTS TO 65 LB. FT.

NOTE:

DUE TO EXCESSIVE THREAD LOCKER IN THE BODY MOUNT BOLT AREA ON THE 2010+ GM SILVERADO/SIERRA, USE CAUTION WHEN REMOVING THE BODY MOUNT BOLTS TO REDUCE THE RISK OF CAUSING DAMAGE TO THE THREADED INSERTS INSIDE THE VEHICLE.


3. REMOVE THE FOUR (4) APPLICABLE FACTORY BODY MOUNT BOLTS FROM THE VEHICLE.
 - 3.1 THESE FOUR (4) BOLTS ARE REUSED IN THIS INSTALLATION.
 - 3.2 THE BODY MOUNT STEEL WASHER PLATES WITH RUBBER CUSHIONS ARE REUSED BETWEEN THE BODY MOUNT AND THE NERF BAR MOUNTING BRACKET.
4. POSITION THE NERF BAR ASSEMBLY UP UNDER THE VEHICLE AND ATTACH THE FRONT AND REAR BRACKETS TO THE BODY MOUNTS WITH FACTORY BODY MOUNT BOLTS AS SHOWN.
 - 4.1 USE THE EXISTING M14-2.00 X 120mm (4-3/4") LONG FACTORY BODY MOUNT BOLT AND 1/2" FLAT WASHERS (ITEM #6 & #7).
 - 4.2 TORQUE ALL BODY MOUNT BOLTS TO 65 LB. FT.

SERVICE PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	550541	2	NERF BAR WLDMT – SST, LH & RH, 460714
1	550548	2	NERF BAR WLDMT – BLACK, LH & RH, 450714
2	103950	4	PAD- STEP, NB, BLK, 20.00 LG
3	550130	2	BRKT- MTG, NB, LH/RH, FRT, TAHOE
4	549077	2	BRKT- MTG, NB, SUB/YUKON XL 1500,LH/RH, REAR
5	104249	4	BOLT-HEX HD CAP, SERRFLG, 1/2 X 2.00" LG,ZP
6	100118	2	WASHER- FLAT,.562 ID X 1.38 OD X .109 T, ZP
7	103779	2	WASHER- CLIPPED, FLAT,.1/2", ZP

INSTALLATION INSTRUCTION AND PARTS LIST


MODEL NO. - 450014
- 460014

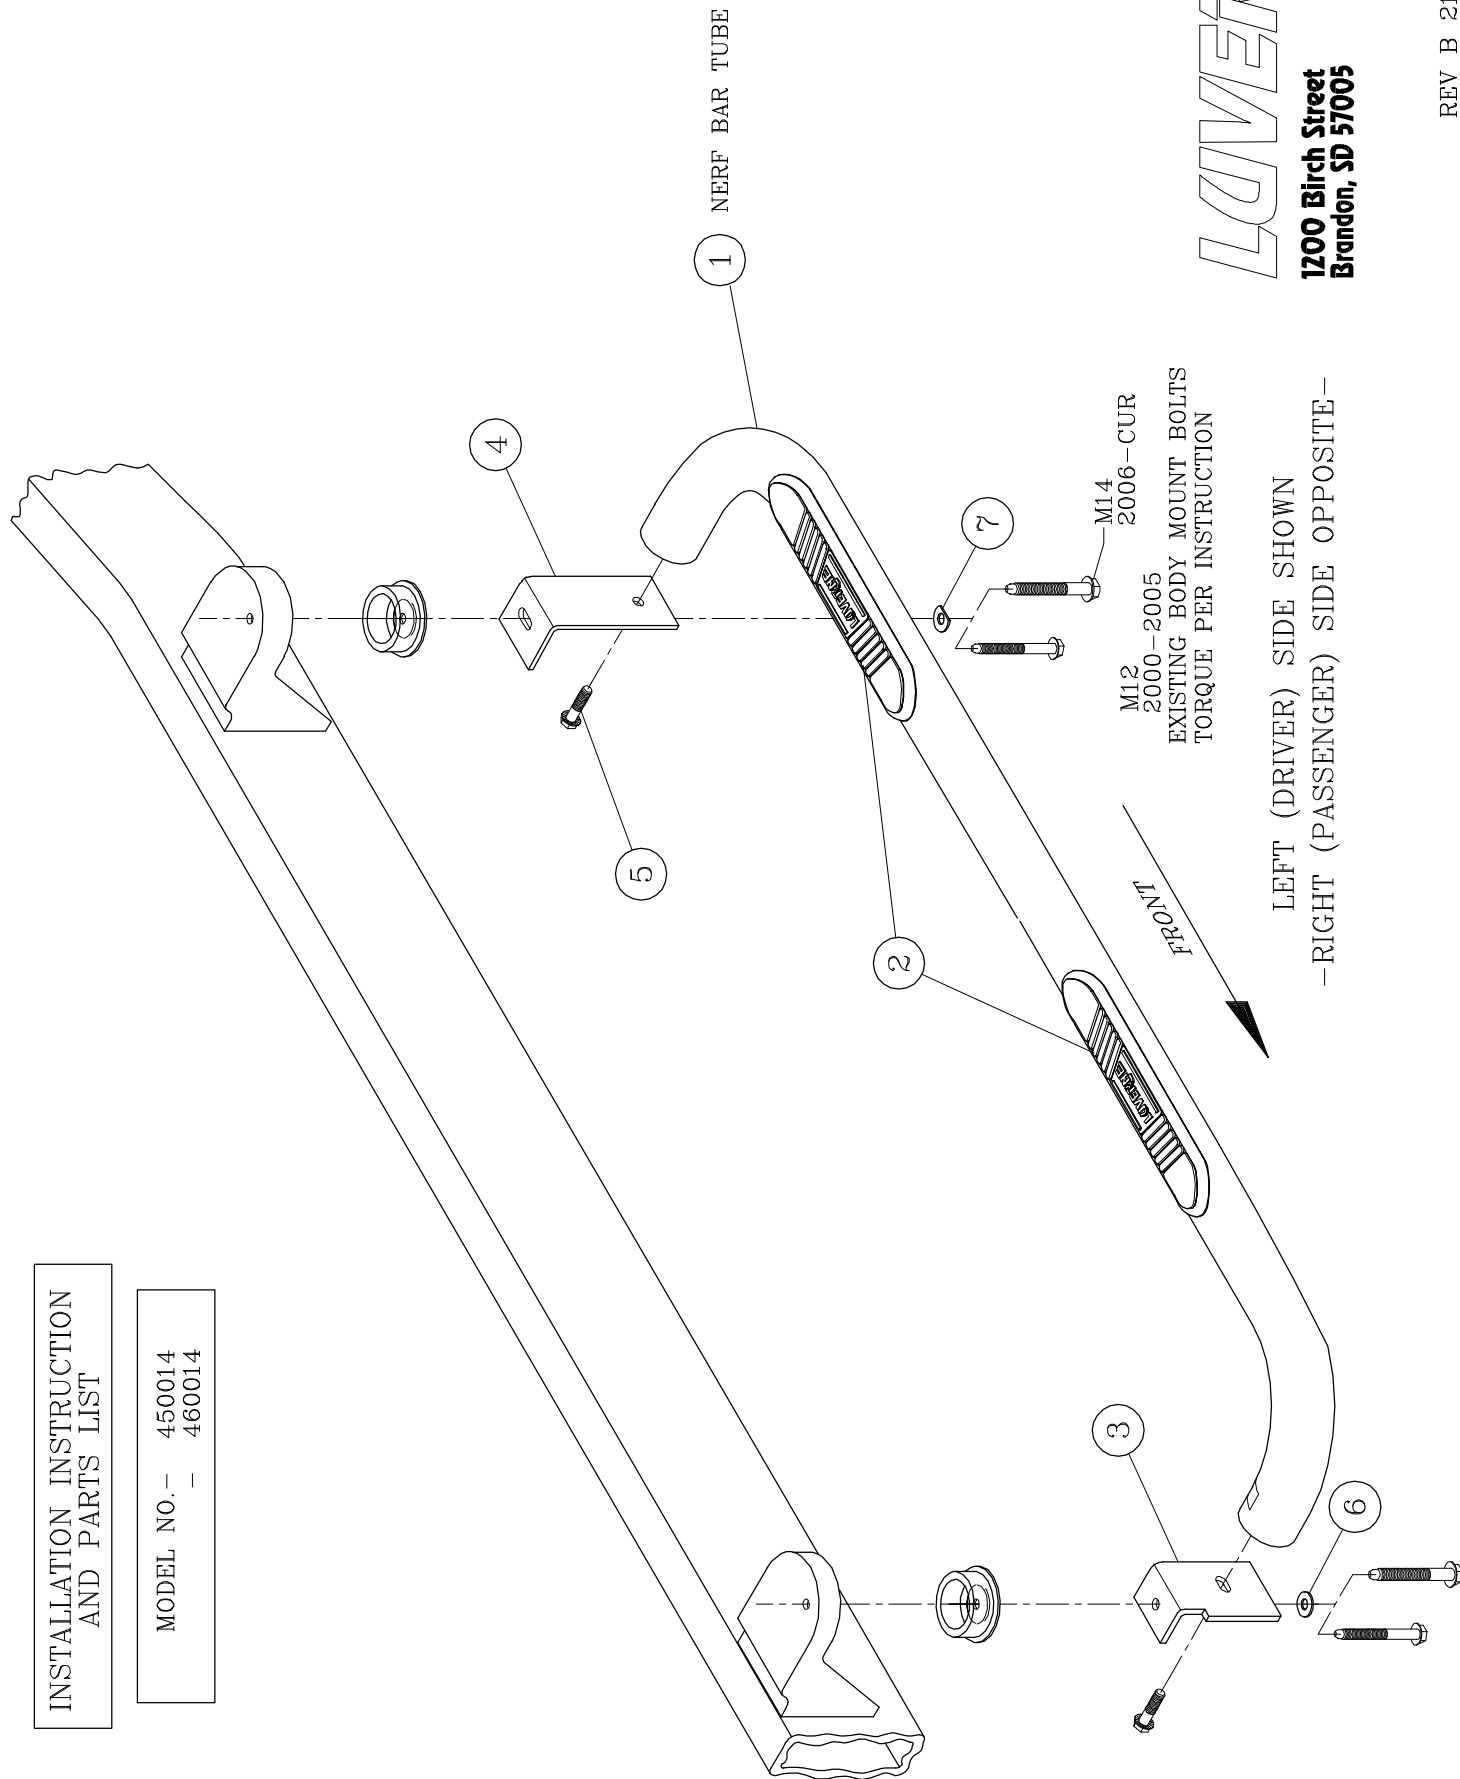

LAVERGNE
TRUCK
EQUIPMENT
INC.
1200 Birch Street
Brandon, SD 57005

INSTALLATION INSTRUCTION
AND PARTS LIST

MODEL NO. - 450713
- 460713

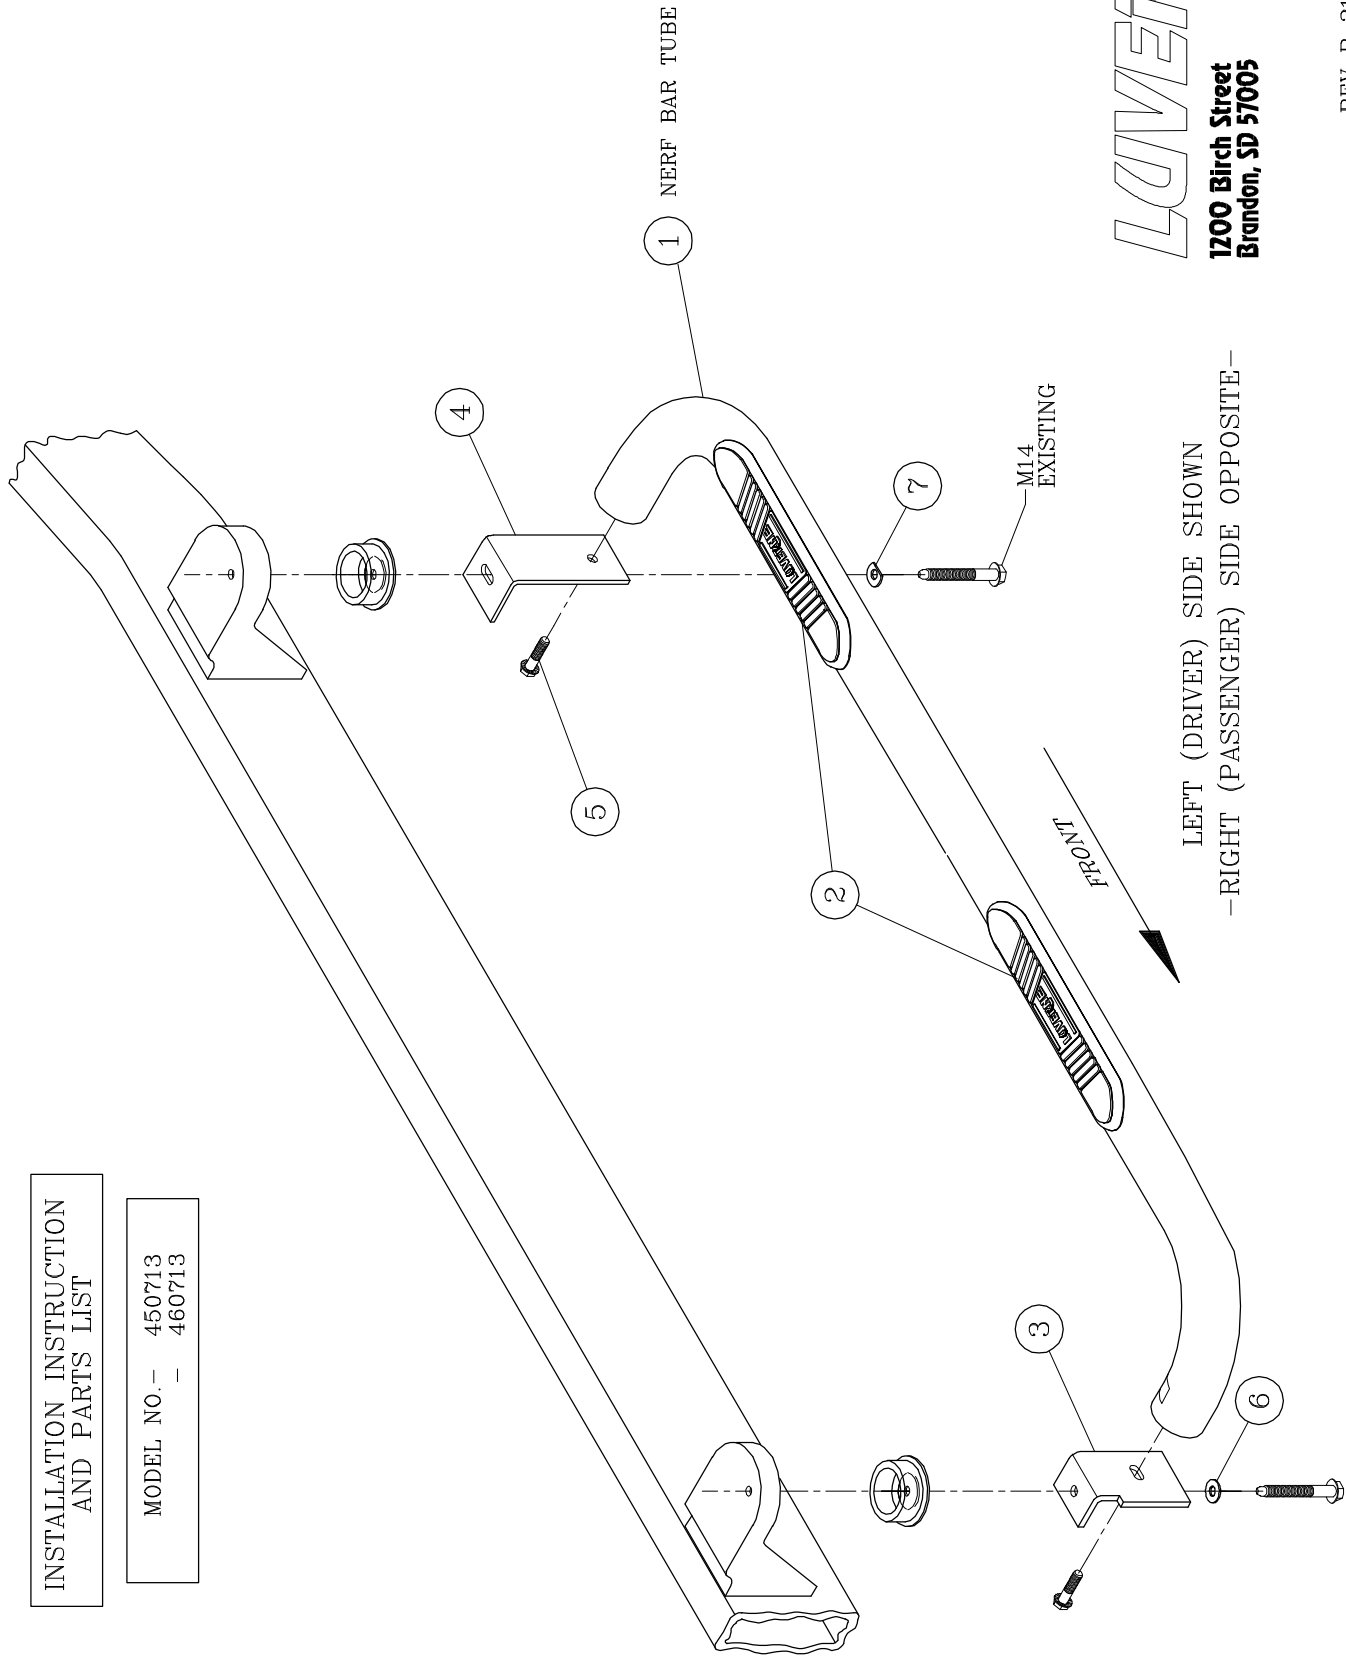

LAVERNE
TRUCK
EQUIPMENT
INC.
1200 Birch Street
Brandon, SD 57005

REV B 21MAY14
REV A 03SEPT10
550754 SHEET 2 10OCT06