

# INSTALLATION INSTRUCTIONS AND PARTS LIST

## VEHICLE APPLICATION:

**MODEL 500930 (12" X 20") FRONT CONTOURED SPLASHGUARDS**

**500932 (12" X 23") FRONT CONTOURED SPLASHGUARDS**

2009 AND NEWER DODGE RAM 1500 SERIES TRUCKS

2010 AND NEWER DODGE RAM HD SERIES TRUCKS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.

### **MOUNTING 500930 OR 500932:** (SEE SHEET #2)

2. INSTALL THE SPLASHGUARDS AS FOLLOWS:
  - 2.1. ATTACH THE METAL ZEE CLIP (ITEM #6) TO THE UPPER INBOARD HOLE IN THE SPLASHGUARD AS SHOWN USING THE #10-24 X 3/4" TRUSS HEAD SCREWS (ITEM #7), 1/4" FLAT WASHERS (ITEM #9) AND 10-24 SERRATED FLANGE NUTS (ITEM #8). FINGER TIGHTEN ONLY.
  - 2.2. REMOVE THE (2) FACTORY WHEEL WELL LINER RETAINER SCREWS FROM THE METTALIC FLANGE OF THE WHEEL WELL. (THESE FASTENERS ARE **NOT** REUSED).
  - 2.3. INSERT (2) #8 METAL U-CLIPS (ITEM #14) INTO THE METTALIC WHEEL WHELL FLANGE OVER THE EXISTING HOLES.
  - 2.4. POSITION THE RUBBER SPACER (ITEM #5) BETWEEN THE SPLASHGUARD AND THE WHEEL WELL FLANGE AND INSTALL (2) 8-15 X 1-3/4" SCREW (ITEM #10) AND #8 FLAT WASHER (ITEM #11) THRU THE **SECOND** AND **FORTH** HOLE DOWN FROM THE TOP IN THE SPLASHGUARD AND INTO THE METAL U CLIPS. (LEAVE THESE FASTENERS FINGER TIGHT).
  - 2.5. MOVE THE SPLASHGUARD IN OR OUT AS DESIRED. LEVEL THE SPLASHGUARD (IT SHOULD BE IN LINE WITH THE FRONT TIRE AND MATCH THE REAR MUDGUARD) AND THEN TIGHTEN ALL THE FASTENERS.
  - 2.6. USING THE HOLE ON THE TOP OF THE ZEE CLIP AS A PILOT, DRILL A 5/16" DIA HOLE THRU THE URETHANE WHEEL WELL LINER AND FASTEN WITH 5/16-18 X .75 BUTTON HEAD SCREWS (ITEM #12), AND 5/16 -18 SERRATED FLANGE NUTS (ITEM #13). TIGHTEN FASTENERS.
  - 2.7. REPEAT FOR THE OPPOSITE SIDE.

NOTE: THE 8-15 X 1-3/4" SCREWS (ITEM #10) ARE EXTRA LONG TO ACCOMMODATE THE VEHICLES WITH FENDER FLARES.



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV B 10MAY10  
REV A 07DEC09  
550221 SHEET 1 21OCT08

SERVICE PARTS LIST

2009 DODGE RAM  
 MODEL NO. - 500930 FRONT  
 MODEL NO. - 500932 FRONT

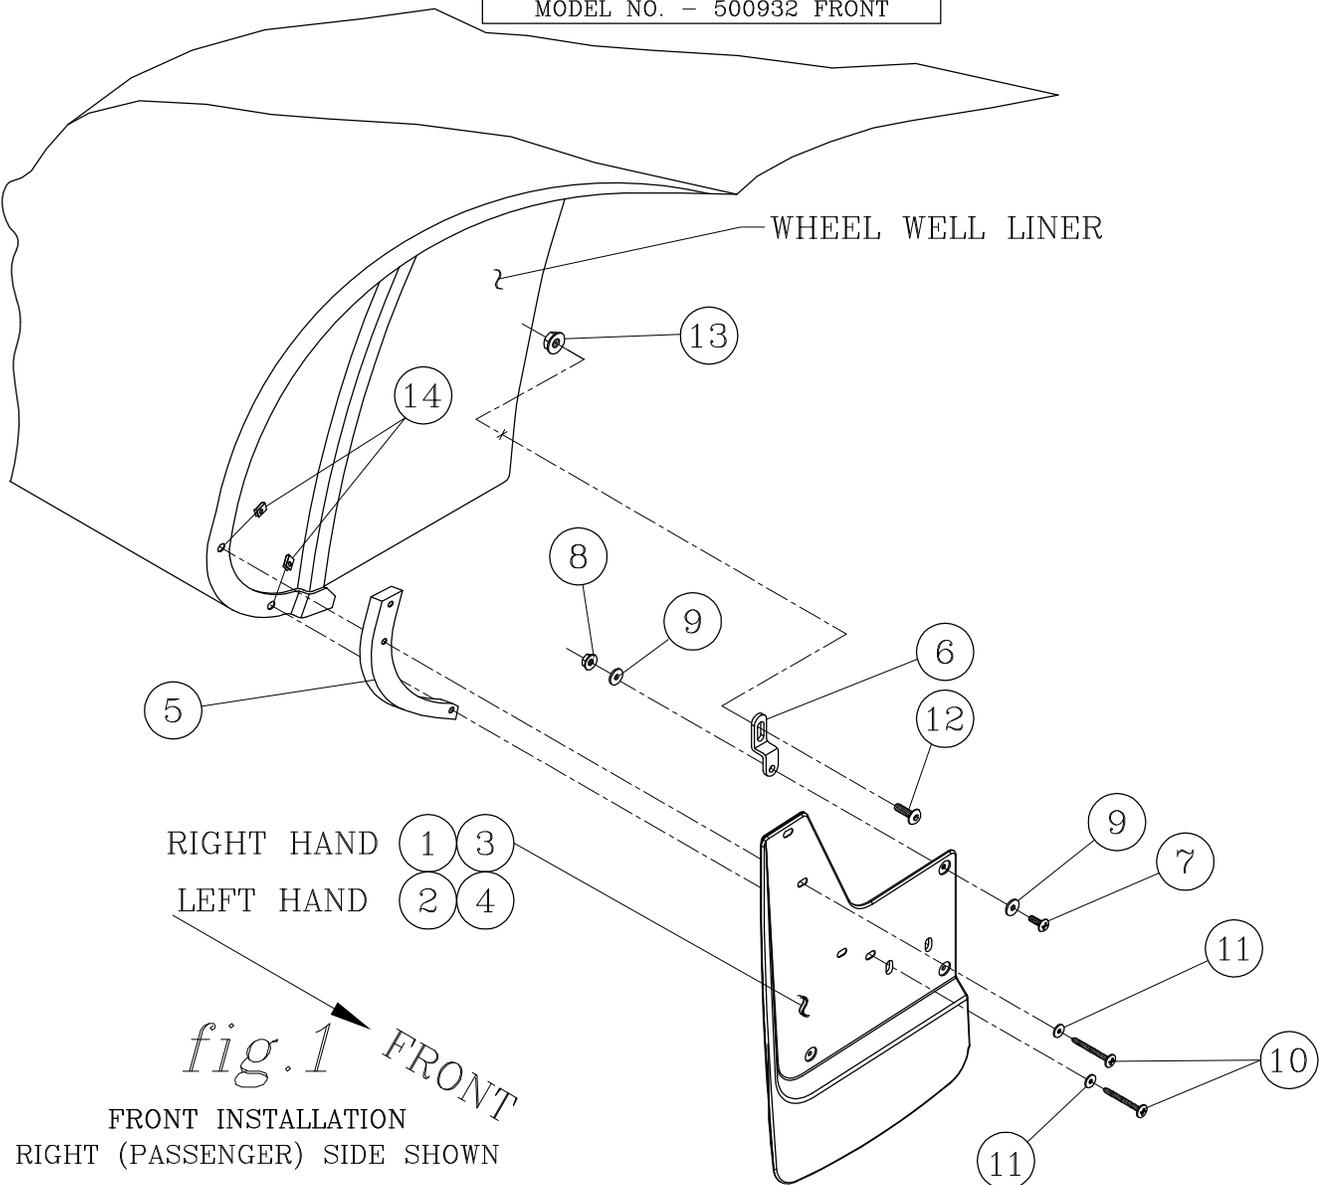


fig.1 FRONT  
 FRONT INSTALLATION  
 RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	550214	1	SPLASH GUARD-MOLDED,12 X 20,DODGE,RH
2	550215	1	SPLASH GUARD-MOLDED,12 X 20,DODGE,LH
1	550218	1	SPLASH GUARD-MOLDED,12 X 23,DODGE,RH
2	550219	1	SPLASH GUARD-MOLDED,12 X 23,DODGE,LH
3	550216	1	INSERT-SPLASH GUARD,SST,09 DODGE,RH
4	550217	1	INSERT-SPLASH GUARD,SST,09 DODGE,LH
5	550224	2	SPACER-RUBBER, FRONT, 09 DODGE
6	605330	2	ZEE CLIP, SLOTTED, SST
7	103775	2	SCREW-TRUSS HD, XREC, SST, #10-24 X .75"
8	104261	2	NUT-HEX, SERR FLG, SST, #10-24
9	101370	4	WASHER- FLAT, SST, .281 X .625 X .062
10	107642	4	SCREW-PHILLIPS HD, TYPE B,8-15X1-3/4",SST
11	105511	4	WASHER-FLAT, SST, .203 X .625 X .062
12	100700	2	SCREW-BTN HD,5/16-18 X .75
13	102680	2	NUT-HEX, SERR FLG, SST, 5/16-18
14	105518	4	U-CLIP-THREADED, 8-15,BLK



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV B 10MAY10  
 REV A 07DEC09  
 550221 SHEET 2 21OCT08