

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION:

MODEL 500931 (12" X 20") REAR CONTOURED SPLASHGUARDS

MODEL 500933 (12" X 23") REAR CONTOURED SPLASHGUARDS

2009 AND NEWER DODGE RAM 1500 SERIES TRUCKS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.

MOUNTING 500931 OR 500933 SPLASHGUARDS ON THE REAR: (SEE SHEET #2)

2. INSTALL THE SPLASHGUARDS AS FOLLOWS:
 - 2.1. REMOVE TWO FACTORY WHEEL WELL LINER RETAINER SCREWS FROM THE METTALIC FLANGE OF THE WHEEL WELL. (THESE FASTENERS ARE **NOT** REUSED).
 - 2.2. IF THERE ARE NO FENDER FLARES, REMOVE THE PLASTIC ROCK GUARD ON THE BOTTOM BY REMOVING THE (2) PLASTIC PLUGS. (THIS ROCK GUARD WILL **NOT** BE REUSED).
 - 2.3. INSERT (2) #8 METAL U-CLIPS (ITEM #12) INTO THE METTALIC WHEEL WHELL FLANGE OVER THE EXISTING HOLES.
 - 2.4. REMOVE THE HEX HEAD FACTORY FENDER BRACE BOLT FROM THE BOTTOM OF THE BOX ROCKER PANEL AS SHOWN IN FIG 1. (THIS FASTENER IS REUSED).
 - 2.5. POSITION THE SPLASHGUARD AGAINST THE WHEEL WELL FLANGE AND INSTALL (2) 8-15 X 1-3/4" SCREW (ITEM #10) AND #8 FLAT WASHER (ITEM #11) THRU THE **FIRST** AND **THIRD** HOLES DOWN FROM THE TOP IN THE SPLASHGUARD AND INTO THE METAL U CLIPS. (LEAVE THESE FASTENERS FINGER TIGHT).
 - 2.6. INSTALLTHE MOUNTING BRACKET (ITEM #5 & #6) AS SHOWN BY PLACING IT ABOVE THE METAL FENDER, AND BELOW THE PLASTIC WHEEL WELL LINER. ATTACH THE MOUNTING BRACKET TO THE SPLASHGUARD BY USING ¼" X 1" BUTTON HEAD SCREWS (ITEM #7) 1/4" FLAT WASHERS (ITEM #9), AND ¼-20 SERRATED FLANGE NUTS (ITEM #8). FINGER TIGHTEN ONLY. **NOTE: IF THE VEHICLE HAS FENDER FLARES THEY MAY NEED TO BE NOTCHED TO ALLOW THE MOUNTING BRACKET TO SIT FLUSH WITH THE BACK OF THE SPLASHGUARD.**
 - 2.7. REINSTALL THE FACTORY FENDER BRACE BOLT UP THRU THE HOLE IN THE MOUNTING BRACKET AS SHOWN. (LEAVE THIS FASTENER FINGER TIGHT).
 - 2.8. THIS APPLICATION MAY REQUIRE A SMALL SLIT IN THE INSIDE OF THE WHEEL WELL LINER TO ALLOW THE SPLASHGUARD TO LAY FLAT.
 - 2.9. MOVE THE SPLASHGUARD IN OR OUT AS DESIRED, LEVEL THE SPLASHGUARD (IT SHOULD BE ABOUT STRAIGHT WITH THE REAR TIRE AND/OR MATCH THE FRONT SPLASHGUARD) AND THEN TIGHTEN ALL FASTENERS.
 - 2.10. REPEAT FOR THE OPPOSITE SIDE.

NOTE: THE 8-15 X 1-3/4" SCREWS (ITEM #8) ARE EXTRA LONG TO ACCOMMODATE THE VEHICLES WITH FENDER FLARES.



(A LUPERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV A 01MAY10
550220 SHEET 1 21OCT08

SERVICE PARTS LIST

2009 DODGE RAM
MODEL: 500931 & 500933

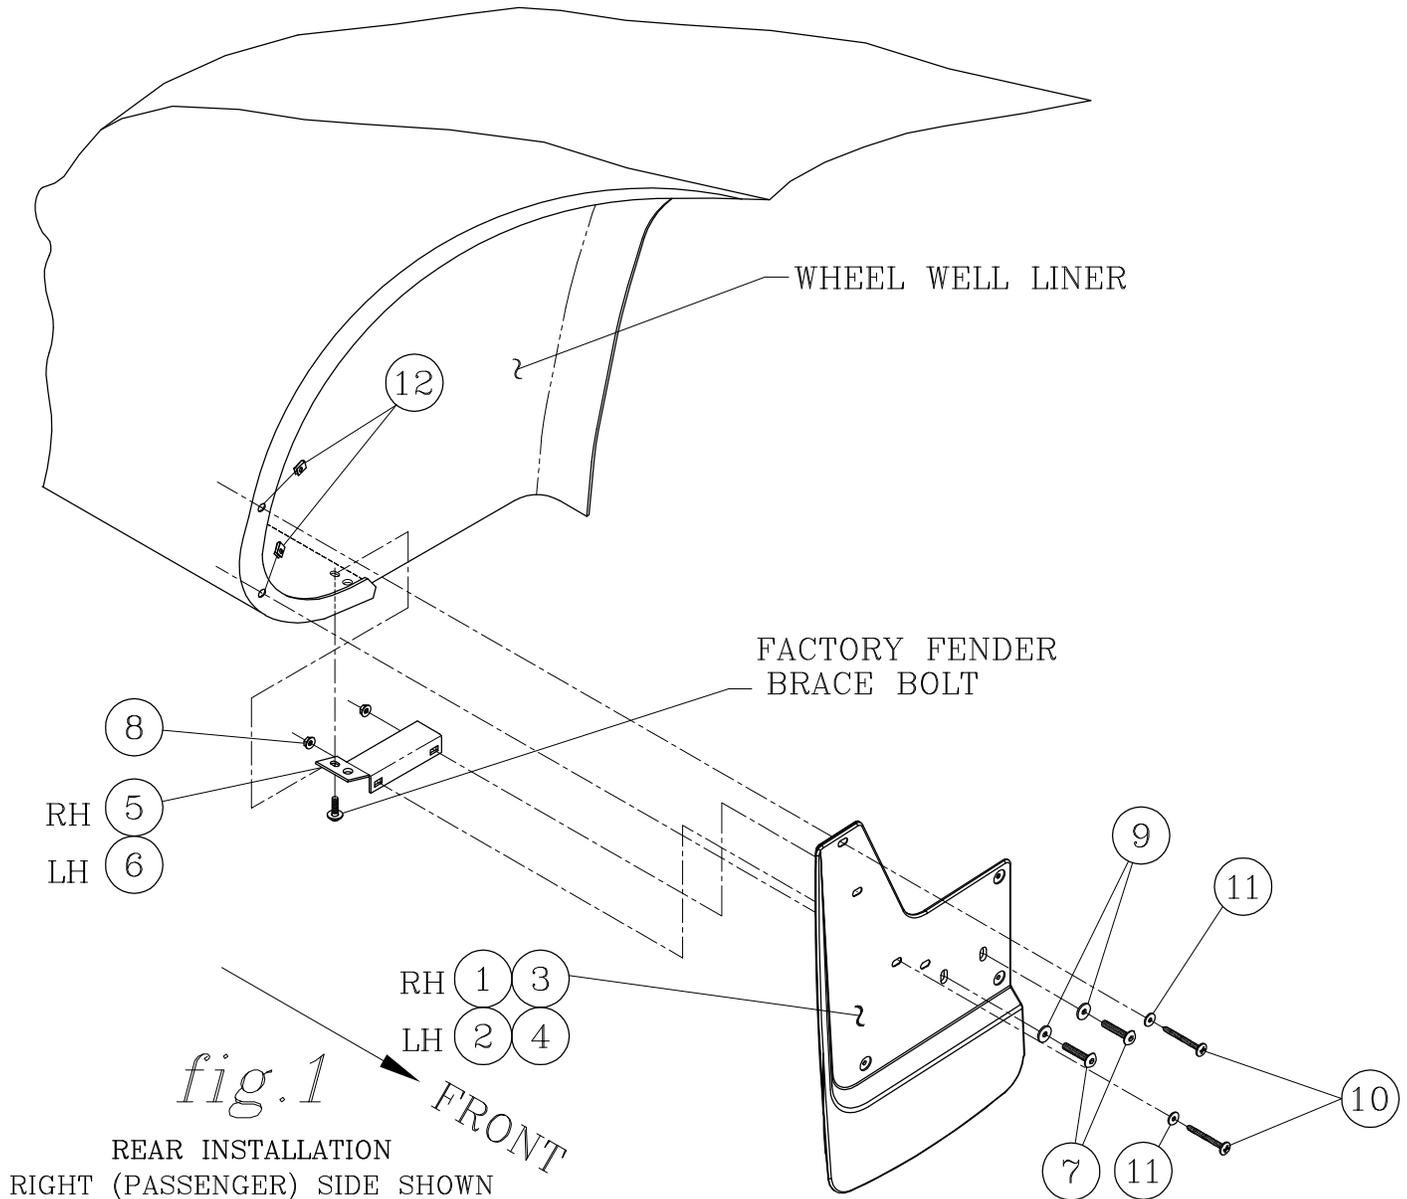


fig. 1
FRONT
REAR INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	550214	1	SPLASH GUARD-MOLDED,12 X 20,DODGE,RH
2	550215	1	SPLASH GUARD-MOLDED,12 X 20,DODGE,LH
1	550218	1	SPLASH GUARD-MOLDED,12 X 23,DODGE,RH
2	550219	1	SPLASH GUARD-MOLDED,12 X 23,DODGE,LH
3	550216	1	INSERT-SPLASH GUARD,SST,09 DODGE,RH
4	550217	1	INSERT-SPLASH GUARD,SST,09 DODGE,LH
5	550212	1	BRACKET -MTG,SPL GD,RH
6	550213	1	BRACKET -MTG,SPL GD,LH
7	105543	4	SCREW- BTN HD SOC, SST, 1/4-20 X 1.0"
8	102366	4	NUT-HEX,SERRATED FLG,SST,1/4-20
9	101370	4	WASHER-FLAT, SST, .281 X .625 X .062
10	107642	4	SCREW-PHILLIPS HD,TYPE B,8-15X1-3/4, SST
11	105511	4	WASHER-FLAT, SST, .203 X .625 X .062
12	105518	4	U-CLIP-THREADED, 8-15,BLK



(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV A 10MAY10
550220 SHEET 2 21OCT08