

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION:

MODEL 501124 (20.25" X 23.00") DUAL WHEEL SPLASH GUARDS 2011 AND NEWER FORD SUPER DUTY DUAL WHEEL TRUCKS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. PEEL AWAY THE PROTECTIVE VINYL COVERING AND CLEAN THE STAINLESS STEEL SPLASH GUARD INSERTS TO REMOVE ANY VINYL COVERING RESIDUE (A GOOD GLASS CLEANER IS SUGGESTED).
3. PREPARE THE VEHICLE FOR SPLASH GUARD INSTALLATION AS FOLLOWS:
 - 3.1. FROM UNDERNEATH THE TRUCK, DRILL TWO 1/4" HOLES THRU THE FENDER LINER USING THE FACTORY METALLIC WHEEL WELL FLANGE HOLES AS GUIDES (SEE FIG. 1).
 - 3.2. REMOVE THE FACTORY SCREW (BOTTOM CENTER) AND 5 PLASTIC RETAINERS THAT HOLD THE FENDER LINER TO THE FENDER BEHIND THE DUAL WHEELS.
 - 3.3. INSTALL TWO U-NUTS (ITEM #8) (THREADS TOWARD THE REAR OF THE VEHICLE) INTO THE BOTTOM AND CENTER OUTBOARD FENDER FLARE HOLES (SEE FIG. 1).
 - 3.4. RE-INSTALL THE TOP OUTBOARD FENDER LINER PLASTIC RETAINER THRU THE FENDER LINER AND FENDER FLARE TO HOLD THE FENDER LINER IN PLACE.

MOUNTING 501124 SPLASH GUARDS:

4. INSTALL THE SPLASH GUARDS AS FOLLOWS:
 - 4.1. POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND PLASTIC LINER SO THAT THE HOLES IN THE SPLASH GUARD LINE UP WITH THE HOLES THAT WERE DRILLED THRU THE WHEEL WELL LINER PER INSTRUCTION #3.1.
 - 4.2. INSTALL 1/4-20 X 1-1/4" BUTTON HEAD SCREWS (ITEM #5), AND 1/4" FENDER WASHERS (ITEM #7) THRU THE SPLASH GUARD, FENDER LINER, AND METALLIC WHEEL WELL FLANGE, THEN ATTACH THE 1/4-20 SERRATED FLANGE NUTS (ITEM #6)
 - 4.3. INSTALL A 1/4-20 X 1-1/4" BUTTON HEAD SCREW (ITEM #5) AND 1/4" FENDER WASHER (ITEM #7) THRU THE SPLASH GUARD, FENDER LINER, AND BOTTOM PLASTIC WHEEL WELL FLANGE, THEN ATTACH A 1/4" FENDER WASHER AND A 1/4-20 SERRATED FLANGE NUT.
 - 4.4. INSTALL 1/4-20 X 1-1/4" BUTTON HEAD SCREWS (ITEM #5) AND 1/4" FENDER WASHERS (ITEM #7) THRU THE SPLASH GUARD, FENDER LINER AND OUTBOARD PLASTIC FENDER FLARE HOLES INTO THE TWO (2) U-NUTS.
 - 4.5. MOVE THE SPLASH GUARD IN OR OUT AS DESIRED, LEVEL THE SPLASH GUARD AND TIGHTEN THE FASTENERS.



(A LUVERNE Company)

1200 E. Birch St.


Brandon, SD 57005

551046 SHEET 1 OF 2 11AUG10

SERVICE PARTS LIST

fig.1

2011 FORD SUPER DUTY DUALY
MODEL NO. - 501124

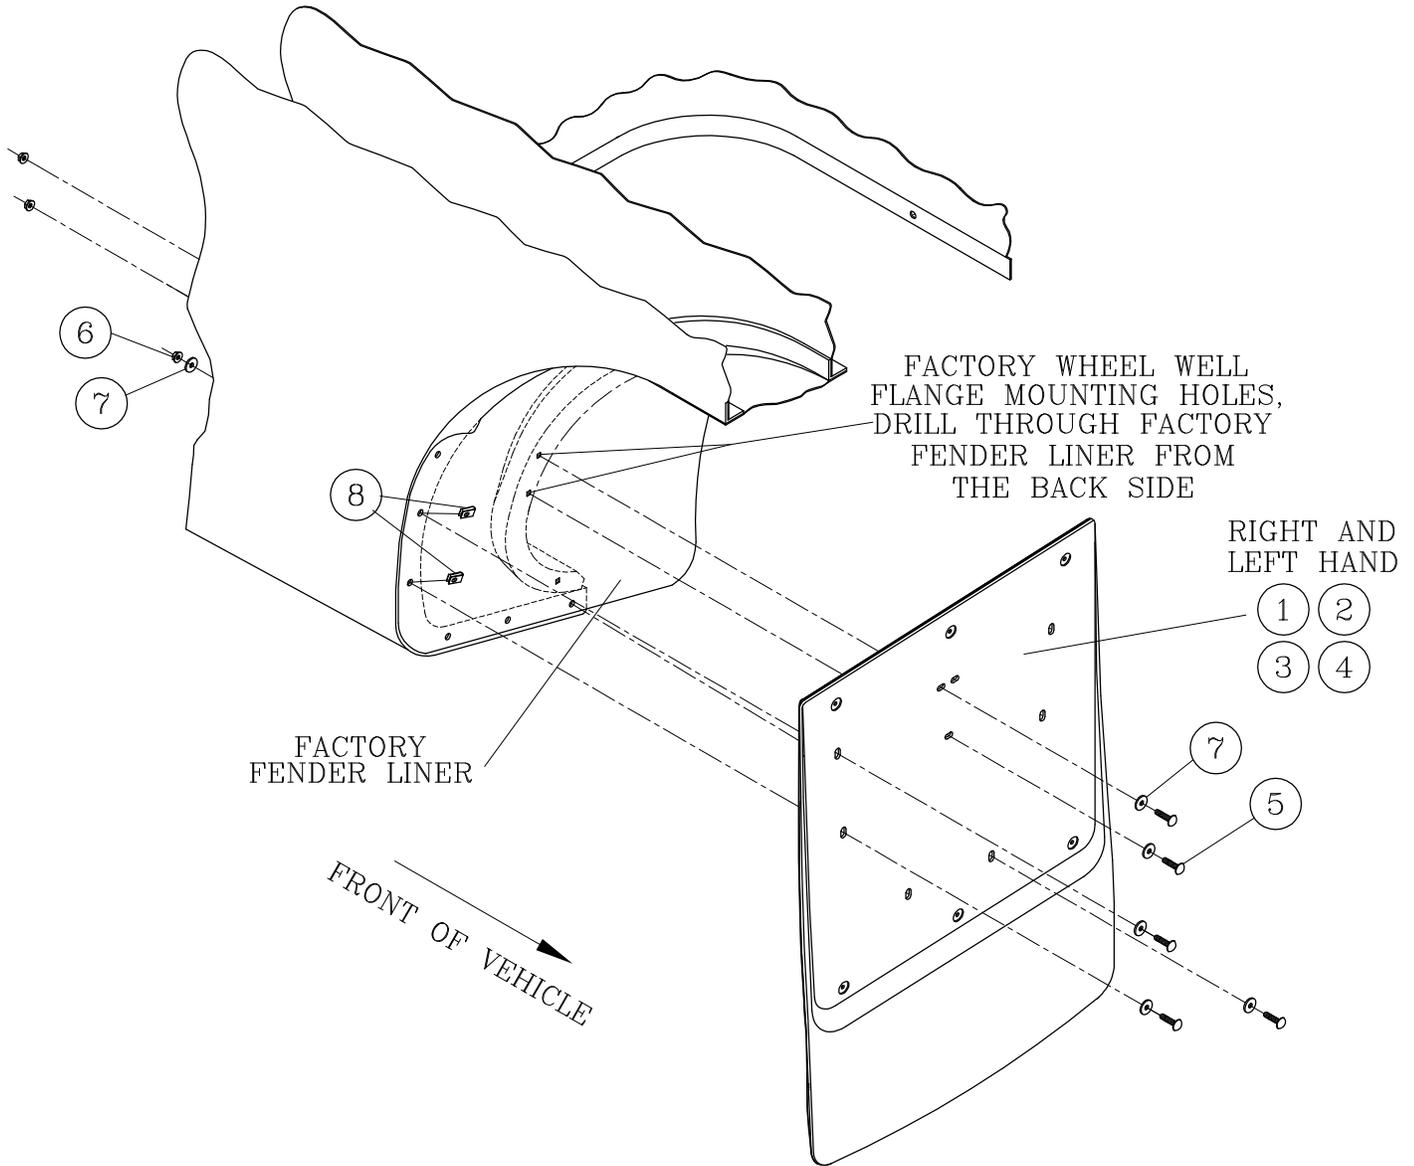

RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	551047	2	SPLASHGUARD-MOLDED, 20.25 X 23.00, FORD S.D. DUALY
2	108886	2	INSERT-SPLASH GUARD, SST, FORD SD, LH/RH
3	103146	12	RIVET-SST, 3/16 X 3/8
4	105511	12	WASHER-FLAT, SST, .203 X .625 X .062
5	108053	10	SCR-BTN HD SOC, SST, 1/4-20 X 1-1/4", BZP
6	102366	6	NUT- HEX, SERRATED FLANGE,SST, 1/4-20
7	108521	12	WASHER- FENDER, 1/4 X 1, SST, 18-8, BZP
8	106604	4	NUT-U, MULTI-THREAD, 1/4-20, BLK