

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION: MODEL 501510 AND 501511 CONTOURED SPLASH GUARDS
2015 AND NEWER SUBURBANS, TAHOES, AND YUKONS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.

MOUNTING FRONT SPLASH GUARDS: (SEE SHEET #2)

2. INSTALL THE SPLASH GUARDS AS FOLLOWS:
 - 2.1 REMOVE THREE FACTORY SCREWS THAT HOLD THE FENDER LINER IN PLACE. **(ONE OF THESE SCREWS IS NOT REUSED, BUT THE TWO OTHERS AND THE PLASTIC GUARD WILL REMAIN).**
 - 2.2 PLACE THE 3/4" RUBBER SPACER (ITEM #5) AT THE TOP HOLE LOCATION BETWEEN THE FENDER LINER AND THE SPLASH GUARD.
 - 2.3 POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND INSTALL ONE PAN HEAD SCREW WITH FENDER WASHER (ITEMS #6, 7) THRU THE TOP HOLE, AND THE TWO FACTORY BOLTS WITH ADDITIONAL FENDER WASHERS (ITEM #7) THRU THE TWO LOWER HOLES AS SHOWN IN FIG. 1. AND TIGHTEN DOWN.
 - 2.4 REPEAT FOR OPPOSITE SIDE

MOUNTING REAR SPLASH GUARDS: (SEE SHEET #3)

3. INSTALL THE SPLASH GUARDS AS FOLLOWS:
 - 3.1 REMOVE THREE FACTORY SCREWS THAT HOLD THE FENDER LINER IN PLACE. **(THESE SCREWS ARE NOT REUSED, BUT THE PLASTIC GUARD WILL REMAIN).**
 - 3.2 PLACE TWO 1/2" RUBBER SPACERS (ITEM #5) BETWEEN THE FENDER LINER AND THE SPLASH GUARD. PLACE ONE SPACER OVER THE TOP TWO SCREWS (FACING VERTICALLY) AND PLACE THE SECOND SPACER OVER THE BOTTOM SCREW (FACING HORIZONTALLY).
 - 3.3 POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND INSTALL THREE PAN HEAD SCREWS WITH FENDER WASHERS (ITEMS #7, 9) THRU THE THREE HOLES AS SHOWN IN FIG. 2. LEVEL THE SPLASH GUARD AND TIGHTEN DOWN.
 - 3.4 WITH THE SPLASHGUARD LEVELED AND TIGHTENED, DRILL A 5/16" HOLE THROUGH THE WHEEL WELL FLANGE AND INSTALL THE 1/4"-20 X 1" BUTTON HED SCREW (ITEM #6), FENDER WASHERS (ITEM #9) AND 1/4"-20 FLANGE NUT (ITEM #8).
 - 3.5 REPEAT FOR OPPOSITE SIDE.



(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

552563 SHEET 1 OF 3 18SEP14

SERVICE PARTS LIST

MODEL NO. - 501510

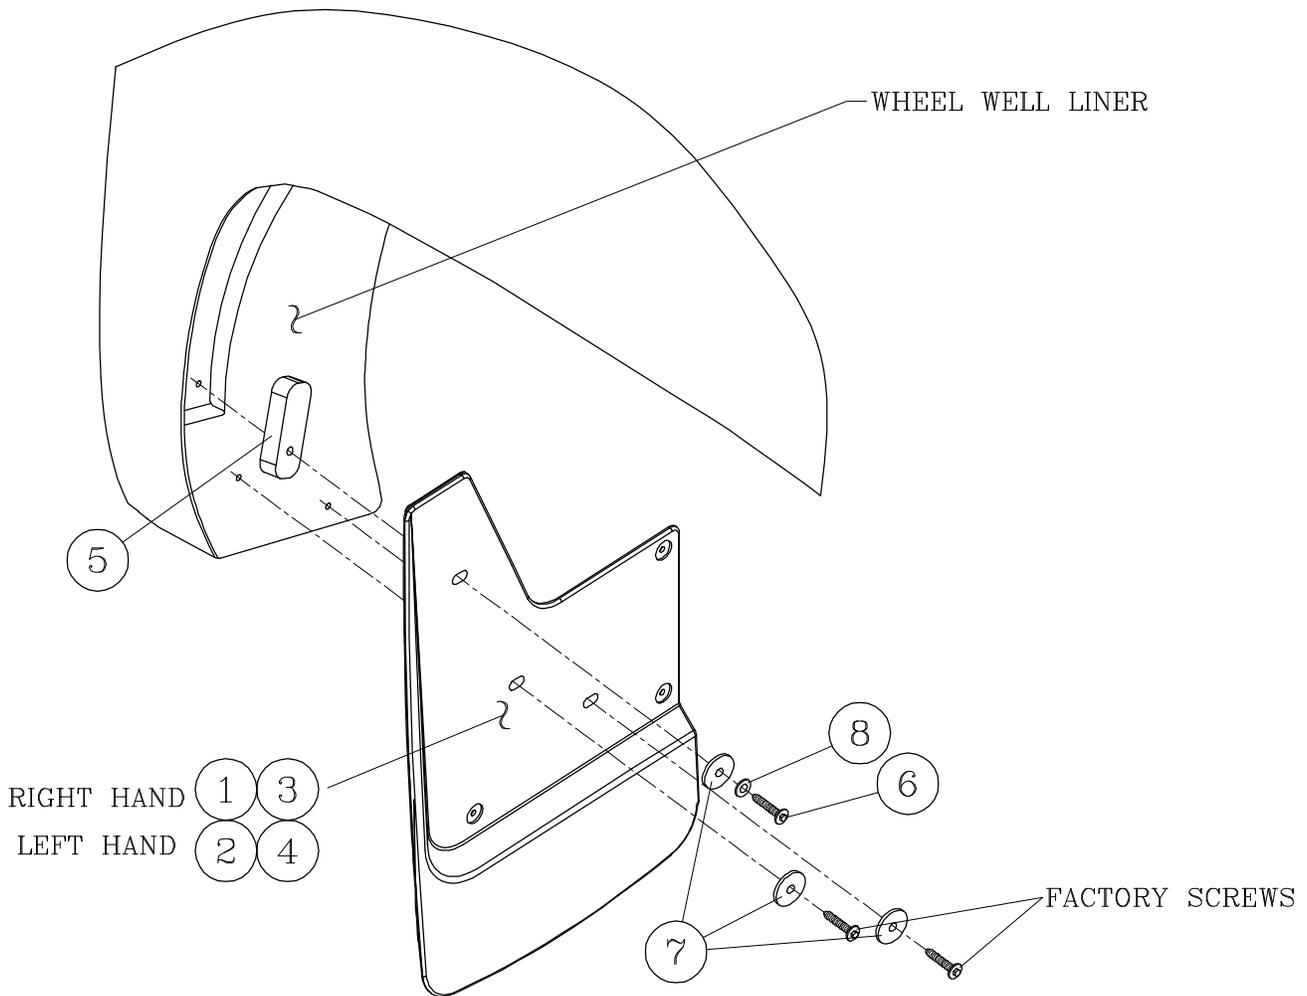


fig.1

FRONT INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	552553	1	SPLASH GUARD-MOLDED,12 X 20,GM FULL SUV,RH
2	552554	1	SPLASH GUARD-MOLDED,12 X 20,GM FULL SUV,LH
3	552559	1	INSERT-SPLASH GUARD, SST, GM FULL SUV,RH
4	552560	1	INSERT-SPLASH GUARD, SST, GM FULL SUV,LH
5	552558	2	SPACER - RUBBER, 3/4"
6	107642	2	SCREW - PAN HEAD, 8-15X1.75, SST
7	108521	6	WASHER - FENDER, 1/4 X 1, SST, 18-8, BZP
8	101370	2	WASHER - FLAT, .281 X .625 X .065, SST



(A LIVERNE Company)

1200 E. Birch St.

Brookton, SD 57005

552563 SHEET 2 OF 3 19SEP14

SERVICE PARTS LIST

MODEL NO. - 501511

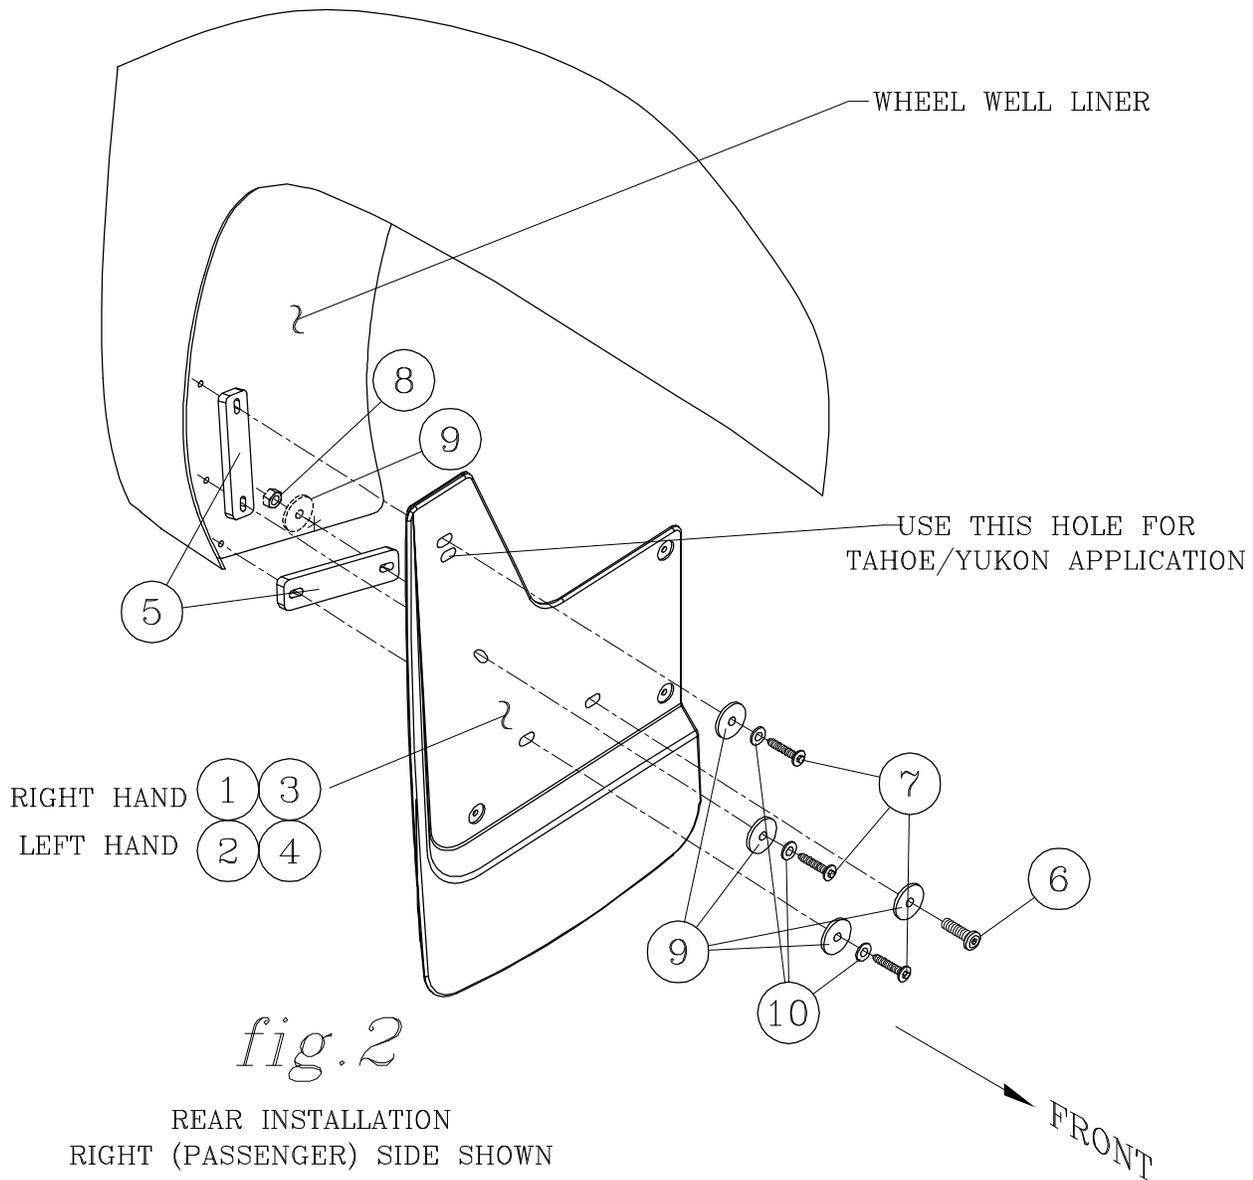


fig.2

REAR INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	552551	1	SPLASH GUARD-MOLDED,12 X 20,GM FULL SUV,RH
2	552552	1	SPLASH GUARD-MOLDED,12 X 20,GM FULL SUV,LH
3	552555	1	INSERT-SPLASH GUARD, SST, GM FULL SUV,RH
4	552556	1	INSERT-SPLASH GUARD, SST, GM FULL SUV,LH
5	552557	4	SPACER - RUBBER, 1/2"
6	105543	2	SCREW-BUTTON HEAD, 1/4"-20 X 1.0
7	107642	6	SCREW - PAN HEAD, 8/15X1.75, SST
8	102366	2	NUT, FLG, HEX, 1/4-20, SST
9	108521	10	WASHER - FENDER, 1/4 X 1, SST, 18-8, BZP
10	101370	6	WASHER - FLAT, .281 X .625 X .065, SST

LIVERNE
TRUCK EQUIPMENT

(A LIVERNE Company)

1200 E. Birch St.

Brookton, SD 57005

552563 SHEET 3 OF 3 19SEP14