


# WeatherTech®

## Side Window Deflectors

*Front with S-Clips*

### Installation Instructions

#### Contents

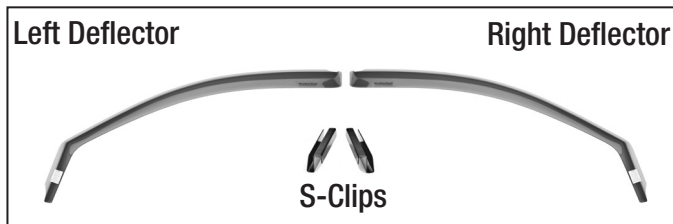

(2) Front Side Window Deflectors and (2) S-Clips included. If there is a WeatherTech® label, it should be positioned toward the rear of the vehicle.

#### ⚠ WARNING ⚠

Accessories which are not properly fitted can be dangerous. Read the instructions carefully before installation, and comply with the instructions at all times. If in doubt, contact WeatherTech®.



**1** Make sure that windows are clean and dry. Then, lower completely.



**2** Push back the weather stripping on the rear end of the window and insert the S-Clip as shown.



**3** Make certain the S-Clip is approximately 3/8" down from the top of the window line.



**4** Follow the instructions on the sticker located on the front of the part, then remove.

[View Easy Installation Video](#)  
[WeatherTech.com/install](http://WeatherTech.com/install)



**5** Insert the front of the part as shown; ensure edge rests on top of the outer window sill.



**6** Bow the deflector outward and insert the end into the S-Clip installed in step 2.



**7** Starting from the front of the part, begin tucking the flange into the window channel.



**8** Carefully pull outward to set the deflector while rolling the window up slowly.

**9** Repeat steps 1-8 for the passenger side.

## Congratulations!

### Your new WeatherTech® Side Window Deflectors have been installed!

Your WeatherTech® Side Window Deflectors carry a 3 year warranty against defects in materials and workmanship when installed correctly.

### Installation Tips:

1. When installed correctly, the bottom edge of the front deflector must rest on the door's outer weather stripping and only the thin flange is in the channel between the glass and inner seal.
2. Slowly raise the window up without activating the auto-up. If unable to fully close, have someone press the window between their hands upwards. Simultaneously raise the window up in small increments until fully closed.
3. If safety features cause the window to go down, reset the window by:
  - a. Roll the window down, hold the down button for 5 seconds.
  - b. Raise the window without activating the auto-up feature. Hold the up button for 3 seconds.
4. Leave windows closed fully for 12 hours. Deflector may take longer to acclimate below 60° F / 16° C.