


WeatherTech®

Side Window Deflectors

Front with Weatherstrip Clips

Installation Instructions


Contents

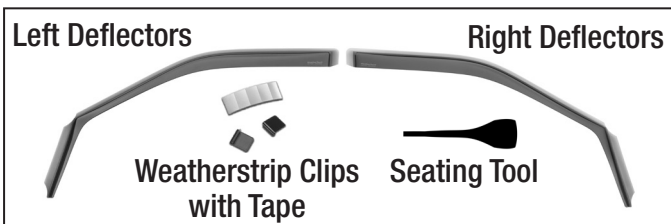

(2) Side Window Deflectors, (2) Weatherstrip Clips, (2) Pieces of Clear Tape, (1) Seating Tool. If there is a WeatherTech® label, it should be positioned toward the rear of the vehicle.




1 Make sure that windows are clean and dry. Then, lower the windows halfway down.

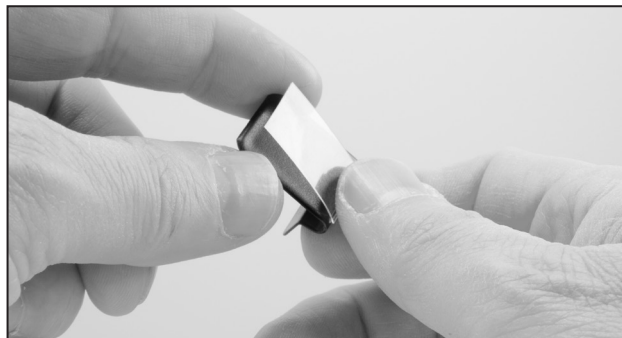

2 Place one strip of the provided clear tape centered onto the flat surface of the weatherstrip clip.



3 Place the weatherstrip clip onto the window gasket material: position as far forward as possible.

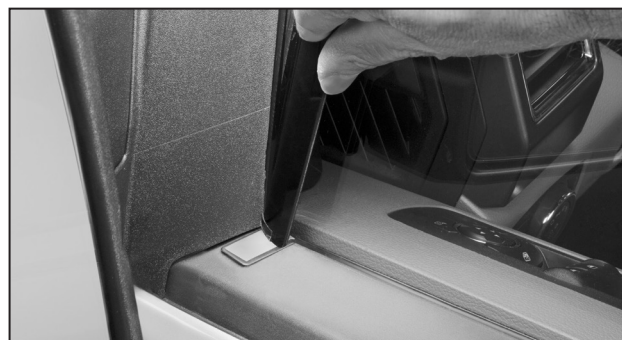


4 Lower the front of the deflector onto the weatherstrip clip as shown.

⚠ WARNING ⚠

Accessories which are not properly fitted can be dangerous. Read the instructions carefully before installation and comply with the instructions at all times. If in doubt, contact WeatherTech®.


[View Easy Installation Video](#)
WeatherTech.com/install

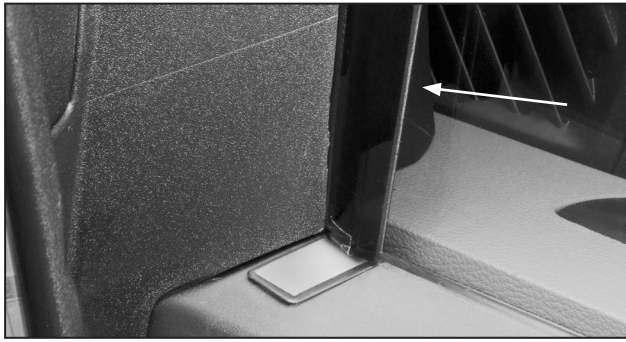


5 With the deflector now resting on the weatherstrip clip, slide forward into the channel. Ensure edge rests on top of the weatherstrip clip.



6 Bow the deflector outward.

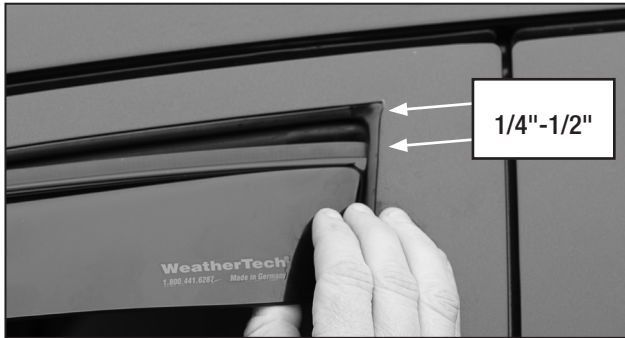


7 Insert the rear edge leaving a gap at the top.

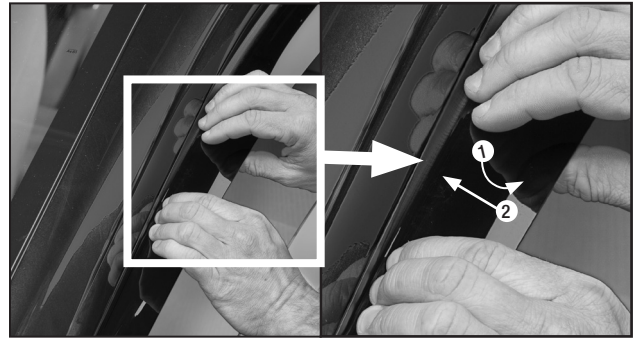


8 Pull down and tuck in working from front to back.



9 Carefully pull outward on the deflector.

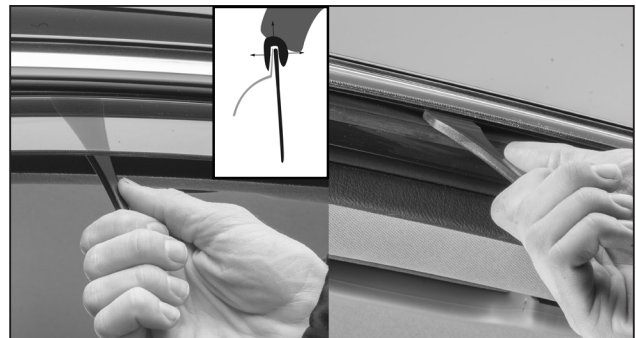

10 Run the seating tool between deflector and window seal to set the deflector. Repeat steps 1-9 on the passenger side.

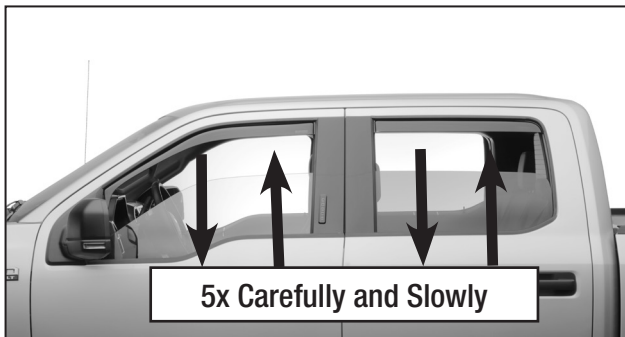

11 Roll all windows up in small increments. Slowly repeat this 5 times and end with windows fully closed.

Congratulations!

Your new WeatherTech® Side Window Deflectors have been installed!

For warranty information, please visit www.weathertech.com/warranty or contact our customer support team at (630) 769-1500 or (800) 441-6287.

Installation Tips:

1. When installed correctly, the bottom edge of the front deflector must rest on the door's outer weather stripping and only the thin flange is in the channel between the glass and inner seal.
2. Slowly raise the window up without activating the auto-up. If unable to fully close, have someone press the window between their hands upwards. Simultaneously raise the window up in small increments until fully closed.
3. If safety features cause the window to go down, reset the window by:
 - a. Roll the window down and hold the down button for 5 seconds.
 - b. Raise the window without activating the auto-up feature. Hold the up button for 3 seconds.
4. Leave windows closed fully for 24 hours. Deflector may take longer to acclimate below 60° F / 16° C.