


Parts Included :	QTY:
RDS Front Bumper	1
HARDWARE:	
USES FACTORY HARDWARE	




Removal of Factory Bumper:

1: Open hood and remove 12 plastic clips. Remove plastic shroud and gently set aside, it will be reused.

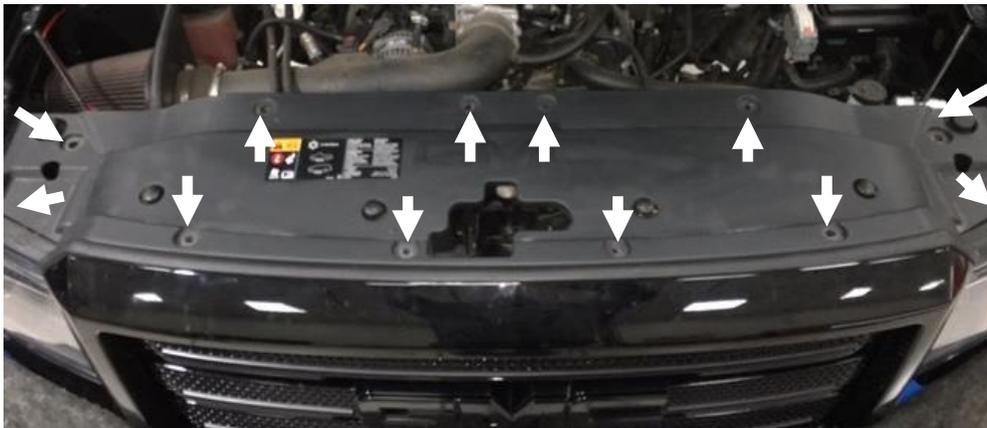

2: Remove four screws on top of grill with a 10mm socket.

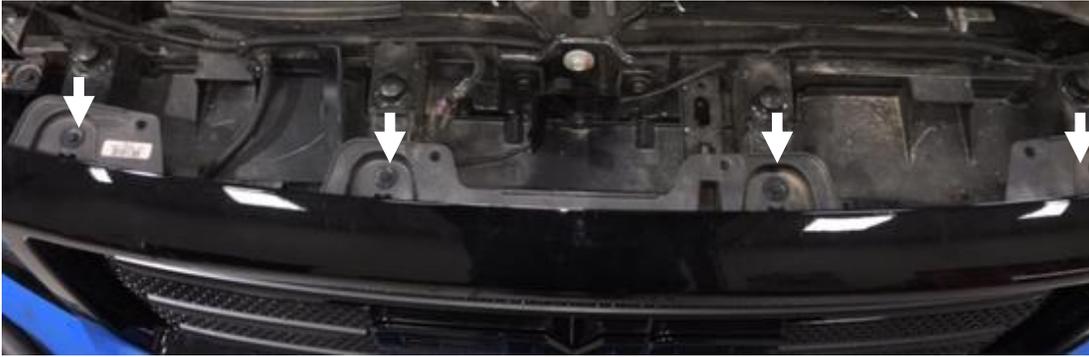

3. Remove the grill by pulling out on the bottom on both sides to release the tabs and then rotating the grill upwards. Set aside to re-install later.



4: Unplug the OEM fog light and sensor wiring harness and place it up and out of the way.




5: Remove two bolts from OEM side support (in front of tires) with 15mm socket. (both sides)



- 6:** Remove four OEM bumper bolts with 18mm socket.
7: Remove OEM bumper and set aside.



- 8:** Remove six bolts holding on OEM frame flanges to frame with 15mm socket. Set bracket aside.

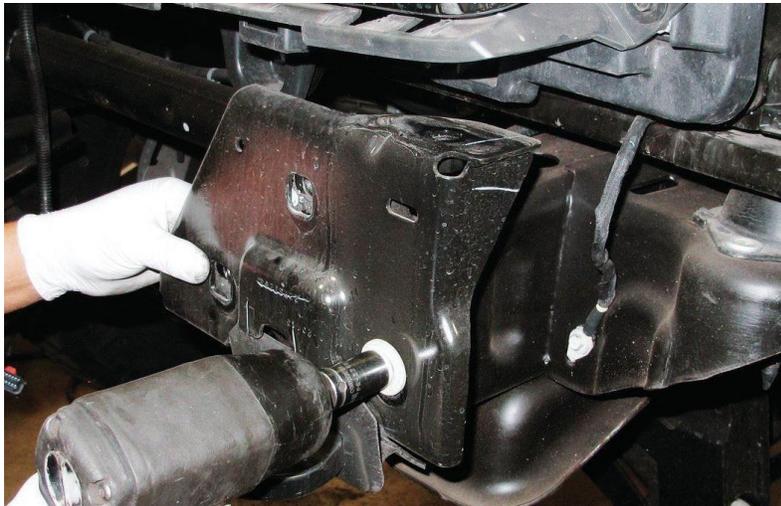

9: Remove two bolts holding on OEM tow hooks with 18mm socket and wrench. (both sides) Set tow hooks aside.



10. Re-install the OE grill and plastic shroud and secure.



RDS BUMPER INSTALL:

- 1: Remove the RDS Bumpers skid plate and set aside.
- 2: Carefully lift RDS bumper up and align with the six factory mounting positions in the frame.



- 2: Install bumper using the OEM hardware and hand tighten.
- 3: After proper alignment fully tighten all hardware.
- 4: Re-install RDS skid plate and fully tighten.
- 5: Install is now complete.

