


I-SHEET PART NUMBER: INST-00267

PART NUMBER: **G15BR-TX**PRODUCT: **SPORT BAR** 


APPLICATION: 15-21 COLORADO/CANYON

HARDWARE HWKT-11804X		
	3/8"X1" CARRIAGE BOLT	8
	3/8" FLANGED NUT	8

PARTS INCLUDED	
CENTER LIGHT MOUNT ASSEMBLY	1
DRIVER SIDE ASSEMBLY	1
PASSENGER SIDE ASSEMBLY	1
BACKING PLATE	2

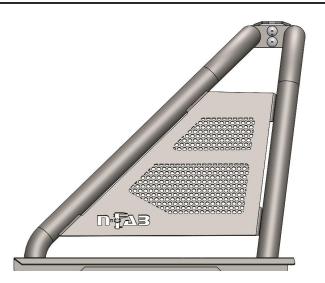


**Step 1**: Attach the Center section to the driver and passenger side assemblies using the supplied 3/8" x 1" carriage bolt (x4) and 3/8" fanged nut (x4) and leave finger tight for now. \*NOTE: Begin with the upper bolt and nut first to have easier access to the lower fasteners. \*

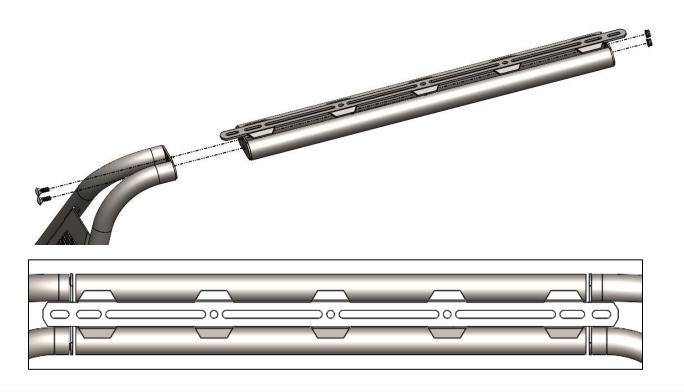

**Step 2:** With additional help, carefully place Sport Bar onto bed rails aligning edge with the plastic cap on both sides.



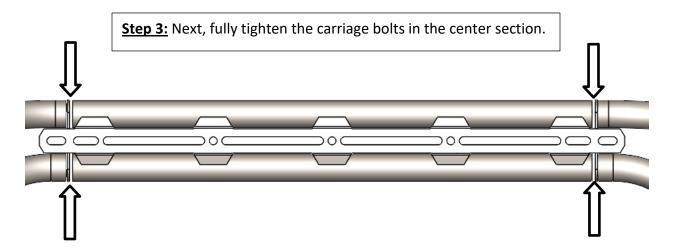




I-SHEET PART NUMBER: INST-00267


PART NUMBER: **G15BR-TX**PRODUCT: **SPORT BAR** 


APPLICATION: 15-21 COLORADO/CANYON

<u>Step 4:</u> Install the driver and passenger side backing plate brackets using the supplied 3/8" x 1" carriage bolts and 3/8" flanged washers \*\*NOTE \*\* The bracket will mount with the holes closer to the edge facing down.

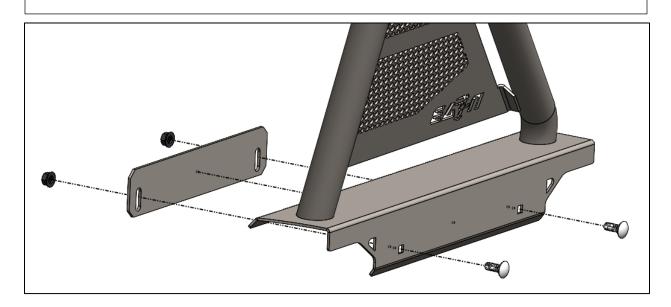



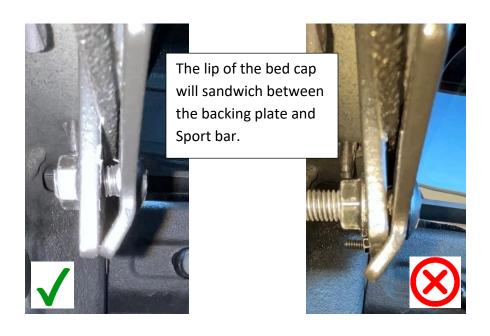

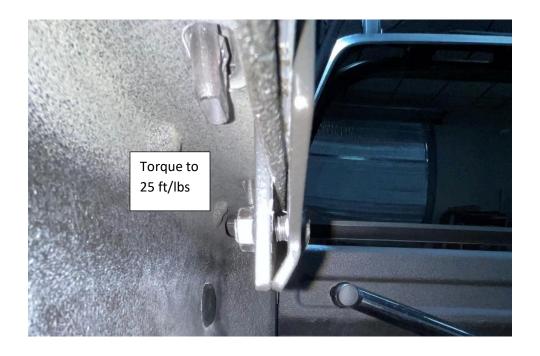

\*\* Periodical check all fasteners for tightness. \*\*