


HARDWARE DESCRIPTION		QTY.
<b>HWKT-04239X</b>		
FHLB 04240X	M10x25mm HEX FLANGED BOLT	12
	M10 CARRIAGE BOLT	12
	M10 FLANGED HEX NUT	12




PARTS INCLUDED	QTY
DRIVER SIDE	1
PASSENGER SIDE	1
MOUNTING BRACKET	6

**Step 1. Identify driver side step.**

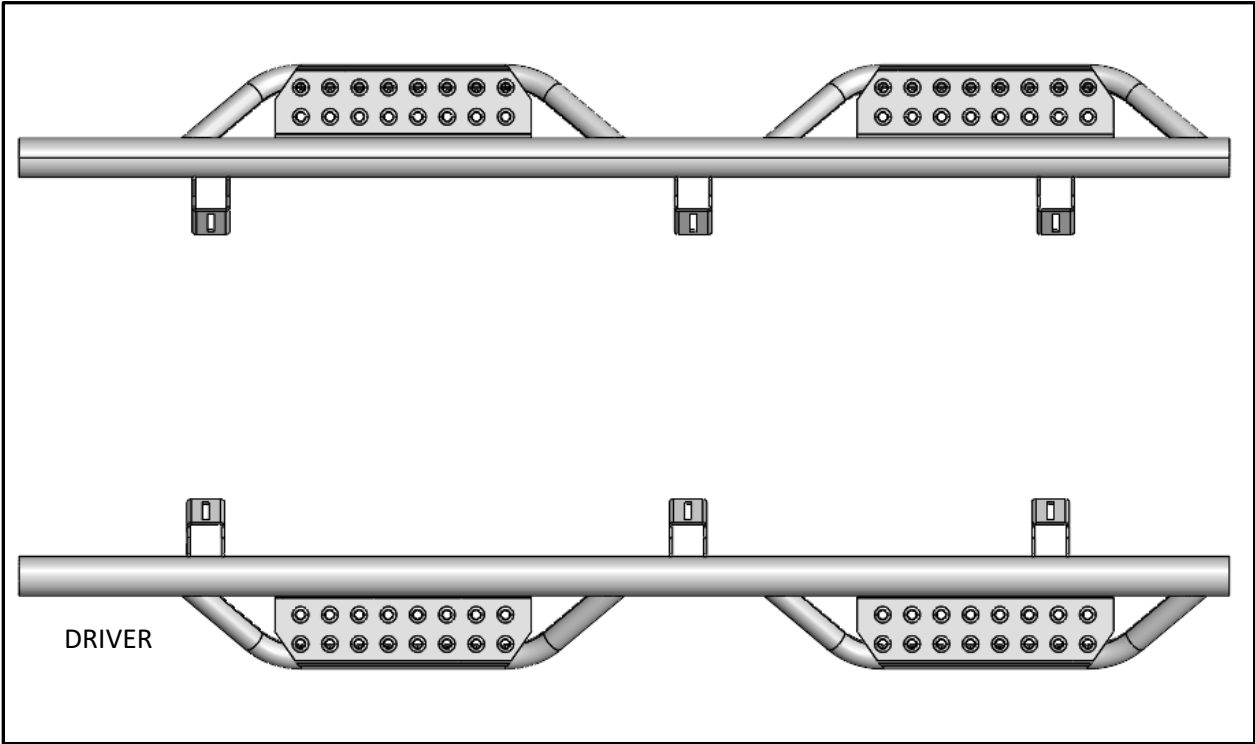

**Step 2.** Install the (x6) mounting brackets to each attachment point on the main tube using the supplied M10x25 carriage bolts, M10 hex nuts and leave loose for now.

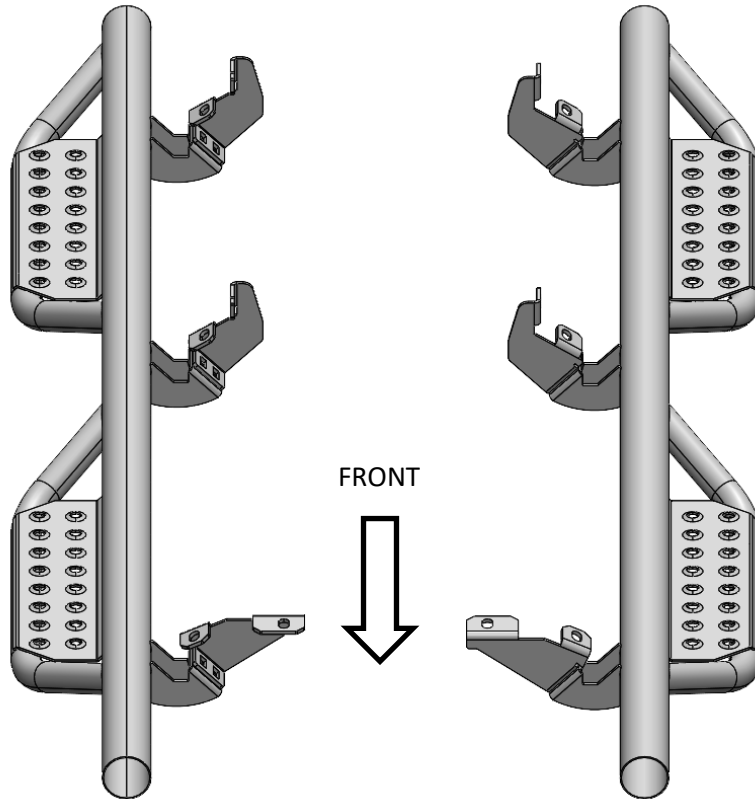

**Step 3.** Remove any factory running boards or hardware and discard.  
**Step 4.** Clean/tap the three factory threaded mounting locations.



**Step 5.** Carefully place step into place and loosely fasten using the supplied M10X25mm hardware.



**Step 6.** Tighten the three lower bolts first following with the three upper bolts.

**Step 7.** Next, tighten brackets (x3) at the main tube.

**Step 8.** Repeat steps 3-7 with passenger side.

**Step 9.** Your install is now complete.

