
POPLOCK

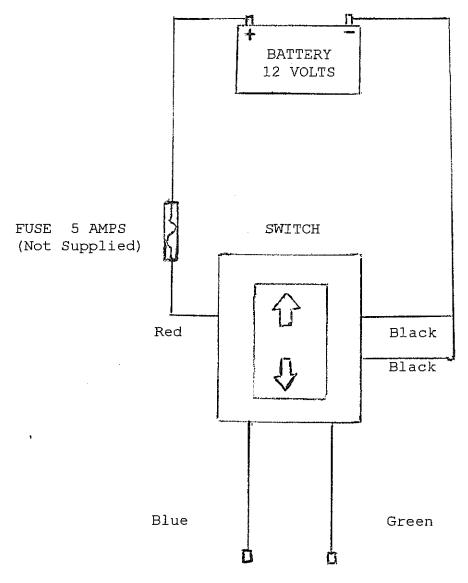

To Power Lock

- 1) Cut off connector on the switch kit
- 2) Strip all five wires on switch kit.
- 3) Connect two black wires to a good ground. (Metal part of frame)
- 4) Connect red wire to fuse panel or connect to a 5 amp fuse connected directly to battery. (fuse or fuse holder not supplied with kit)
- 5) Connect green and blue wires to wires supplied with power lock.
- 6) Test installation by rocking switch up and down.

For tech support call 1-800-342-5911