


# E - SERIES


## Dodge Ram Box Hard Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 Fax: 989-725-8409 • **1-800-433-3604**

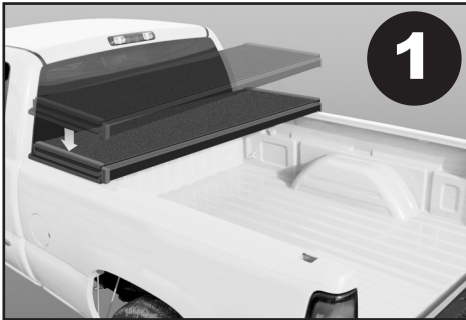


**1**

1. Place the cover on front of truck bed.  
**Note:** Look at step 10.

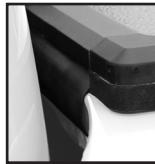

Place dust seal between cab and truck bed.

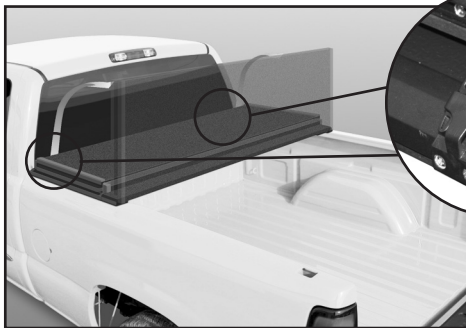


**2**

2. Undo both tie-down straps so cover can be unfolded.



**3**


3. Unfold the cover all the way open to align cover on the truck bed rails before clamping.

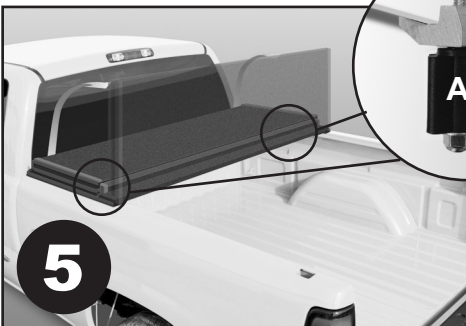

**4**

4. **A.** Tighten the plastic knob so that the hook is securely fastened to the metal bed rail. **B.** Tighten the nylox nut so that it is snug against the bottom of the plastic knob.

5. Unfold first section.

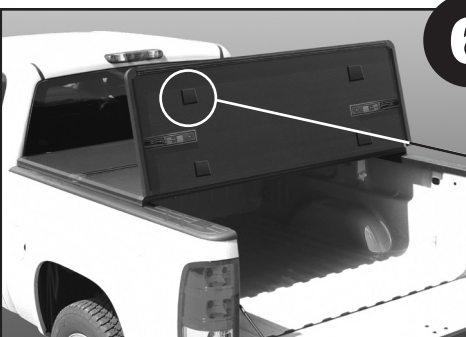


**6**

6. Unfold second section.

### IMPORTANT

DO NOT remove foam blocks. They protect surface of panel when folding. Voids Warranty.

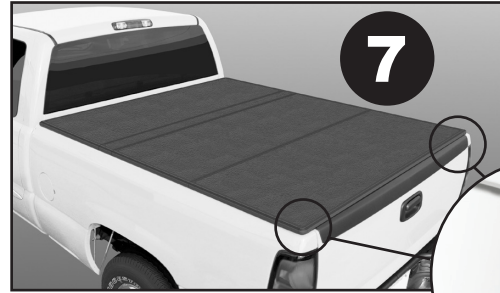


**7**

7. Cover is laying down flat.


- 8a. Secure tailgate clamp hooks for a snug fit.



**8**

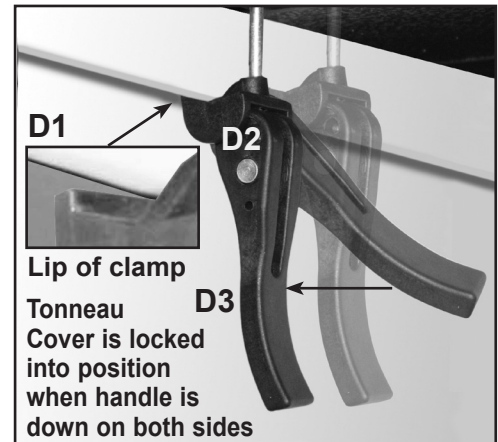

- 8b. To clamp cover down, put lip of clamp hooks under the side metal bed rail and push handle down. (See D1, D2, D3)

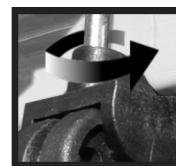


### How To Adjust Clamps

- To adjust, turn clamp hook clockwise to tighten or counter clockwise to loosen.

### 9. Vehicles With Utility Track

- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure cab and tailgate clamp hooks on to aluminum blocks.

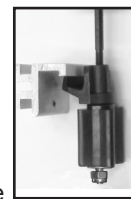

Cab



Tailgate

### 10. Add Extra Cab Corner Foam Pc.

- A.** Apply extra cab corner foam piece to existing cab corner foam piece if you don't have drop-in bedliner.

**\*Patent No's.**

**8,348,328/8,256,824/8,511,736**

**TRUCK HERO**  
company



www.ruggedliner.com


# E - SERIES

## Dodge Ram Box Hard Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604


### 1 Dodge Ram Box Rail Installation Instructions

**A**

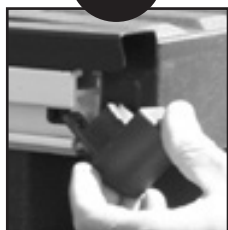


**1.** Remove the end caps from utility track.

**B**

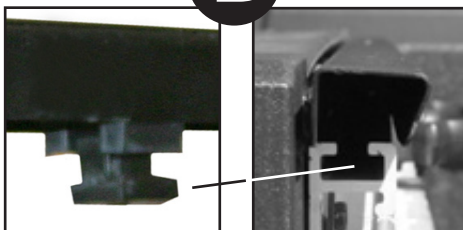


**2.** Slide rails above the utility track while inserting the plastic rail connector into utility track slot.


**C**

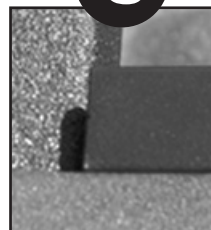

**3.** Slide the rails all the way back until the end touches the back bulkhead.

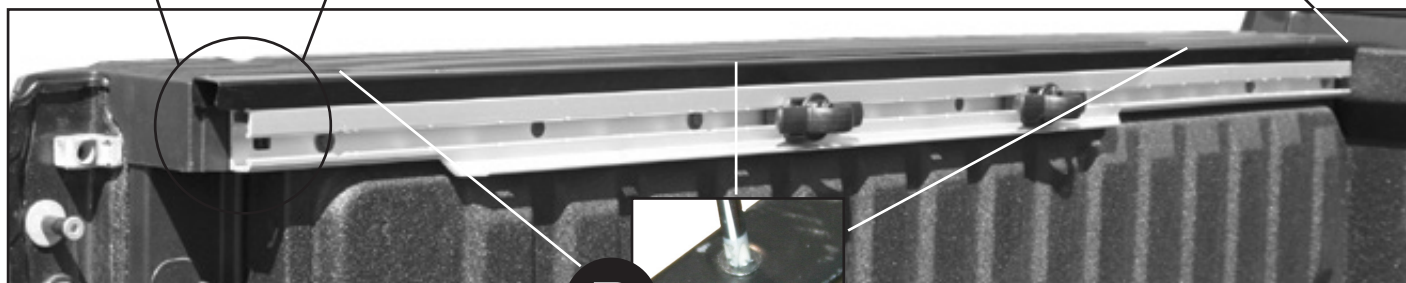

**D**

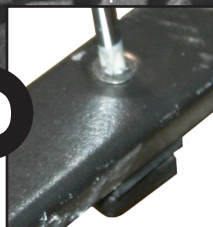


**4.** With the rails in place. Tighten down the screws in three locations on the rail with phillips screwdriver.

### 9 Utility Track System Blocks

**A**



**B**

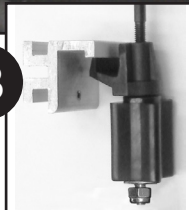

**C**



- A.** Slide aluminum blocks into utility track, position and tighten set-screw.
- B.** Secure front clamps on to aluminum blocks.
- C.** Attach rear clamps to aluminum blocks.
- D.** Replace end caps, see 1A above.

### 10 ONLY ON 2019+ RAM MODELS Add Extra Cab Corner Foam Pc.

- A.** If you don't have a drop-in bedliner add extra cab corner foam piece to existing corner piece on both corners by taking the backing off the side with the two sided tape.
- B.** Stick directly on the corner piece already there.

