

E - SERIES

Dodge Ram Box Vinyl Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604




1

- Place the cover on front of truck bed.
Note: Look at step 10.




Place dust seal between cab and truck bed.

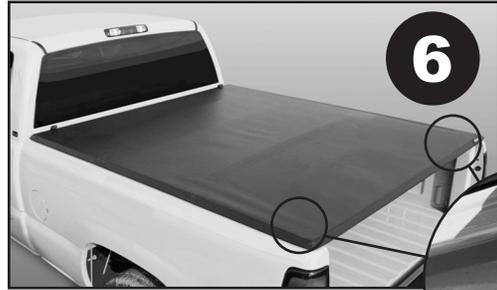


6

- Cover is laying down flat.

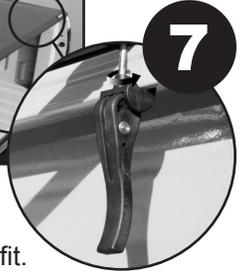



7

- Secure rear clamps for a tight fit.

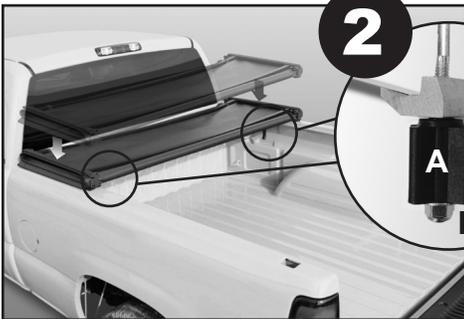

2

- Tighten the plastic knob so that the hook is securely fastened to the metal bed rail.
 - Tighten the nylox nut so that it is snug against the bottom of the plastic knob.

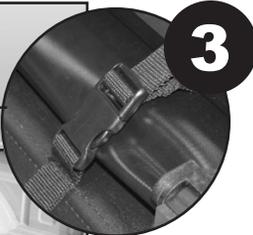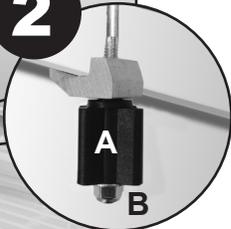

3

- Undo both clips so cover can be unfolded.




4

- Unfold first section.



5

- Unfold second section.

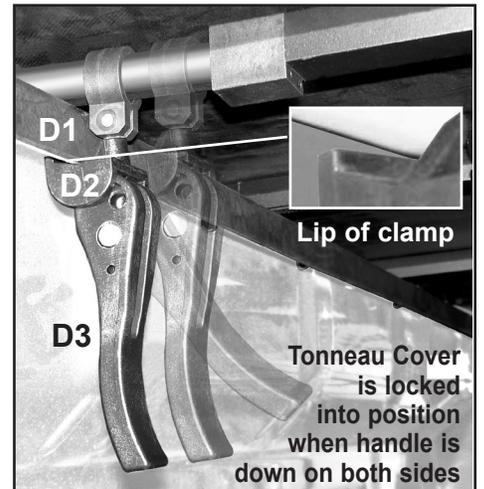

2&7

- To clamp cover down, put lip of clamp under side bed rail and push handle down.
(See D1, D2, D3)



Use orange clip to store clamp when cover is folded.



How To Adjust Clamps

- The clamps might need adjusted.
- To adjust, turn handle on clamp clockwise to tighten or counter clockwise to loosen.



www.ruggedliner.com

Patent No's.
7,823,957/8,146,982/8,256,824

TRUCK HERO company

E - SERIES


Dodge Ram Box Vinyl Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604


1 Dodge Ram Box Rail Installation Instructions





1. Remove the end caps from utility track.

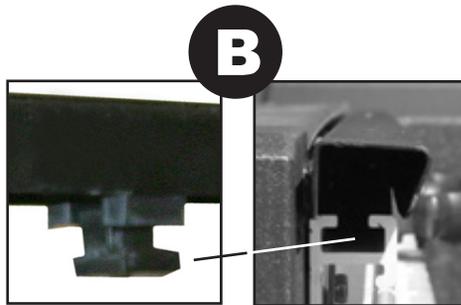

2. Slide rails above the utility track while inserting the plastic rail connector into utility track slot.


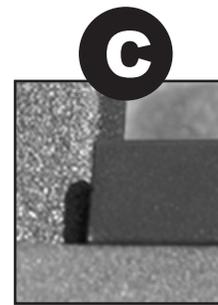


3. Slide the rails all the way back until the end touches the back bulkhead.

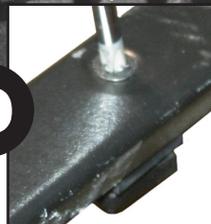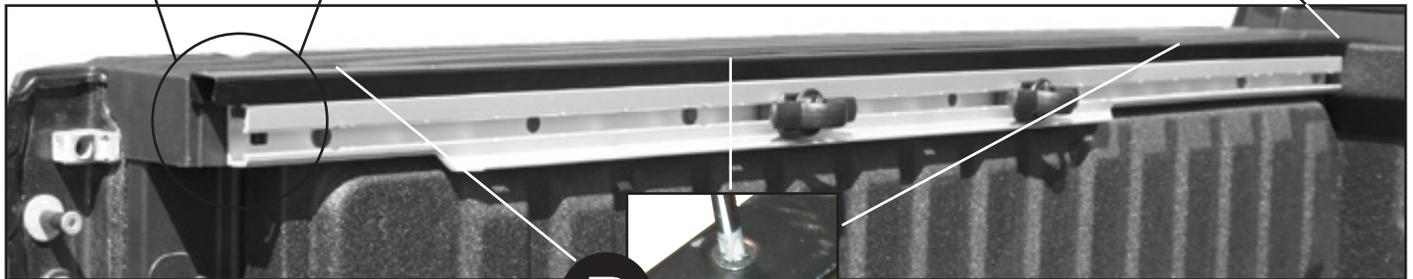

4. With the rails in place. Tighten down the screws in three locations on the rail with phillips screwdriver.

8 Utility Track System Blocks

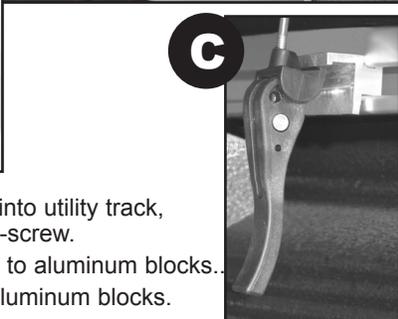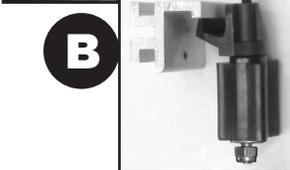

- A.** Slide aluminum blocks into utility track, position and tighten set-screw.
B. Secure front clamps on to aluminum blocks.
C. Attach rear clamps to aluminum blocks.
D. Replace end caps, see 1A above.

9 ONLY ON 2019+ RAM MODELS Add Extra Cab Corner Foam Pc.

- A.** If you don't have a drop-in bedliner add extra cab corner foam piece to existing corner piece on both corners by taking the backing off the side with the two sided tape.
B. Stick directly on the corner piece already there.

