



# E - SERIES

## Vinyl Tri-Fold Cover Bracket Installation Instructions For The Ford Sport Trac



200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604

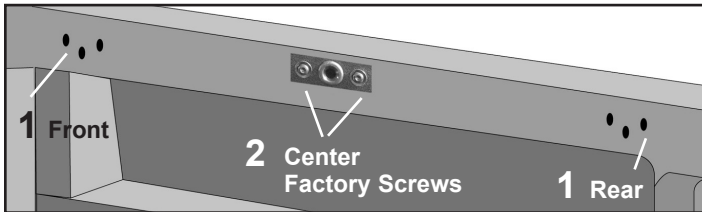

1. Remove the factory installed plastic hole covers located in the front and rear of the truck bed.
2. Unscrew the two center factory installed screws.
3. Line up bracket to three hole positions.
4. Install the bracket with the (2) center factory screws and one from installation kit provided. Secure the bracket to the side of the truck bed by tightening the front, center and rear screws.

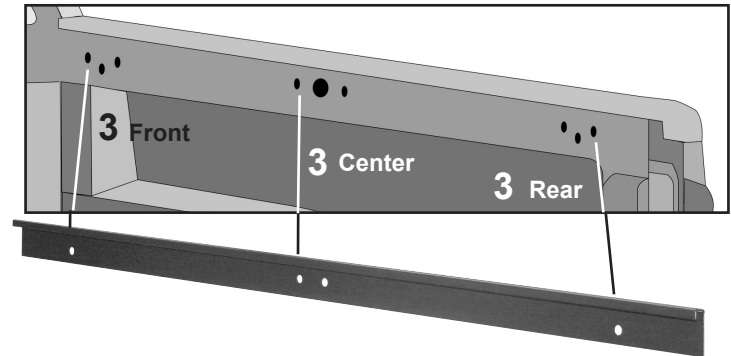


5. The two brackets are the same and can be used on either passenger or driver side of the truck bed.
6. Repeat steps 1-4 for the opposite side.

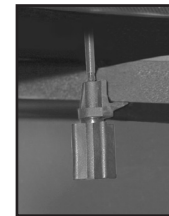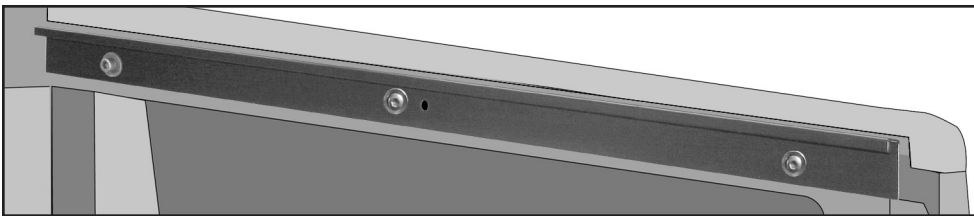

**C. Tonneau Cover**  
positioning  
of the front  
clamp and  
safety strap.




# E - SERIES

## Bracket Installation Instructions For The Honda Ridgeline

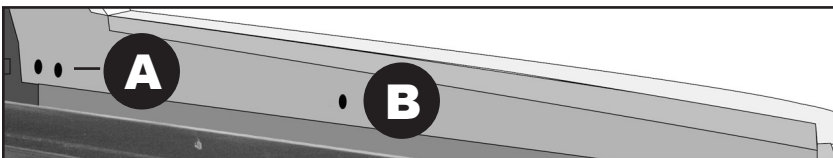

- A. Remove rear screw from the tie-down shown in picture labeled A.
- B. Remove screw located in center rail of the bed shown in picture labeled B.

1. Line up the bracket so that the rear portion rests on top edge of pillar post.
2. Line up front and center holes.
3. Use the smaller screw for the center hole of the bracket, provided with the installation kit.
4. Use the larger screw for the front hole of the bracket, provided with the installation kit.
5. Secure bracket to the side of truck bed by tightening front and center screws.
6. Take the bolt out of middle rear pillar.
7. Take the "L" bracket, put it through the slot in the rail. Install with one of the smaller screws provided with the installation kit. (In Kit: 4 large screws and washers, 4 small screws and washers, 2 rails, 2 "L" brackets)

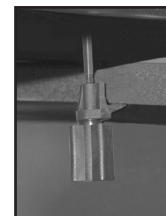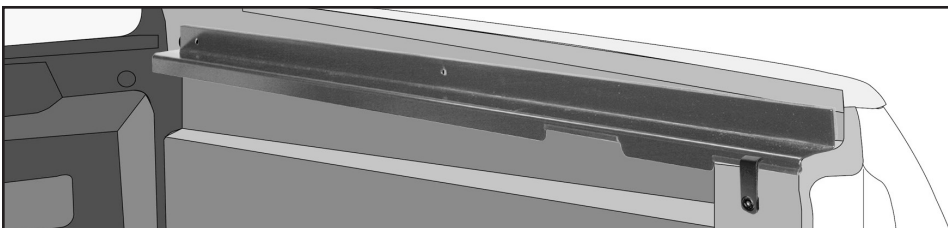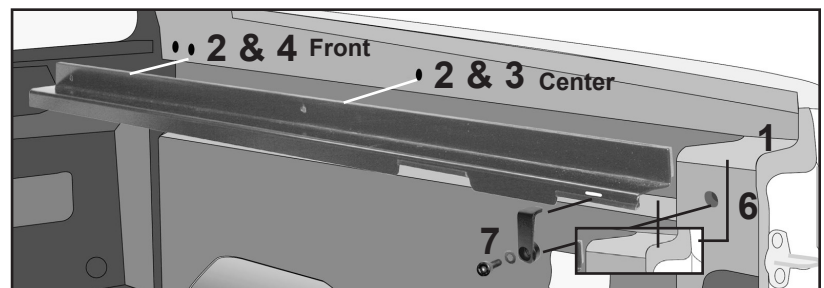

**C. Tonneau Cover**  
positioning  
of the front  
clamp and  
safety strap.

Patent No's.

7,823,957 / 8,146,982 / 8,256,824



www.ruggedliner.com