


Rugged Ridge Cowl Light Bar Bracket, JL & JT

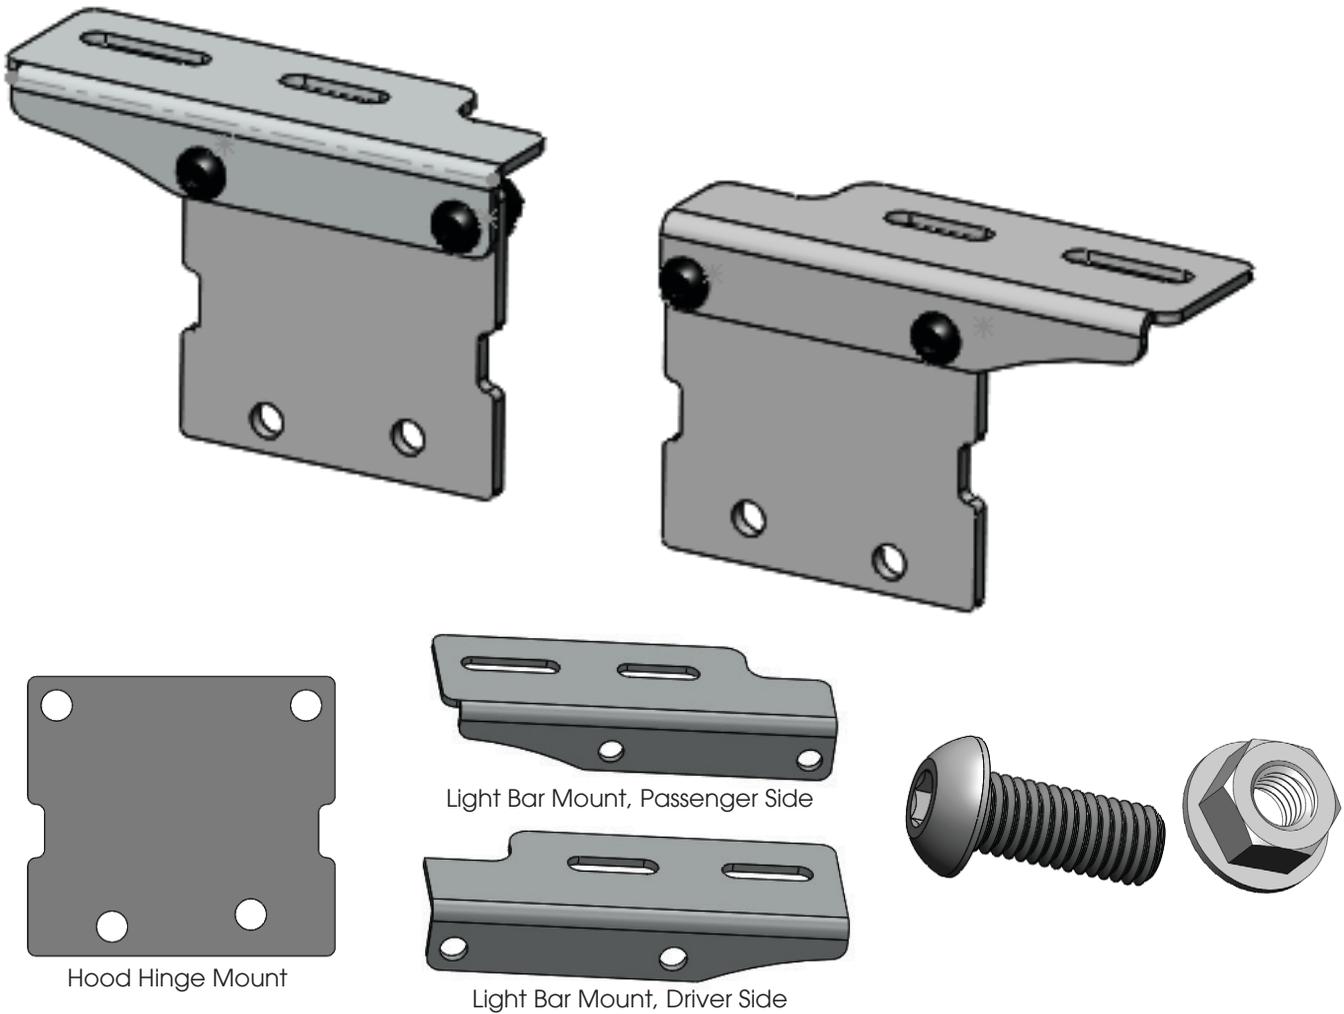

Components

- | | | | | | |
|----|---------------------------------------|---|----|---|---|
| 1. | Hood Hinge Mount..... | 2 | 4. | Allen Button Head Screw, M8 x 1.25, Black Teflon Zinc | 4 |
| 2. | Light Bar Mount, Passenger Side | 1 | 5. | Serrated Flange Nut, M8 x 1.25, Black Teflon Zinc | 4 |
| 3. | Light Bar Mount, Driver Side | 1 | | | |

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649

FOR WARRANTY OR TECH CONCERNS EMAIL: webmaster@omixsupport.com

ATTN: STATE OF CALIFORNIA CONSUMERS

 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Rugged Ridge Cowl Light Bar Bracket, JL & JT

1. Remove wiper arms. Start by removing dust caps. Remove Wiper nut with 15mm wrench. Lift on the wiper arm and remove wipers.



2. Remove cowl grille, pry on one corner to release a clip. Then continue to pull up and release the remaining clips.



3. Next install the hood hinge mount. Begin by removing the OE 13mm bolts from the hood hinge. You'll notice the bolt location is staggered. The lower bolt is on the outside. Make sure the hood hinge staggered holes aligns with the hinge holes. Reinstall the OE bolts and tighten.



Rugged Ridge Cowl Light Bar Bracket, JL & JT

4. Reinstall cowl grille, place the grille in place, it assists by placing the grille at an angle to pop the rear clips in place. Next align the front clips and assuring it clears the hood hinge mount. Now firmly press the cowl seating all the clips into the mounted position.



5. Attach the light bar mount. Depending on the size of the light bar you are mounting the mounts could point in or out. Place mount in front of the Hood hinge mount and tighten using the black Teflon coated M8 hardware provided.



6. Now install the light you selected and follow the manufacturer's instructions for proper installation. The photos here show the different positions of the light bar mount to mount different size light bars.

