


Four Configurations for Dash Multi-Mount System:

*Shown with Rugged Ridge Phone Mount (Part #13551.13)

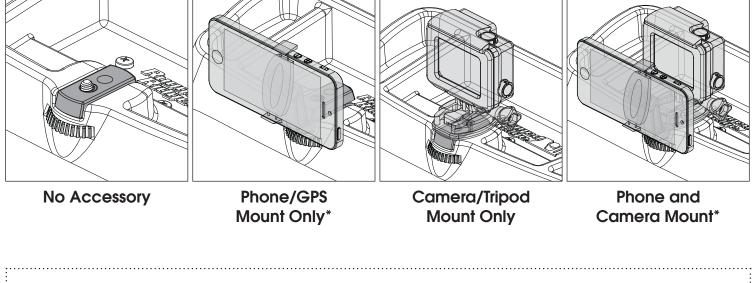

OMIX-ADA® TECHNICAL SUPPORT PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com

Copyright © 2018 Omix-Ada[®], Inc.

Page 2/3




460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Dash Multi-Mount System for Wrangler JL


Step 1

Remove interior rubber liner. May need to pry a corner to lift.

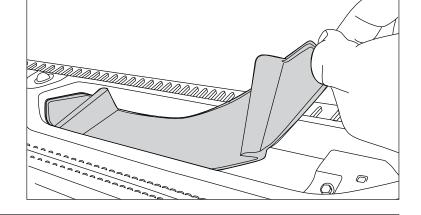



Remove two Phillips screws from inside compartment.

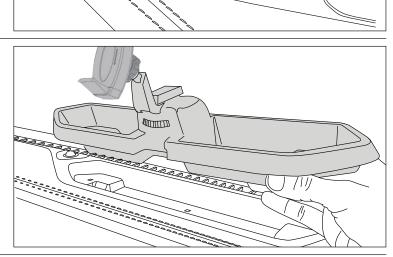


 \wedge

L'ÀR AR AR



Place Multi-Mount System into position. Assure area is completely clean before installing.

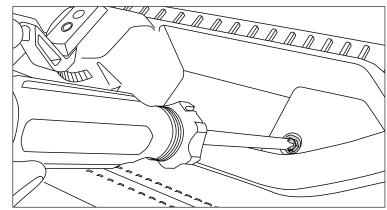


Copyright © 2018 Omix-Ada®, Inc.

Step 4


Reinstall Phillips screws removed from step 2 through multi-mount system into the dash.



1. Place Outer Ring over end of Ball Mount.

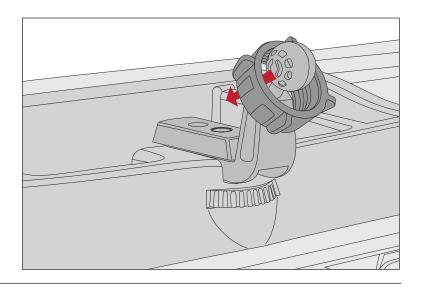

2. Press Phone Mount adapter piece into Ball Mount.

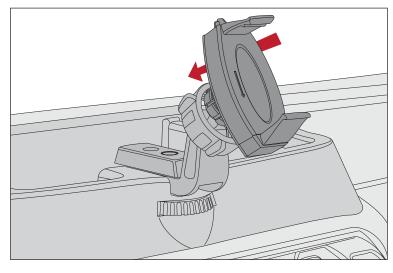

3. Pull Outer Ring over Phone Mount adapter and twist to secure.

