



OMIX-ADA, Inc.

13552.70

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 2 Door

Components:

- | | | | |
|--------------------|------|-----------------------|-----|
| 1. Top Net | (1) | 6. Long Straps | (2) |
| 2. Side Nets | (2) | 7. Footman Loops | (4) |
| 3. Roll Bar Straps | (12) | 8. Sheet Metal Screws | (8) |
| 4. Short Straps | (3) | 9. Plastic Spacers | (8) |
| 5. Medium Straps | (4) | | |



WARNING

Cargo Net System not designed to be a proper retraining device. Always wear seat belts. Omix-Ada is not responsible for any lost or damaged items.

Read all instructions thoroughly before installation.

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com



OMIX-ADA, Inc.



13552.70

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 2 Door

NOTE: Installation of Cargo Net System is easier when factory top has been completely removed.

1. Lower factory soft top, or remove factory hard top.
2. Install Roll Bar Straps around roll bars following guide below. Roll Bar Straps should go around top of roll bar, through plastic loops, and attach back onto themselves using the hook and loop fasteners.

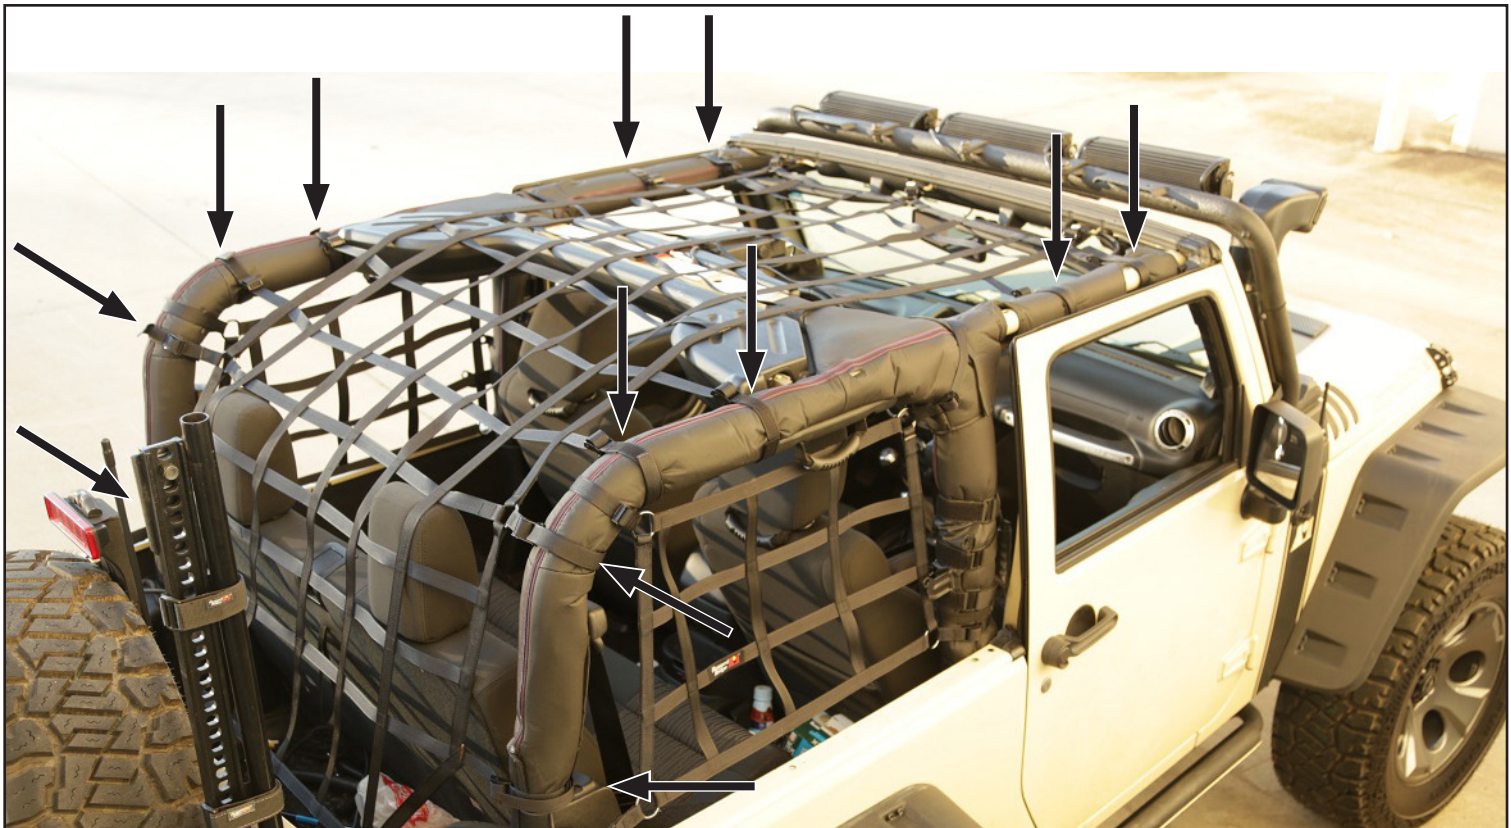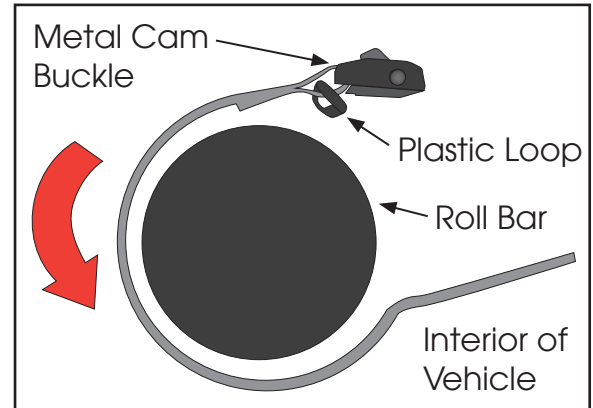



OMIX-ADA, Inc.


13552.70

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 2 Door

3. Install Top Net by inserting long portions of polyester straps through metal cam buckles on each Roll Bar Strap. Do not tighten. Try to keep net centered during installation.

NOTE: Top Net metal O-rings go towards front of vehicle.

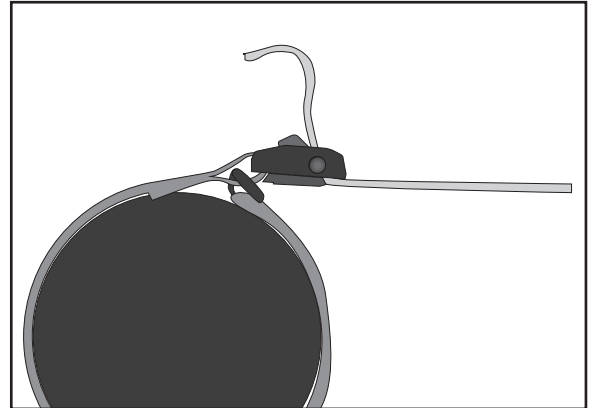


4. Install three metal O-Rings on front part of Top Net to factory footman loops using Small Straps.

5. Once all straps have been attached, go around vehicle and tighten each strap evenly, keeping the Top Net as centered as possible.



6. Install Side Nets by attaching metal O-rings to roll bar using two Medium Straps and one Long Strap per side.

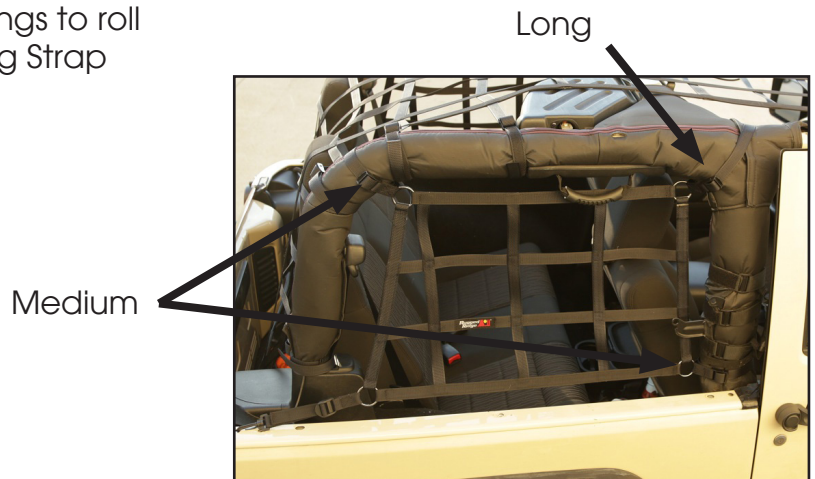



OMIX-ADA, Inc.



13552.70


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 2 Door

7. Attached rear plastic hook on Side Nets to rear-most hole in tub rail.



8. For 2007-2010 model years: lift carpet in cargo area in the rear-most corners. Use supplied footman loops and a marker to mark screw locations. Drill pilot holes at marked locations using a 9/64" drill bit. Attach supplied footman loop using Sheet Metal Screws placing plastic spacers between footman loop and sheet metal. Replace carpet, then cut carpet above footman loop using utility knife. Attach plastic hooks on rear part of Top Net to installed footman loops.

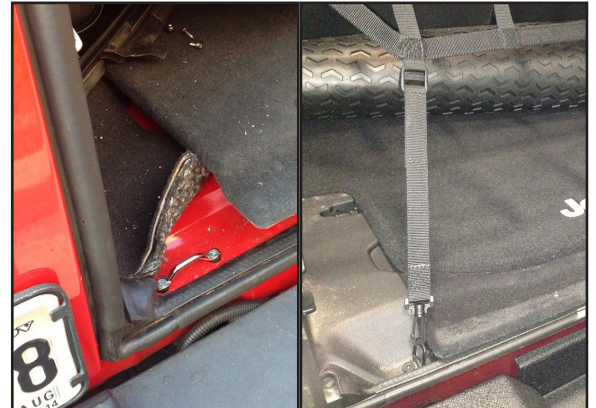

9. For 2011+ model years: attach plastic hooks on rear part of Top Net to factory footman loops located in rear of cargo area.

10. Tighten all straps evenly keeping Nets centered in their correct positions. Wrap loose polyester strap back through metal cam buckles and back around Roll Bar Straps attaching polyester strap to hook and loop fastener.

