



OMIX-ADA, Inc.

Part # 11651.79

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Cowl Guard, Body Armor; JK & JKU

1. Clean all dirt and debris from installation area.


**NOTE:** Temperature should be between 60°F and 110°F for proper tape adhesion.



2. Using the supplied alcohol wipe, clean area where part will be placed.



3. Align part on the vehicle and make sure tape tabs are folded out so they are accessible.

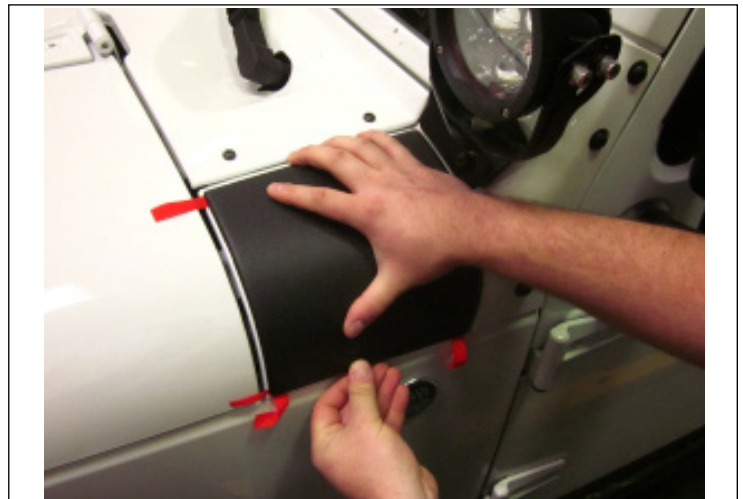




OMIX-ADA, Inc.

Part # 11651.79


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Cowl Guard, Body Armor; JK & JKU


4. Begin by pulling the top tape liner first.

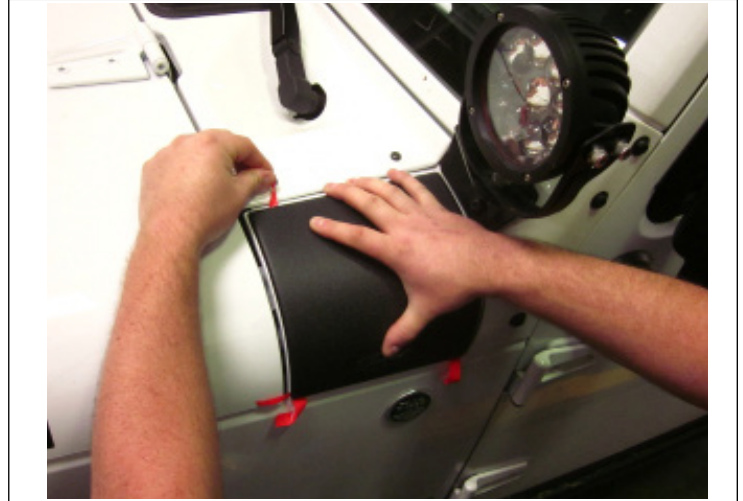

5. Pull liner of lower 1/4" tape strip. Press down on entire length of part applying 30 PSI to the taped areas.

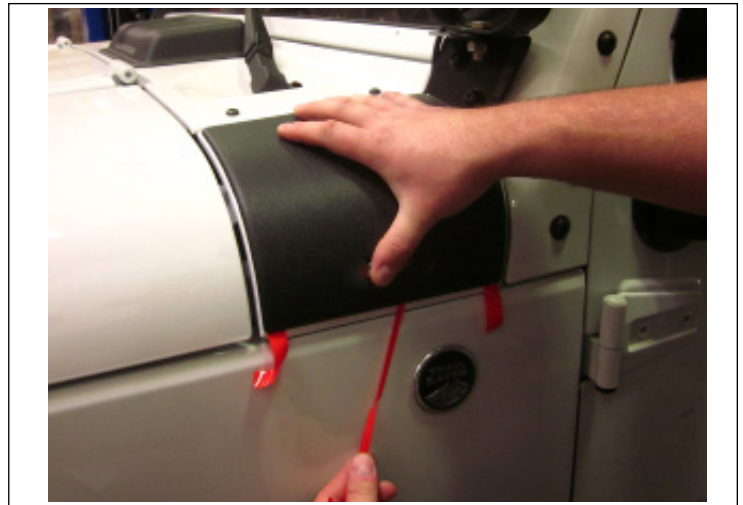

6. Pull liner located at the rear toward the door. Press down on entire length of part applying 30 PSI to the taped areas.

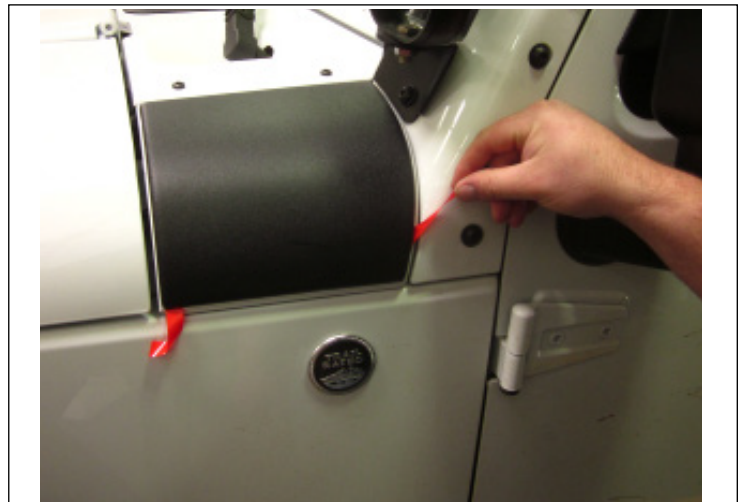

## Cowl Guard, Body Armor; JK & JKU

7. Pull liner located at the front toward the hood. Press down on entire length of part applying 30 PSI to the taped areas.



8. Apply 30 PSI for 30 seconds on each section of the part to ensure proper adhesion.

**NOTE:** The tape reaches maximum adhesive bond after 24 hours of contact.



9. Installation complete.

