

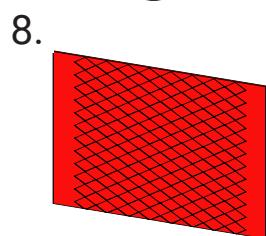
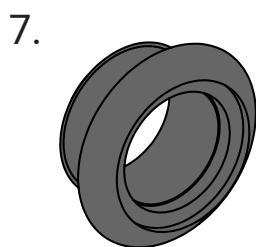
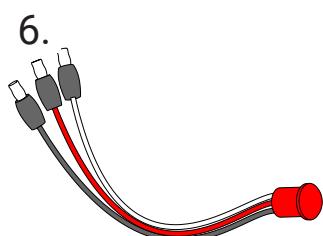
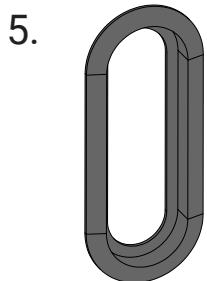
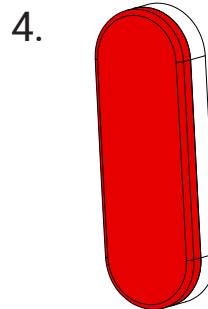
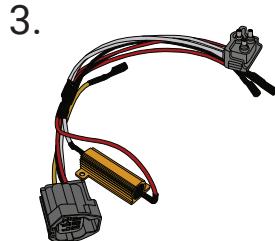
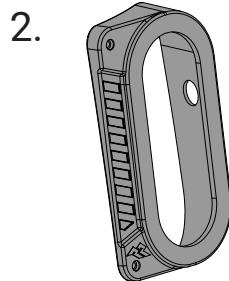


Part # 11652.03

Components and Hardware:

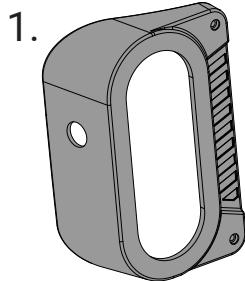

9.



Components and Hardware:


1. Left Tail Light Mount.....(1)
2. Right Tail Light Mount.....(1)
3. Wire Harness.....(2)
4. Oval Light.....(2)
5. Oval Light Grommet.....(2)
6. Round Light(2)
7. Round Light Grommet ..(2)
8. Reflector Tape(4)
9. No 8 Socket Head Screw.....(4)
10. Adhesive Promoter(1)

Tools for Installation:


- #2 Phillips Head Screw Driver
- 4mm Allen Wrench

Flush Light Tail Light, JK


1. Remove the hardware from the tail lights and disconnect from vehicle's wiring harness.

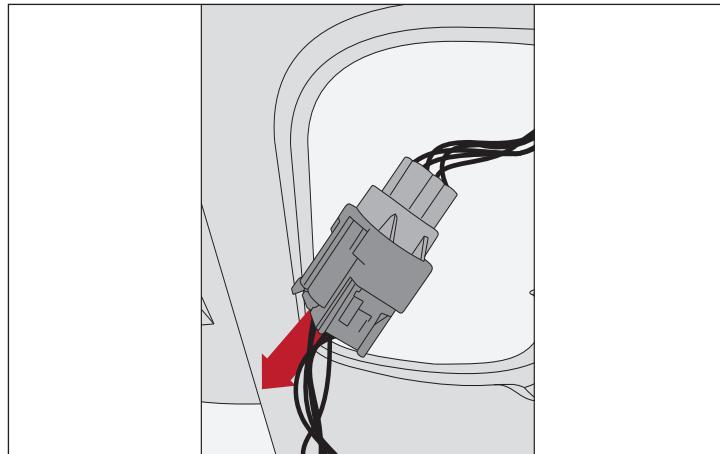

2. Affix the Round Light Grommet(#7) into the Tail Light Mount(#1&2). Press the Round Light(#6) into the Round Light Grommet(#7).

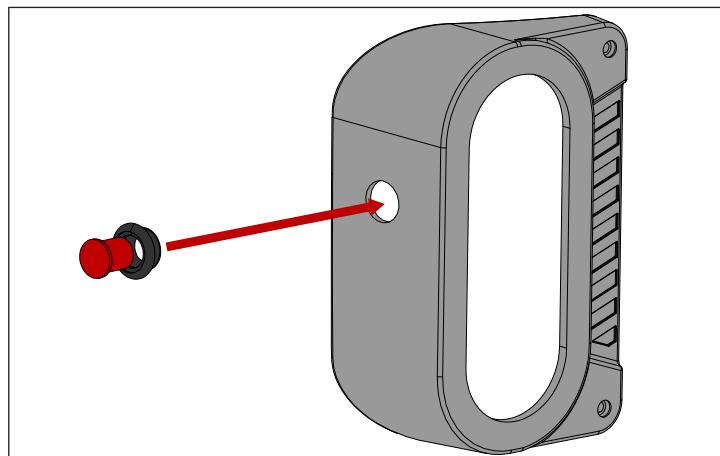


3. Affix the Oval Light Grommet(#5) into Tail Light Mount(#1&2). Press the Oval Light(#4) into the Oval Light Grommet(#5).

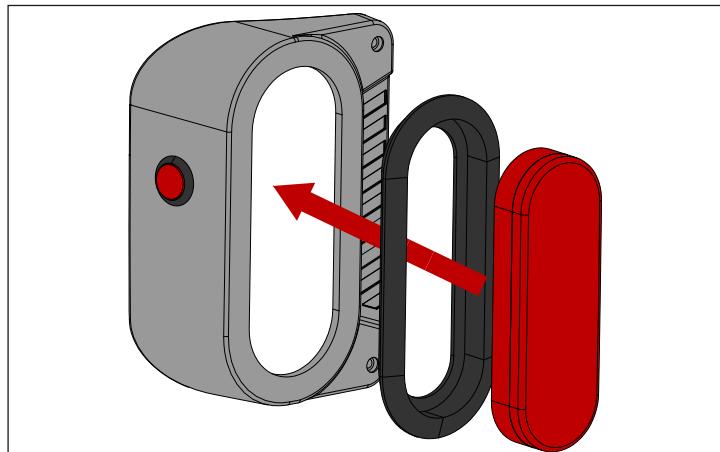


Flush Light Tail Light, JK

4. Connect the Oval(#4) and Round(#6) Lights to the supplied Wire Harness(#3). Match the wire colors of the light to that of the Wire Harness(#3).

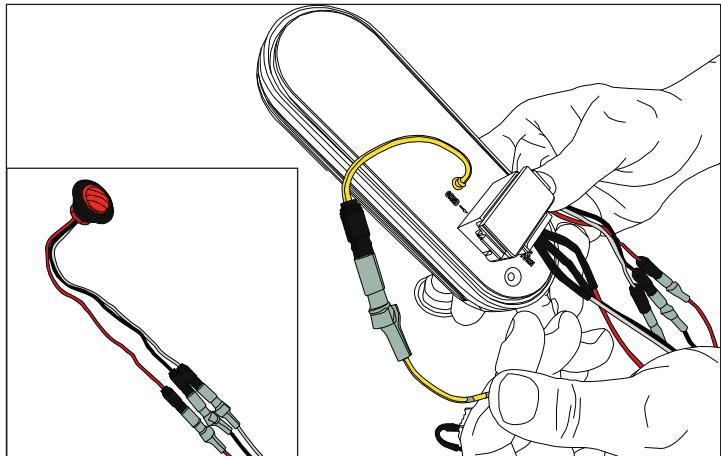

5. Connect the Wire Harness(#3) into the factory wire harness. Using the supplied No 8 Socket Head Screws(#9), attach the Flush Mount Light to the vehicle.

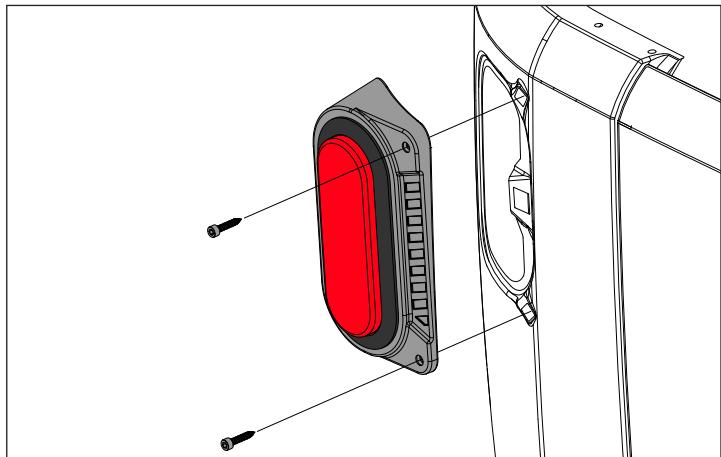

Note: The Reflective Tape(#8) needs to be visible from both the side and the rear of the vehicle.

6. To attach the Reflector Tape(#8), first clean the surface where you want to attach the tape using isopropyl alcohol. Then apply Adhesive Promoter(#10) to the surface and let it sit for 2 minutes. Remove protective film on the Reflective Tape(#8) and then attach tape to prepared surface.

