


Rear Corners, Body Armor; JL & JLU

1. Open rear hatch.



2. Beginning in the driver side rear corner, locate the small plastic door that is covering the tail light retaining bolt.

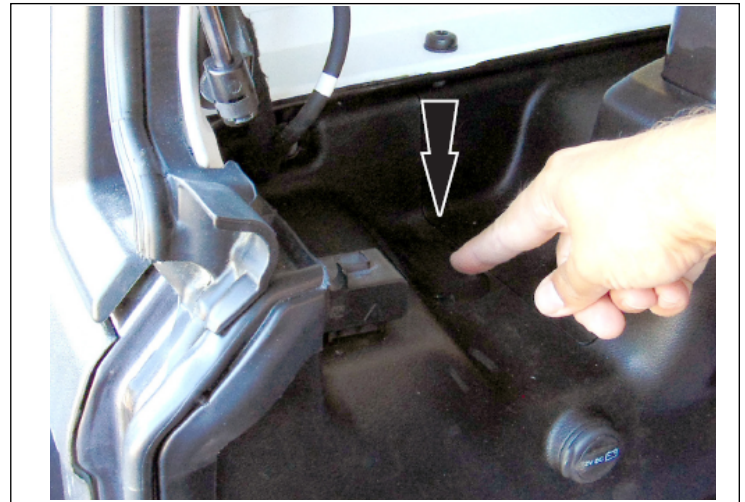

3. Use a screwdriver to pry open the cover for the tail light retaining bolt.





OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Rear Corners, Body Armor; JL & JLU

4. Tail light retaining bolt exposed.



5. Use a 10mm nutdriver to remove the tail light retaining bolt.



6. Carefully pull the tail light assembly away from the vehicle.



Rear Corners, Body Armor; JL & JLU

7. Carefully pull the red tail light harness release switch in the direction indicated.



8. Use a screwdriver to fully disconnect the wiring harness and set tail light assembly aside.



9. Test fit the Rear Corner in place. Take note of where the red tape liner aligns with the vehicle body.






OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Rear Corners, Body Armor; JL & JLU

10. Clean the surface where the tape will contact the vehicle body using the enclosed alcohol pads.

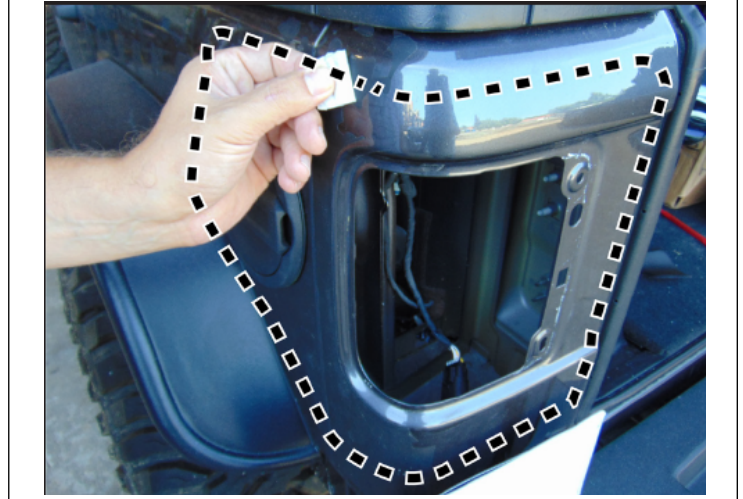

11. Peel back 2" of red tape liner on all flanges to expose adhesive and create a pull tab.



12. Position the Rear Corner in place and align with the previously cleaned surface. Ensure that the red tape pull tabs are all accessible. Apply pressure to exposed tape.





OMIX-ADA, Inc.


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Rear Corners, Body Armor; JL & JLU

13. With the Rear Corner in its final position, begin pulling tape tabs to remove remaining tape liners. Proceed in a clockwise patten, beginning with the upper left hand side as shown above.



14. Apply FIRM pressure to all flanges to ensure proper adhesion.

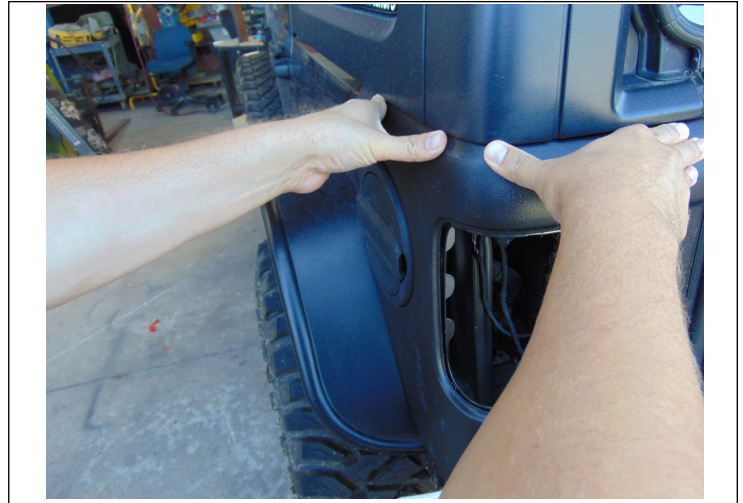

15. Reverse Steps 2 thru 8 to reinstall tail lamp assembly.





OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Rear Corners, Body Armor; JL & JLU

16. Repeat Steps 1 thru 15 to install passenger side Rear Corner.

