



INSTALLATION INSTRUCTIONS

2017 CAN-AM® MAVERICK X3® A-PILLAR MOUNTS



PRODUCT INCLUDES:
(2) A-Pillar Mount (LH and RH) #41632

* LIGHTS SOLD SEPARATELY

***THIS MOUNT FITS THE FOLLOWING LIGHTS:
(2) SR-M PRO®, (2) D-SS PRO®, (2) D-Series PRO®, (2) IGNITE®**

IMPORTANT

THANK YOU FOR PURCHASING RIGID PRODUCTS FOR YOUR VEHICLE.
Please read through all of these Instructions and tips before proceeding with the installation.
We do our best to provide a simple installation process for all applications however
a professional installation is always recommended.


**Always disconnect any power sources connected to your vehicle
before servicing fuses or electrical systems.**

STEP 1

Utilize pre-existing holes in
X3 rollcage.

See Figure 1

FIGURE 1

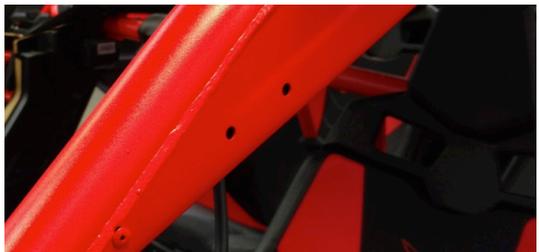

STEP 2

Install the 2 long bolts and washer from the outside, inwards.

See Figure 2

FIGURE 2



STEP 3

Install washers and nylon lock nuts from the inside to complete installation.

See Figures 3, 3.1

FIGURE 3



FIGURE 3.1



Wiring: Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

**Your installation is now complete.
Welcome to the Rigid Nation!**

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com

D-Series PRO, D-SS PRO, SR-M PRO, IGNITE, RIGID and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC,
a Delaware limited liability company d/b/a Rigid Industries.

11-12457-A