



## 26317 Slimline 2" Sidebar with Step Dodge Ram / Ram, 2009-

### Included:

- Step bar driver side
- Step bar passenger side
- (2x) 12 mm long bolt
- (4x) 12 mm short bolt
- (6x) 12 mm washer

Fig. 1


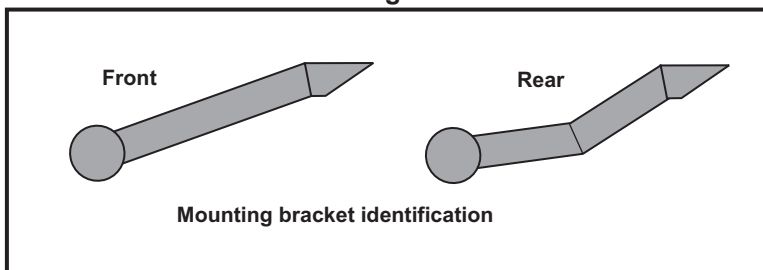


Fig. 2

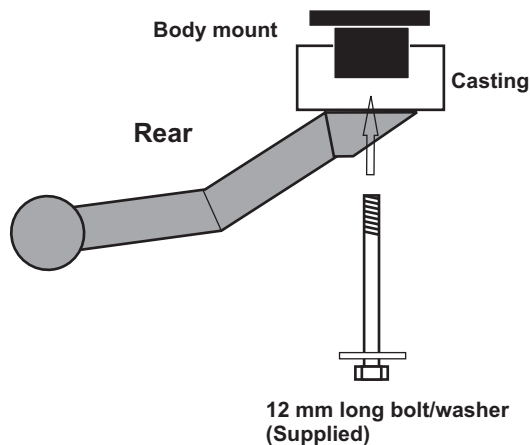

### Installation:

- 1) Review components and instructions. Set out the driver side and passenger side bars. (Refer to Fig 1 for identification.)
- 2) Remove factory mounting hardware for body mounts at the three points along one side of the vehicle. **CAUTION: Remove factory fasteners by hand not with power tools, power tools may damage the mounts.**
- 3) Have a helper hold the bar on one end. Place bar on side of cab and insert 12 mm short bolts into the 1st two body mounts. NOTE: Be sure to re-install the casting on the rear mount but flip it over so it slips onto the mount, use included 12mm long bolt in place of factory. Fig 2.
- 4) Tighten all fasteners and then repeat procedure for other side.

### Warranty Information

Rampage products, Inc. warrants to the original purchaser of any step product it manufactures, that the product will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.