



Front Euro Light Guard Set

PARTS LIST

- 2 x Headlight guard
- 6 x 3M foam tape strips
- 2 x Turn signal light guard
- 2 x Side reflector guard
- 4 x 1/2" Tec screw


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.

Headlight Instructions:


- 1) Prepare the headlights and headlight guards by wiping the appropriate surface where the tape will be applied with a glass cleaner. **NOTE:** It is also a good idea to clean the inside of the headlight opening to ensure dirt will not scratch the paint surface when installing the guards.
- 2) Apply 3 tape strips to the rear of each headlight guard anywhere around the perimeter except where the three mounting tabs are installed.
- 3) Remove the tape backing. Now slip the light guard through the headlight opening and snap onto the perimeter of the headlight bezel as shown below. Be sure the uprights of the guard are vertical when slipping them in place. Also be sure the mounting tabs are positioned so they will not interfere with the headlight mounts on the vehicle.

NOTE: The tabs are made to spring load against the sides of the headlight, it should be necessary to lightly spring them open to install on the headlight. If they are not tight against the headlight, *carefully* bend them in slightly to increase the spring effect.

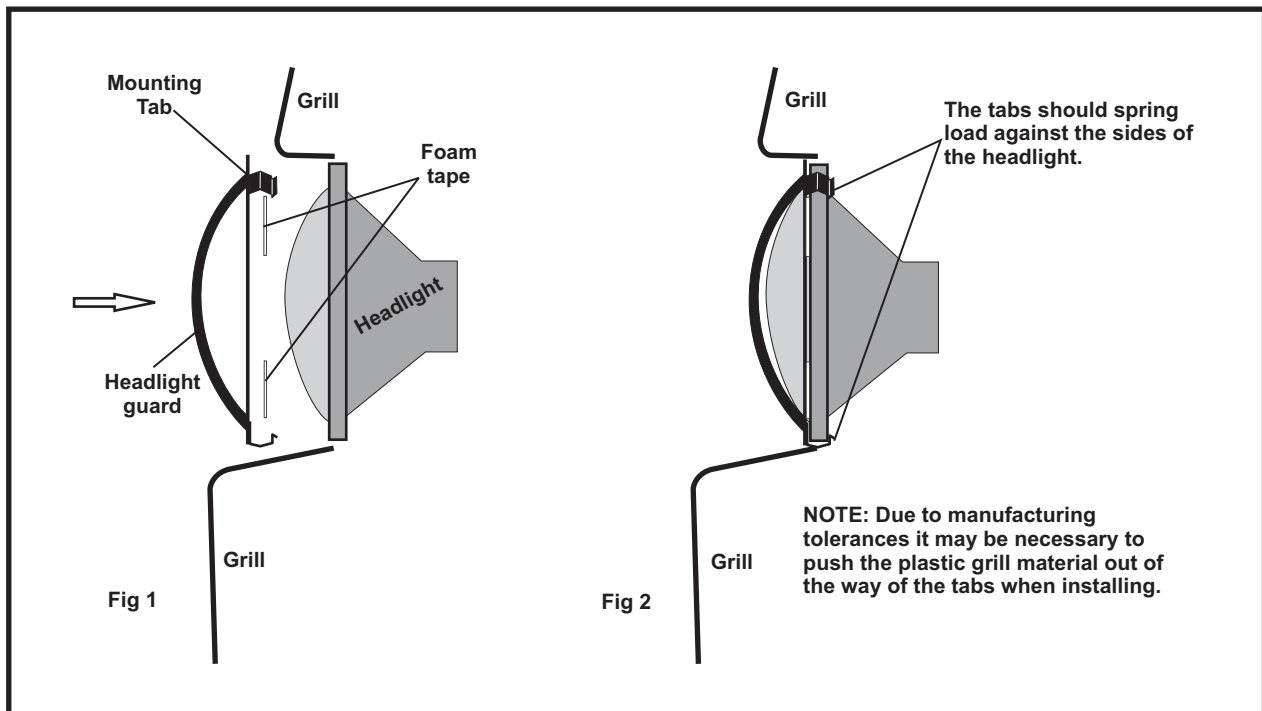


Turn signal installation

- 1) Twist and remove the bulb and harness from the rear of the turn signal. Unsnap the two tabs from the mount on the fender and remove the turn signal assembly.
- 2) Position the guard on the front of the lens so that the bars are vertical when the assembly is reinstalled, see Fig 2. The small tabs will line up with the ribs on the side of the light assembly and should clip around the edge of the assembly to hold the guard tightly. See Fig 3.
- 3) Re-install the complete assembly back into the fender and re-install the light.
- 4) Repeat for other side.

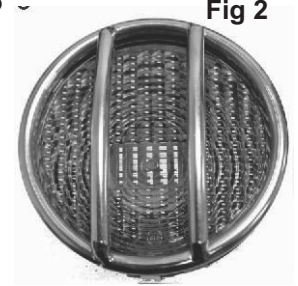

Reflector installation

- 1) Position the guard over the fender reflector with the bars vertical to match the other guards. Be sure to center it on the reflector, NOTE: it can be bent slightly to fit the contour of the fender as required.
- 2) Use the guard as a guide to install the 1/2" Tec screws into the fender.
- 3) Repeat for other side.

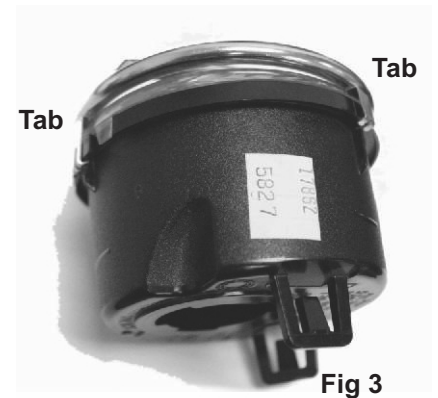

For Technical Support, please call 800-328-2409

This product is guaranteed to be free of defects in materials and workmanship for a period of 12 months

Rampage Products, Buford, GA
Made In Taiwan
Page 2 of 2

SC 04-12